

**NC-EDM  
SYSTEMS**

**J**  
**Series**

**(2nd version)**

**MACHINE AND  
POWER SUPPLY**

**CONTENTS**

|   |             |
|---|-------------|
| <b>1. SPECIFICATIONS</b>                | <b>1-1</b>  |
| <b>1.1 Machine Power</b>                | <b>1-1</b>  |
| <b>1.2 Auxiliaiy Equipment</b>          | <b>1-2</b>  |
| <b>1.3 Special Specifications</b>       | <b>1-4</b>  |
| <b>1.4 C7 Controller</b>                | <b>1-23</b> |
| <b>1.5 Power Supply Unit</b>            | <b>1-29</b> |
| <b>2. INSTALLATION</b>                  | <b>2-1</b>  |
| <b>2.1 Environmental Conditions</b>     | <b>2-1</b>  |
| <b>2.2 Power Supply</b>                 | <b>2-1</b>  |
| <b>2.3 Installation</b>                 | <b>2-1</b>  |
| <b>2.4 Disk System Loading</b>          | <b>2-5</b>  |
| <b>2.5 Parameter Settings</b>           | <b>2-11</b> |
| <b>3. MACHINE UNIT</b>                  | <b>3-1</b>  |
| <b>3.1 Functions and Names of Parts</b> | <b>3-1</b>  |
| <b>3.2 Construction and Operation</b>   | <b>3-4</b>  |
| <b>3.3 Dimensions</b>                   | <b>3-11</b> |
| <b>3.4 Automatic Fire Extinguisher</b>  | <b>3-13</b> |
| <b>3.5 Maintenance and Inspection</b>   | <b>3-17</b> |

# J Series

---

|      |   |      |
|------|---|------|
| 4.   | <b>POWER SUPPLY</b>                                       | 4-1  |
| 4.1  | <b>Basic Configuration of the G Power Supply</b>          | 4-1  |
| 4.2  | <b>GAP CONTROL CIRCUIT</b>                                | 4-2  |
| 4.3  | <b>SC Circuit</b>   | 4-4  |
| 4.4  | <b>GM/SF Circuit</b>                                      | 4-6  |
| 4.5  | <b>OP-3K (Optimum control circuit) Specifications</b>     | 4-7  |
| 4.6  | <b>Graphite Machining Adaptor (option) Specifications</b> | 4-8  |
| 4.7  | <b>Automatic Machining Condition Selector Function</b>    | 4-9  |
| 4.8  | <b>Precautions for Use of the Stone Level Block</b>       | 4-10 |
| 4.9  | <b>Maintenance and Inspection</b>                         | 4-12 |
| 5.   | <b>MAINTENANCE</b>  | 5-1  |
| 5.1  | <b>General</b>  | 5-1  |
| 5.2  | <b>NC System Configuration</b>                            | 5-2  |
| 5.3  | <b>Troubleshooting</b>                                    | 5-14 |
| 5.4  | <b>Malfunction Diagnosis and Correction</b>               | 5-17 |
| 5.5  | <b>Troubleshooting</b>                                    | 5-45 |
| 5.6  | <b>CRT 8DSP40</b>   | 5-61 |
| 5.7  | <b>Power Supply Unit Functions and Operation</b>          | 5-65 |
| 5.8  | <b>PM11A Charger Functions and Operation</b>              | 5-69 |
| 5.9  | <b>Transistor Amplifier TRAS</b>                          | 5-71 |
| 5.10 | <b>Alarm Messages</b>                                     | 5-85 |