

MITSUBISHI CNC MELDAS 50D/50M SERIES

OPERATION MANUAL

Contents

I. OPERATION SECTION

1. Setting and Display Unit Operation	I-1
1.1 Appearance of 9-inch CRT Setting and Display Unit	I-1
1.2 Functions of Display Areas	I-2
1.3 Screen Transition Diagram	I-4
1.3.1 Screen Transition when Power Is Turned On	I-4
1.3.2 Screen Transition Diagram	I-5
1.4 Screen Selection Procedure	I-7
1.5 Data Setting Method	I-10
2. Monitor	I-14
2.1 POSITION	I-15
2.1.1 Total Clear of CRT Screen	I-16
2.1.2 Position Display Counter Zero and Origin Zero	I-16
2.1.3 Manual Numerical Value Command (S, T, M)	I-17
2.1.4 Displaying Automatic Operation Program	I-20
2.2 COORDINATE	I-21
2.3 COMMAND	I-23
2.3.1 Execution Program Monitor	I-23
2.3.2 Execution Modal Monitor	I-24
2.3.3 Total Integrating Time Display	I-25
2.4 PROGRAM SEARCH	I-27
2.4.1 Memory Search	I-28
2.4.2 Tape Search	I-29
2.5 PLC SWITCH	I-31
2.5.1 PLC Switch On and Off Operation	I-31
2.6 COMMON VARIABLE	I-32
2.6.1 Common Variable Display	I-33
2.6.2 Common Variable Setting	I-34
2.6.3 Common Variable Data Deleting	I-34
2.7 LOCAL VARIABLE	I-35
2.7.1 Local Variable Data Display	I-36
3. Tool Offset	I-38
3.1 Tool Offset	I-39
3.1.1 Tool Offset Data Setting	I-40
3.1.2 Tool Offset Data Clear	I-40

3.1.3	Tool Offset Data Setting Modes (Absolute and Incremental)	I-40
3.1.4	Manual Tool Length Measurement	I-42
3.1.5	Manual Numeric Command Operation on the TOOL OFFSET Screen (M, T)	I-45
3.2	Tool Registration	I-46
3.2.1	Function Outline	I-46
3.2.2	Tool Registration in Magazine Pot	I-46
3.2.3	Tool Registration in HEAD, NEXT, and SEARCH	I-47
3.2.4	Tool Registration Data Clear	I-48
3.2.5	Manual Numeric Command Operation on the TOOL REGISTRATION Screen (M, T)	I-48
3.3	Tool Life	I-49
3.3.1	Function Outline	I-49
3.3.2	TOOL LIFE Screen Data Display	I-50
3.3.3	TOOL LIFE Data Display and Setting (TOOL LIFE Data Screen Page 2)	I-54
3.3.4	Clear of ALL TOOL LIFE Data (HEAD, NEXT, GROUP LIST Screen Page 1)	I-55
4.	Parameters	I-56
4.1	Work Coordinate	I-57
4.1.1	Setting Work Coordinate System Offset Data	I-58
4.1.2	Setting External Work Coordinate System Offset Data	I-58
4.1.3	Displaying Machine Position Data	I-58
4.2	Machining Parameters	I-59
4.2.1	PROCESS PARAMER	I-59
4.2.2	Control Parameters	I-61
4.2.3	Axis Parameters	I-62
4.2.4	Barrier Data	I-63
4.3	I/O Parameters	I-64
4.3.1	I/O BASE PARAM	I-64
4.3.2	I/O DEVICE PARAM	I-65
4.4	Setup Parameters	I-67
5.	Program	I-68
5.1	Function Outline	I-69
5.2	Menu Function	I-70
5.2.1	MDI Screen Menu Function	I-70
5.2.2	EDIT Screen Menu Function	I-73

5.3	Program Edit Operation	I-75
5.3.1	Data Display Update (One Screen Scroll)	I-75
5.3.2	Data Display Update (One Line Scroll)	I-76
5.3.3	Data Change	I-77
5.3.4	Data Insertion	I-78
5.3.5	Deletion of One Character	I-79
5.3.6	Deletion of One Block	I-80
5.3.7	Deletion of Data on One Screen	I-81
5.4	MDI Screen Extension Operation	I-82
5.4.1	MDI Data Registration in Memory	I-82
5.5	Edit Screen Extension Operation	I-83
5.5.1	Edit Data Call	I-83
5.5.2	New Program Registration and Preparation	I-87
5.6	PLAYBACK	I-88
5.6.1	Playback Operation	I-89
5.6.2	Edit Operation	I-94
5.6.3	Limitations	I-95
6.	Data In/Out	I-96
6.1	DATA INPUT	I-97
6.1.1	Change of Input and Comparison	I-98
6.1.2	Machining Program Input	I-99
6.1.3	Inputting Tool Offset Data	I-101
6.1.4	Inputting Parameter Data	I-102
6.1.5	Inputting Common Variables	I-103
6.1.6	Inputting History Data	I-104
6.2	DATA OUTPUT	I-105
6.2.1	Machining Program Output	I-108
6.2.2	Outputting Tool Offset Data	I-111
6.2.3	Outputting Parameter Data	I-112
6.2.4	Outputting Common Variable Data	I-115
6.2.5	Outputting History Data	I-116
6.3	PROGRAM ERASE	I-117
6.4	PROGRAM COPY	I-121
6.4.1	Machining Program Copy	I-121
6.4.2	Machining Program Condense	I-122
6.4.3	Machining Program Merge	I-123
6.4.4	Changing the Machining Program Number	I-124
6.5	PROGRAM FILE	I-125

6.6	RS-232C I/O Device Connection	I-126
6.6.1	Connection of Tape Reader, Tape Puncher, Printer, FLD	I-126
6.7	Data Protection	I-127
6.7.1	Data Protection Key	I-127
6.7.2	Edit Lock B, C	I-129
7.	Diagnosis	I-131
7.1	ALARM MESSAGE	I-132
7.1.1	Tracing of Alarm and Stop Codes	I-132
7.2	SERVO MONITOR	I-134
7.2.1	Servo Monitor	I-134
7.2.2	Servo Monitor (2)	I-135
7.2.3	Servo Diagnosis	I-136
7.2.4	Servo Diagnosis (2)	I-137
7.2.5	PW Diagnosis	I-138
7.3	SPINDLE MONITOR	I-139
7.4	PLC Interface Diagnosis	I-143
7.4.1	PLC-I/F Setting and Display	I-143
7.4.2	PLC Device Data Display	I-145
7.4.3	PLC Interface Signal Forcible Definition (Single-shot Type)	I-146
7.4.4	PLC Interface Signal Forcible Definition (Modal Type)	I-147
7.4.5	Diagnosis Executed When an Emergency Stop Status Occurs	I-148
7.5	Absolute Position Monitor	I-149
7.5.1	ABS Servo Monitor	I-149
7.5.2	Absolute Position Initialization	I-150
7.6	Adjustment	I-152
7.6.1	Adjustment Preparation	I-152
7.6.2	Automatic Analog Output Adjustment	I-152
7.6.3	Adjustment Procedure	I-153
7.6.4	Parameter Input/Output	I-154
7.7	OPERATION HISTORY	I-155
7.8	Configuration	I-156
7.8.1	S/W MODULE TREE	I-156
7.8.2	H/W MONITOR	I-156
8.	Ladder Circuit Monitor [For the PLC Built-in Specification]	I-157
8.1	Parameter Setting	I-157

9. Other Information on Running and Operation	I-158
9.1 On-conditions of Stored Stroke Limit	I-158
9.2 Deceleration Check	I-159
9.2.1 Functions	I-159
9.2.2 Deceleration Check Method	I-159
9.3 Absolute Position Detection System	I-161
9.3.1 Outline	I-161
9.3.2 Coordinate System of Absolute Position System	I-161
9.3.3 Starting up Absolute Position Detection System	I-162

II. MACHINE OPERATION MANUAL

1. Operation State	II-2
1.1 Operation State Transition Diagram	II-2
1.2 Power off	II-3
1.3 Run Not Ready	II-3
1.4 Ready	II-3
1.4.1 Reset	II-3
1.4.2 Automatic Operation Start	II-3
1.4.3 Automatic Operation Pause	II-3
1.4.4 Automatic Operation Stop	II-4
2. Indicator Lamps	II-5
2.1 Control Unit Ready	II-5
2.2 Automatic Operation Busy	II-5
2.3 Automatic Operation Start Busy	II-5
2.4 Automatic Operation Pause Busy	II-5
2.5 Return to Reference Position	II-5
2.6 Alarm	II-5
2.7 M00	II-5
2.8 M02/M30	II-5
3. Reset Switch and Emergency Stop Button	II-6
3.1 Reset Switch	II-6
3.2 Emergency Stop Button	II-6
4. Operation Mode	II-7
4.1 Mode Selection Switch	II-7

4.2	Jog Feed Mode	II-7
4.3	Rapid Traverse Feed Mode	II-8
4.4	Return to Reference Position Mode	II-9
4.5	Incremental Feed Mode	II-11
4.6	Handle Feed Mode	II-12
4.7	Memory Mode	II-13
4.8	MDI Operation Mode	II-14
5.	Operation Panel Switches in Operation Mode	II-15
5.1	Rapid Traverse Override	II-15
5.2	Cutting Feed Override	II-15
5.3	Manual Feedrate	II-15
5.4	Handle/Incremental Feed Magnification Factor	II-16
5.5	Handle Feed Axis Selection	II-16
5.6	Manual Pulse Generator	II-16
5.7	Cycle Start and Feed Hold	II-17
5.8	Feed Axis Selection	II-17
6.	Operation Panel Switch Functions	II-18
6.1	Z Axis Cancel	II-18
6.2	Miscellaneous Function Lock	II-18
6.3	Single Block	II-18
6.4	Dry Run	II-18
6.5	Manual Override	II-18
6.6	Override Cancel	II-19
6.7	Optional Stop	II-19
6.8	Optional Block Skip	II-19
6.9	Manual Absolute	II-20
6.10	Error Detect	II-21
6.11	Follow-up Function	II-21
6.12	Axis Removal	II-21
6.13	Manual/Automatic Synchronous Feed	II-21
6.14	Handle Interruption	II-22
6.14.1	Outline	II-22
6.14.2	Interruptible Conditions	II-22
6.14.3	Interruption Effective Axis	II-22
6.14.4	Axis Movement Speed Resulting from Interruption	II-23
6.14.5	Path Resulting after Handle Interruption	II-24
6.14.6	Handle Interruption in Nose Radius Compensation	II-26

6.14.7 Interrupt Amount Reset	II-28
6.14.8 Operation Sequence	II-28

III. SETUP

1. Connection of System and Each Unit	III-1
1.1 System Diagram	III-1
2. Start up and Adjustment Procedure	III-3
2.1 Confirmation of Connections	III-3
2.2 Setting of Various Switches	III-3
2.3 Turning Power on, Memory Initialization and Parameter Settings	III-4
3. Reference Point Return Adjustment	III-6
3.1 Reference Point Return Operation	III-6
3.2 Setting the Grid Spacing	III-7
3.3 Setting the Grid Mask	III-8
3.3.1 Setting	III-8
3.3.2 Measuring the Grid Mask Quantity	III-9
3.4 Setting the Reference Point Shift Distance	III-10
3.5 Setting the Creep Speed for Return to Reference Point	III-10
4. Daily Maintenance	III-12
4.1 Checking the External View	III-12
4.2 Checking the Inside of the Control Unit	III-12
5. Fault Diagnosis and Action	III-13
5.1 Checking the Fault Occurrence Status	III-13
5.2 Fault Examples	III-14
6. Maintenance Functions	III-15
6.1 Data Input/Output Function	III-15
6.1.1 Data Format	III-16
6.1.2 Data Output	III-19
6.1.3 Data Input and Compare	III-23

IV. APPENDIXES

Appendix 1 Setup Parameters	IV-1
1.1 Base Specifications Parameters	IV-1
1.2 Axis Specifications Parameters	IV-13
1.3 Servo Parameters	IV-18
1.3.1 Servo Parameters for SVJ	IV-18
1.3.2 Servo Parameters for V1/V2	IV-24
1.4 Spindle Parameters	IV-47
1.4.1 Spindle Parameters for SPJ	IV-47
1.4.2 Spindle Parameters for SPJ	IV-58
1.5 Machine Error Compensation	IV-71
1.5.1 Function Outline	IV-71
1.5.2 Setting Compensation Data	IV-74
1.5.3 Example in Using a Linear Axis as the Base Axis	IV-75
1.5.4 Example in Using a Rotation Axis as the Base Axis	IV-77
1.6 PLC Parameters	IV-78
1.7 Macro Parameters	IV-80
1.8 Position Switch	IV-81
1.8.1 Outline of Function	IV-81
1.8.2 Canceling the Position Switch	IV-81
Appendix 2 List of Function Codes	IV-82
Appendix 3 List of Command Values and Setting Ranges	IV-83
Appendix 4 Data Retained and Signals Output when NC Stops	IV-84
Appendix 5 Circular Cutting Radius Error	IV-87
Appendix 6 Registering/Editing the Fixed Cycle Program	IV-88
6.1 Fixed Cycle Operation Parameters	IV-88
6.2 Inputting the Fixed-cycle Program	IV-88
6.3 Outputting the Fixed-cycle Program	IV-88
6.4 Erasing the Fixed-cycle Program	IV-88
6.5 Standard Fixed Cycle Subprogram	IV-89

Appendix 7 RS-232C I/O Device Parameter Setting Examples and Cable Connection	IV-94
Appendix 8 Operation Messages on CRT Setting Display Unit	IV-95
Appendix 9 List of Alarms	IV-104
9.1 Operation Alarms	IV-104
9.2 Stop Codes	IV-107
9.3 Servo Alarms	IV-111
9.4 Spindle Alarms	IV-116
9.5 MCP Alarm	IV-120
9.6 System Alarms	IV-122
9.7 Absolute Position Detection System Alarms	IV-124
9.8 Messages during Emergency Stop	IV-127
Appendix 10 Alarm/Status Display Function Using 7-Segment LED ...	IV-128
Appendix 11 Key Correspondence to MELSEC Peripheral Devices ...	IV-134
Appendix 12 List of Parameters	IV-135