GRINDING MACHINE MODEL - 450AV

INSTRUCTION MANUAL

Okamoto

CONTENTS

1 3 4 5 5 7 9
4 5 7 9
5 7 9
5 7 9
7 9 11
7 9 11
11
11
12
14
13
14
15
15
15
17
17
25
25
27
28
28
28
31
31
31
31
32

	7.5	Installation of wheel flange assembly on wheel spindle		33
	7.6	Removal of Wheel Flange Assembly from Wheel Spindle		33
	7.7	Trial run when wheel is installed		33
	7.8	Dressing		34
	7.9	Wheel Balancing		35
8.	AUTON	MATION CYCLE GRINDING		38
	8.1	Kinds of Automation Cycles		38
	8.2	Traverse Grinding (Intermittent Cross Grinding)		38
	8.3	Traverse Grinding (Continuous Feed)		42
	8.4	Plunge Grinding		43
9.		UTIONS IN OPERATING AND HANDLING GRINDING		45
	MACHI			
	9.1	Brake-in operation when high accuracy is required		45
	9.2	Precautions at the end of work		45
	9.3	Table speed limit for heavy work piece		45
	9.4	Saddle clamp		45
	9.5	Precautions when a new magnetic chuck is installed		45
	9.6	Coolant		45
	9.7	Crossfeed Clutch		46
10	. MAINT	ENANCE		46
	10.1	Hydraulic system		46
	10.2	Wheel spindle unit		48
11	. TROUE	BLESHOOTING		48
	11.1	System Configuration		51
	11.2	Servo-amplifier specifications and Externals		52
	11.3	IOC (Diagnostic Screen: DGN)		55
	11.4	Alarmed causes-Remedy		63
	11.5	To Replace the FX-CPU Board		66
12	. GRIND	ING TROUBLES AND CORRECTIVE ACTIONS		69
	12.1	Troubleshooting of rough surface and chattering marks	,	69
	12.2	Troubleshooting of grinding burn and crack	1	70
	12.3	Troubleshooting of wheel loading	40	71

12.4	Troubleshooting of wheel shedding	71
12.5	Troubleshooting of wheel dulling	71
13. REFE	RENCE DRAWING AND TABLES	72
13.1	Diamond tool	72
13.2	Wheel flange assembly	73
13.3	Wheel flange components	74
13.4	Balance arbor	80
13.5	Wheel selection standard for general metallic materials	81
14. ELEC	TRICAL DRAWINGS	82
14.1	Wiring diagram	82
14.2	Supplement	103
	, , , , , , , , , , , , , , , , , , ,	