

MITSUBISHI TRANSISTORIZED INVERTER FR-A500

HIGH FUNCTION
&
LOW ACOUSTIC NOISE

FR-A520-0.4K to 55K(-NA)
FR-A540-0.4K to 55K(-NA)(-EC)

- INSTRUCTION MANUAL -



CONTENTS

1 OUTLINE 1

1.1 Pre-Operation Information	1
1.1.1 Precautions for operation.....	1
1.2 Basic Configuration.....	2
1.2.1 Basic configuration	2
1.3 Structure	3
1.3.1 Appearance and structure	3
1.3.2 Removal and reinstallation of the front cover.....	4
1.3.3 Removal and reinstallation of the operation panel.....	6

2 INSTALLATION AND WIRING 7

2.1 Installation.....	7
2.1.1 Instructions for installation	7
2.2 Wiring	9
2.2.1 Terminal connection diagram	9
2.2.2 Wiring of the main circuit	12
2.2.3 Wiring of the control circuit	18
2.2.4 Connection to the PU connector.....	22
2.2.5 Connection of stand-alone option units	24
2.2.6 Design information.....	28
2.3 Other wiring	29
2.3.1 Power harmonics	29
2.3.2 Japanese harmonic suppression guidelines.....	30
2.3.3 Inverter-generated noises and reduction techniques.....	33
2.3.4 Leakage currents and countermeasures	37
2.3.5 Inverter-driven 400V class motor.....	38
2.3.6 Peripheral devices	39
2.3.7 Instructions for compliance with the UL and CSA standards	41
2.3.8 Instructions for compliance with the European standards	42
2.3.9 Earthing (EC version).....	43

3 OPERATION 45

3.1 Pre-Operation Information	45
3.1.1 Devices and parts to be prepared for operation.....	45
3.1.2 Power on.....	47
3.1.3 Parameter check.....	47
3.2 Operation	53
3.2.1 Pre-operation checks.....	53
3.2.2 External operation mode (Operation using external input signals)	54
3.2.3 PU operation mode (Operation using the operation panel (FR-DU04)).....	55
3.2.4 Combined operation mode (Operation using the external input signals and PU).....	56

4 PARAMETER 57

4.1 Parameter List	57
4.2 Parameter Function Details	63
● Torque boost (Pr. 0, Pr. 46, Pr. 112)	63
● Output frequency range (Pr. 1, Pr. 2, Pr. 18)	64

● Base frequency, base frequency voltage (Pr. 3, Pr. 19, Pr. 47, Pr. 113).....	65
● Multi-speed operation (Pr. 4 to Pr. 6, Pr. 24 to Pr. 27, Pr. 232 to Pr. 239).....	66
● Acceleration/deceleration time (Pr. 7, Pr. 8, Pr. 20, Pr. 21, Pr. 44, Pr. 45, Pr. 110, Pr. 111).....	67
● Electronic overcurrent protection (Pr. 9).....	68
● DC dynamic brake (Pr. 10, Pr. 11, Pr. 12).....	69
● Starting frequency (Pr. 13)	70
● Load pattern selection (Pr. 14).....	70
● Jog operation (Pr. 15, Pr. 16).....	71
● MRS input selection (Pr. 17)	72
● Stall prevention (Pr. 22, Pr. 23, Pr. 66, Pr. 148, Pr. 149, Pr. 154).....	73
● Multi-speed input compensation (Pr. 28).....	74
● Acceleration/deceleration pattern (Pr. 29, Pr. 140 to Pr. 143).....	75
● Regenerative brake duty (Pr. 30, Pr. 70).....	76
● Frequency jump (Pr. 31 to Pr. 36)	77
● Speed display (Pr. 37, Pr. 144)	78
● Up-to-frequency sensitivity (Pr. 41)	79
● Output frequency detection (Pr. 42, Pr. 43, Pr. 50, Pr. 116)	79
● Second/third stall prevention (Pr. 48, Pr. 49, Pr. 114, Pr. 115)	80
● Monitor display/FM, AM terminal function selection (Pr. 52 to Pr. 54, Pr. 158).....	82
● Monitoring reference (Pr. 55, Pr. 56)	84
● Automatic restart after instantaneous power failure (Pr. 57, Pr. 58, Pr. 162 to Pr. 165).....	85
● Remote setting function selection (Pr. 59)	87
● Intelligent mode selection (Pr. 60).....	88
● Acceleration/deceleration reference current/lift mode starting frequency (Pr. 61 to Pr. 64),.....	90
● Retry function (Pr. 65, Pr. 67 to Pr. 69)	91
● Applied motor (Pr. 71)	93
● PWM carrier frequency (Pr. 72, Pr. 240)	94
● Voltage input (Pr. 73)	95
● Input filter time constant (Pr. 74)	96
● Reset selection/PU disconnection detection/PU stop selection (Pr. 75)	96
● Alarm code output selection (Pr. 76)	98
● Parameter write inhibit selection (Pr. 77)	99
● Reverse rotation prevention selection (Pr. 78).....	100
● Operation mode selection (Pr. 79)	101
● Motor capacity/number of motor poles/speed control gain (Pr. 80, Pr. 81, Pr. 89)	104
● Offline auto tuning function (Pr. 82 to Pr. 84, Pr. 90 to Pr. 94, Pr. 96)	105
● Online auto tuning selection (Pr. 95)	111
● V/F control frequency (voltage) (Pr. 100 to Pr. 109).....	113
● Computer link operation (Pr. 117 to Pr. 124).....	114
● PID control (Pr. 128 to Pr. 134)	124
● Commercial power supply-inverter switch-over function (Pr. 135 to Pr. 139).....	131
● Output current detection function (Pr. 150, Pr. 151).....	135
● Zero current detection (Pr. 152, Pr. 153).....	136
● RT signal activated condition selection (Pr. 155)	137
● Stall prevention function and current limit function (Pr. 156).....	137
● OL signal output timer (Pr. 157)	139
● User group selection (Pr. 160, Pr. 173 to Pr. 176)	140
● Watt-hour meter clear/actual operation hour meter clear (Pr. 170, Pr. 171)	141
● Input terminal function selection (Pr. 180 to Pr. 186)	141
● Output terminal function selection (Pr. 190 to Pr. 195)	144

● User initial value setting (Pr. 199)	146
● Programmed operation function (Pr. 200 to Pr. 231)	147
● Cooling fan operation selection (Pr. 244)	151
● Stop selection (Pr. 250)	152
● Power failure-time deceleration-to-stop function (Pr. 261 to Pr. 266)	154
● Stop-on-contact, load torque high-speed frequency selection (Pr. 270)	156
● High-speed frequency control (Pr. 271 to Pr. 274)	157
● Stop on contact (Pr. 275, Pr. 276)	161
● Brake sequence function (Pr. 278 to Pr. 285)	164
● Droop control (Pr. 286, Pr. 287)	168
● Meter (frequency meter) calibration (Pr. 900, Pr. 901)	169
● Frequency setting voltage (current) bias and gain (Pr. 902 to Pr. 905)	171
● Buzzer control (Pr. 990)	173

5 PROTECTIVE FUNCTIONS.....174

5.1 Errors (alarms)	174
5.1.1 Error (alarm) definitions	174
5.1.2 Correspondences between digital and actual characters	177
5.1.3 Alarm code output	178
5.1.4 Resetting the inverter	178
5.2 Troubleshooting	179
5.2.1 Checking the operation panel display at alarm stop	179
5.2.2 Faults and check points	180
5.3 Precautions for Maintenance and Inspection	182
5.3.1 Precautions for maintenance and inspection	182
5.3.2 Check items	182
5.3.3 Periodic inspection	182
5.3.4 Insulation resistance test using megger	183
5.3.5 Pressure test	183
5.3.6 Replacement of parts	186
5.3.7 Inverter replacement	187
5.3.8 Measurement of main circuit voltages, currents and power	188

6 SPECIFICATIONS.....190

6.1 Standard Specifications	190
6.1.1 Model specifications	190
6.1.2 Common specifications	192
6.1.3 Outline drawings	194

7 OPTIONS.....198

7.1 Option List	198
7.1.1 Stand-alone options	198
7.1.2 Inboard dedicated options	200

APPENDICES.....201

Appendix 1 Data Code List	201
Appendix 2 List of Parameters Classified by Purposes of Use	207
Appendix 3 Operating the Inverter Using a Single-Phase Power Supply	208