


Campro Precision Machinery Co., Ltd.

凱柏精密機械股份有限公司.

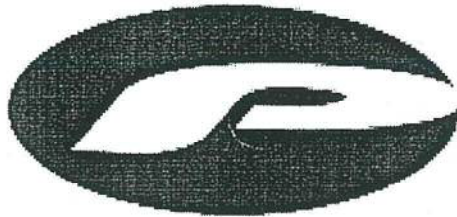

OPERATION MANUAL

LATHE

CPL SERIES

ADDRESS : NO.12, JINGKE 1ST RD., NANTUN, TAICHUNG 408, TAIWAN.

TEL : 886-4-23500501

FAX : 886-4-23500213

BK07-01TB-P02C

Index

Chapter1.Operation Instruction	(4pages)
1.1 Safety Instructions	1-1
1.2 Operation notices of CNC lathe	1-1
1.3 Relation of lathe's moving direction and coordinate axis	1-4
Chapter2. Power turn on/off	(3pages)
2.1 Special notices before turning on	2-1
2.2 Turn-on procedure	2-2
2.3 Turn-off procedure	2-3
2.4 Locking process of main power switch	2-4
Chapter3. Description of control panel	(25pages)
3.1 NC controlling panel	3-1
3.2 Operating panel	3-2
3.3 Software operating panel	3-23
3.4 Alarming indicator	3-25
Chapter4. Description of machine devices operation	(28pages)
4.1 Handwheel feeding	4-1
4.2 Return to Home point	4-2
4.3 Slow-feeding (Jog)	4-4
4.4 Fast-feeding (Rapid)	4-5
4.5 Manual tool-selection	4-6
4.6 Automatic tool-selection	4-7
4.7 Manual Spindle rotation	4-8
4.8 The eliminating procedure of overtravel	4-9
4.9 Coolant	4-11
4.10 Chuck	4-13
4.11 Quill on tailstock	4-15
4.12 Chip conveyor	4-16
4.13 Door interlock	4-20
4.14 Handwheel feeding -C axis (For MC type)	4-22
4.15 Return to home point -C axis (For MC type)	4-23
4.16 Slow feeding - C axis (For MC type)	4-24
4.17 Fast feeding (Rapid) - C axis (For MC type)	4-25



4.18	Manual power tool rotation (For MC type)	4-27
Chapter5. Description of program start		(6pages)
5.1	Program start by the Manual Data Input (MDI) mode	5-1
5.2	Program start by automatic mode	5-3
5.3	Restart procedure	5-5
Chapter6. Description of M, S, T code		(7pages)
6.1	M-code description	6-1
6.2	S-code description	6-7
6.3	T-code description	6-7
Chapter7. Operation procedure of special functions		(13pages)
7.1	Sensing out the cutting-tool's loading	7-1
7.2	Orientation the multiple points of spindle	7-3
7.3	Operation of tool tool measuring device (RENISHAW)	7-4
7.4	Programmable tailstock	7-11