

OPERATING MANUAL

for
**CINCINNATI MILACRON
HAWK TURNING CENTER
Model 150 with
ACRAMATIC® 2100E CNC CONTROL
Release 2.1**

PUBLICATION NO. 91203547

**CINCINNATI
MILACRON**

OPERATING MANUAL

for
CINCINNATI MILACRON
HAWK TURNING CENTER
Model 150 with
ACRAMATIC® 2100E CNC CONTROL
Release 2.1

PUBLICATION NO. 91203547

ACRAMATIC is a trademark of Vickers E.S.D., Inc.

IMPORTANT

Carefully read the instructions and safety precautions given in this manual. Do not attempt to program this machine until you have thoroughly read and understood the material contained in this manual and all other applicable manuals.

At the time of writing, the book was completely up-to-date. However, due to continual improvements in design, it is possible that descriptions contained herein may vary to a slight extent from the system delivered to you. This merely implies that the system has been improved to better fulfill your requirements. You are encouraged to contact the nearest Cincinnati Milacron representative for clarification.

Patents Notice

The machine and attachments and parts thereof illustrated and described in this book are manufactured under and protected by issued and pending British and Foreign Patents and copyright is reserved in any original design feature thereof and in the contents of this book and every part thereof.



We Build Productivity

Cincinnati Milacron Limited
P.O. Box 505, Kingsbury Road,
Birmingham, B24 0QU

© 1997 Cincinnati Milacron Marketing Company
Printed in England - EDITION 1 - August 1997

Table of Contents

Chapter 1	
Safety Precautions	1-1
Important	1-1
General Safety Instructions And Considerations	1-2
Personal Safety	1-2
Work Area Safety	1-2
Tool Safety	1-3
Lifting And Carrying Safety	1-3
Installation And Relocation Safety	1-4
Setup And Operation Safety	1-4
Maintenance Safety	1-5
Materials Used With This Product	1-6
LIFTING DEVICES	1-7
GENERAL	1-7
EYEBOLTS	1-7
HOIST RINGS	1-9
SPREADER BARS AND LIFTING BEAMS	1-10
CHAIN	1-10
CABLE SLINGS	1-12
SYNTHETIC MATERIAL SLINGS	1-13
P TYPE HOOKS	1-14
S HOOKS	1-14
U TYPE HOOKS	1-16
GENERAL SAFETY LIFTING INFORMATION	1-17
Printed Circuit Board Handling Instructions	1-18
General	1-18
Recommended Handling Procedure	1-18
Safety Features	1-19
Perimeter Guarding	1-19
Operator Sliding Door(s)	1-19
Feed Hold Push Button	1-20
Emergency Stop Push Button	1-20
Electrical Isolation Device (Main Disconnect Switch)	1-20
Machine Related Safety And Usage Notes	1-21
Axis Overtravel Condition	1-21
Cutting Fluid	1-21
Safe Operation Of Lathe Chucks	1-21
Work Holding Devices	1-21
General Operation	1-22
Lithium Batteries	1-23
Chapter 2	
System Information	2-1
Introduction	2-1
Guard Strength	2-2
Noise	2-3

Table of Contents

Fumes And Coolant Misting	2-4
Fire Hazard	2-4
Machine Location – See Caution	2-4
EMC Directive Requirements	2-4
NC Control	2-5
Machine Information	2-5
Axis Orientation	2-6
Hawk Specification	2-7
Machine And Range Drawings	2-9
Motor Rating	2-19
5500 rpm. Spindle	
Hawk 150 – Standard Speed Range	2-19
MACHINE ALIGNMENT AND PROGRAM POINTS	2-20
Machine Zero	2-20

Chapter 3

Control Introduction 3-1

Operator Station	3-2
Operator Station Assembly (OSA) Keypad	3-3
Machine On	3-3
Machine Off	3-4
Emergency Stop	3-4
Page And Position keys	3-4
Numeric Keys	3-4
Escape, Help, Control, Alternate	3-5
The Control Screen	3-6
Display Areas	3-6
How Menu Buttons Function	3-7
Production Menu Display	3-8
Current Menu Display	3-8
Status Bar	3-8
General Mode Button Bar	3-8
Machine	3-9
Edit	3-9
RAP (Resident Assistant Programmer)	3-11
SFP (Shop Floor Programming) – Optional	3-15
Tools	3-15
Multi-Setup	3-15
More (Additional Mode Selections)	3-16
Diagnostics	3-17
Service	3-18
System Configuration	3-19
File Manager	3-19
Mode Specific Button Bar	3-20
Back	3-20
Display	3-20
Home	3-20

Table of Contents

Touch Screen and Keyboards	3-21
Plotter Display	3-22
Help Information	3-23
Machine Mode	3-24
Display Groups buttons	3-24
Menus	3-24
Axis Displays	3-25
Current	3-25
To Go	3-25
4-View	3-25
Limits	3-25
Servo	3-25
Servo Setup	3-25
Program Debug	3-25
Offset Displays	3-26
Multi Setup Offsets	3-26
Prog. Coord Offsets	3-26
Machine Offsets	3-26
Taper Trim Offsets Display	3-26
Other Displays	3-27
Program Display	3-27
Message	3-27
System Registers	3-27
Variables Display	3-27
View Drawing Display	3-27
Plotter Display	3-27
Cycle Parameters	3-27
Program Parameters	3-27
Process Control Data Display	3-28
Tables – General	3-28
Tool Mode	3-29
Active Tool Set	3-30
Tool File	3-30
Tool Loading and Unloading	3-30
Tool Table Display Fields	3-31
Serial Identifiers	3-31
Tool Handling	3-31
Tool Geometry	3-31
Tool Setup and Usage	3-31
Tool History	3-32
Tool Sort By	3-32
Single	3-32
Tool Turret	3-33
Inch/Metric Selection	3-34
Program Management	3-35
Directory Services (Registry, Import, Export)	3-35
Machine Control	3-37

Table of Contents

Introduction	3-39	3-39
Handwheel	3-39	
Spindle Speed And Feedrate Override	3-39	
LCD Display	3-39	
Emergency Stop	3-39	
Single Block	3-40	
Parked	3-40	
Block Delete	3-40	
Optional Stop	3-41	
Auto Restart	3-41	
Rapid Override	3-41	
Dry Run	3-41	
Cool On / Off	3-41	
Cool Auto	3-42	
Spindle Stop	3-42	
Spindle Restart	3-42	
Spindle Jog – See Warning	3-42	
Tailstock Quill – Advance	3-43	
Tailstock Quill – Retract	3-43	
Tailstock Quill – Step Advance – See Warning	3-43	
Data Reset	3-43	
Setup Menu	3-43	
Primary Spindle – ID GRIP/OD GRIP	3-44	
Calibrate Pots	3-44	
ATR Test	3-44	
Tool Menu	3-44	
ALIGN MENU	3-45	
Axis Algn –	3-45	
Set Home –	3-45	
Mach Home	3-45	
AUX MENU	3-45	
Work Lite –	3-45	
Coolant Wash	3-45	
Axis Override –	3-45	
Handwheel	3-46	
X Axis	3-46	
Z Axis	3-46	
Control +X or Control +Z	3-46	
Cycle Start	3-46	
Feed Hold	3-47	
Zero Shift	3-47	
Axis Power Feed	3-47	
Turret Index	3-47	
Control Button	3-48	
Main Electrical Cabinet	3-50	3-50
Optional Operating Devices	3-52	3-52
Swarf Conveyor	3-52	3-52
TOOL TURRET	3-53	3-53
TURRET INDEXES	3-53	3-53
TOOL STATION NUMBERS	3-53	3-53

Table of Contents

TOOL COMMAND – T WORD	3-53
TOOLS, TOOL HOLDERS AND TOOL HOLDER BLOCKS	3-53
METRIC AND INCH TOOLS	3-53
RIGHT AND LEFT HAND TOOLS	3-53
CHUCKS	3-55
CHUCKING SYSTEM TYPES	3-55
TOP JAW RECOMMENDATIONS	3-56
CHUCK	3-59
CENTRIFUGAL FORCE AND SPEED LIMITATIONS	3-59
CHUCK LUBRICATION	3-59
GENERAL CHUCK SAFETY GUIDELINES	3-60

Chapter 4

General Setup Guide 4-1

How Do I...	4-1
Master Controls	4-2
Switch On Power	4-2
Machine Alignment	4-3
Align the Machine's Axes	4-3
Axes And Mechanism Functions	4-4
Jog An Axis	4-4
Power Feed The X or Z Axis	4-4
Move the X or Z Axis with the Handwheel	4-5
Jogging the Tool Turret	4-5
CHUCK JAW CLAMPING FORCE	4-6
CHUCK JAW PRESSURE LIMITATIONS	4-6
Selecting Chuck Operating Mode	4-6
BAR FEED UNIT	4-7
BAR FEED UNIT OPERATING PANEL	4-7
BAR PREPARATION	4-7
Guide Tube Setup	4-8
Spindle Liner Installation	4-9
Loading Bars	4-10
Data Entry	4-12
Keying In Data	4-12
Correct Typing Mistakes	4-14
Select Text	4-14
Perform Operator Station Keypad Operations	4-15
MDI Functions	4-18
Create A Manual Data Input (MDI) Program	4-18
Copy A MDI Program To Edit	4-18
Tooling	4-19
Mount OD And ID Tool Holder Blocks In The Turret	4-19
Determine Turret Types, Station Numbers, T Word	4-21
Determine Tools, Tool Holders and Tool Holder Blocks	4-22
Tool Functions	4-23
Display Tool Table Fields	4-23

Table of Contents

Display Tool Sort	4-24
Display Single Tool	4-25
Display Tool Turret	4-28
Activate A Tool From Tool File	4-29
Remove Tool From Multiple Display	4-30
Find A Tool	4-33
Inch / Metric Tool Selection	4-34
Show Tool	4-34
Create New Tool File Entry	4-35
Create New Tool File	4-36
Move New Tool File to Active Tool Set	4-36
Modify Data In Tool Data Table	4-37
Tool Insert Orientation	4-38
Coordinate Reset	4-40
Set Position – Z Axis	4-42
G92 Position Set – Z Axis	4-44
Manually Set Tool Diameter	4-47
Manually Set Tool Length (Z Fixed Offset)	4-48
Set Fixed Offsets Using Optional Tool Setting Probe	4-49
Establish The Home Set Position G28 P4	4-52
Establish The Set Tool Change Position	4-53
Program Activation	4-54
Find A Program	4-54
Activate A Part Program	4-55
Program Block Delete Feature	4-56
Select 'Delete A Program Block' Function	4-56
Deselect A 'Deleted Program Block' Function	4-56
Running the Active Part Program	4-58
Operating Checks	4-58
Run a Part Program	4-58

Chapter 5

Other Setup Information 5-1

How Do I...	5-1
Plotter	5-2
Plotter Screen Setup	5-2
Plotting Model Information	5-5
Plot A Program	5-6
Track Tool Movement With Plot	5-8
Program and File Management	5-10
Create Directory	5-10
Transfer a Part Program into the Program Store Area of the Control	5-10
Copy (Backup) A Program To Diskette	5-12
Copy (Backup) Tool File or Active Tool Data To Diskette	5-13
Restore Active Tool Set from Diskette	5-15
Copy (Backup) Offset Tables To Diskette	5-16

Table of Contents

Copy (Backup) A Program from Program Store	5-18
Copy Files	5-19
Rename Files	5-20
Delete Files or Directory	5-21
Delete A Program	5-22
Execute a Part Program via Continuous Load	5-22
Activate A Program From External Source	5-25
Program Editor	5-27
Search For/Replace With	5-27
Edit Cut, Copy, And Paste	5-28
Copy Programs To Dual Display	5-28
Copy A Program To Edit	5-30
Resequence A Program	5-30
Save Program Edits	5-31
RAP Functions	5-33
Create A Rap Session	5-33
Edit A Rap Process	5-36
Moving Rap Tiles in a Session	5-37
Create An NC Program One Block At A Time With RAP	5-38
Saving A Rap Session	5-39
Create An NC Program With RAP	5-40
Duplicating A RAP Process	5-41
Loading A Rap Process	5-41
Executing A RAP Process	5-42
Insert Axes Values in RAP	5-42
Using The Program Translator	5-43
Set-up Translator	5-43
Miscellaneous	5-49
Calibrate The Display Screen	5-49
Change Home Menu	5-49
NC Programming Execution (system configuration)	5-53
Activate Security Level	5-55
Connect a PC to the A2100E Control System	5-60
Search Program For Cycle Execution	5-63
Resume Cycle After Losing Synchronization	5-64
Format A Diskette	5-64
Change Program Parameters	5-65
Change Cycle Parameters	5-67
Set Parts Counter	5-69
Calibrate Tool Setting Probe	5-70
Qualifying Z +(Right) Side of Tool Probe	5-70
Qualifying Z -(Left) Side of Tool Probe	5-72
Qualifying X Axis Preliminary Operations	5-74
Qualifying X + (Top) Side of Tool Probe	5-75
Qualifying X - Bottom Side of Tool Probe	5-76

Appendix A

Program Reference Data	A-1
------------------------------	-----

Table of Contents

Type I Block Word Address Table	A-1
Type II Block Listing	A-2
G Code Table Listing	A-3
M Code Table Listing	A-4
M Code Listing	A-4
Drilling Cycle Parameter Table	A-6
Turning Cycle Parameter Table	A-7
Tool Data Table	A-8
System Variable Table Listing	A-12
System Variable Table Names	A-12
Parameter Variable Table Listing	A-13
Programmable Offsets Table (Used with D Word)	A-13
Machine Offsets Table (Used with D WORD and G98,G98.1)	A-13
Process Control Data Table	A-13
Arithmetic Functions	A-14
Appendix B	
System Configuration	B-1
Overview	B-1
Security	B-1
NC PROGRAMMING EXECUTION	B-2
General	B-2
Colon Block – Colon Required	B-2
At Colon Block	B-2
Reset Fixture Offsets	B-2
Reset Programmable Offsets	B-2
Reset Programmed Rotation	B-2
CUTTER DIAMETER COMPENSATION (CDC)	B-2
Report CDC Error	B-2
Constant Feedrate	B-2
Glide On/Off	B-3
Alarms	B-4
Report PRT Alarms	B-4
Report WTF Alarms	B-4
Report COM Alarms	B-4
Fixture Offset Axis of Rotation	B-4
Modes	B-5
Circular	B-5
Endpoint Tolerance	B-5
Center Specification	B-5
M70 – 79 User M Codes Execution (Option)	B-6
M Code	B-7
Pulsed	B-7
Feedback 0 thru 9	B-7
Hold Program	B-7
Signal	B-8
Pulse Width	B-8
Time Before Alarm	B-8