

SERVICE MANUAL

for
CINCINNATI MILACRON®
ARROW (ERO) 500, 750, 1000
VERTICAL MACHINING CENTERS
with
CNC CONTROL

PUBLICATION NO. 91203586

ACRAMATIC is a trademark of Vickers E.S.D., Inc.

**CINCINNATI
MILACRON**

Table of Contents

Chapter 1		
Safety Precautions		1-1
Important		1-1
General Safety Instructions And Considerations		1-1
Personal Safety		1-1
Work Area Safety		1-2
Tool Safety		1-2
Lifting And Carrying Safety		1-2
Installation And Relocation Safety		1-3
Setup And Operation Safety		1-3
Maintenance Safety		1-4
Materials Used With This Product		1-5
Lifting Devices		1-6
General		1-6
Eyebolts		1-6
Hoist Rings		1-8
Spreader Bars And Lifting Beams		1-9
Chain		1-9
Cable Slings		1-11
Synthetic Material Slings		1-12
P Type Hooks		1-13
S Hooks		1-13
U Type Hooks		1-15
General Safety Lifting Information		1-16
Fluids Used With Machine Tools – USA Market		1-17
General Considerations		1-17
Cutting Fluids		1-17
Lubricants		1-17
Sources Of Information		1-17
Fluids Used With This Machine Tool – UK Market		1-19
General Considerations		1-19
Cutting Fluids		1-19
Lubricants		1-19
Fluids – Preventative Maintenance		1-20
Cutting Fluids		1-20
Water Quality		1-20
Too Soft		1-20
Too Hard		1-20
Cleaning The Coolant Reservoir		1-21
Lifespan		1-21
Tramp Oil		1-21
Filtering		1-21
Rust Prevention		1-21
Printed Circuit Board Handling Instructions		1-23
General		1-23
Recommended Handling Procedure		1-23

Table of Contents

Safety Features	1-24
Perimeter Guarding	1-24
Operator Doors	1-24
Feed Hold Push Button	1-24
Emergency Stop Push Button	1-24
Electrical Isolation Device	1-24
Air Supply Isolation Valve	1-24
Machine Related Safety And Usage Notes	1-25
Axis Overtravel Condition	1-25
Through Spindle Coolant Option	1-25
Inter-drilled Tooling	1-25
Tooling Taper – Spindle	1-25
Drive Key Spindle Unit	1-25
Tool Drum Positioning	1-25
Tool Storage Drum	1-25
Safe Operation of Multi-Part Tooling	1-25
Levelling	1-25
Battery Replacement	1-26

Chapter 2 System Information

2-1

Introduction	2-1
Machine Information	2-2
Machine Location	2-3
EMC Directive Requirements	2-3
NC Control	2-3
Axis Orientation	2-4
Guard Strength	2-5
Noise	2-5
Work-piece/Work Holding Device Loading/Unloading	2-5
Fumes And Coolant Misting	2-5
Fire Hazard	2-5
Arrow Specification	2-6
Arrow 500, 750, 1000	2-9
Table Dimensions	2-11
Tool Holder And Retention Stud	2-13
JMTBA-BT Tool Holder And Retention Stud	2-14

Chapter 3 Electrical System

3-1

General Description And Operation	3-1
Drawing Series	3-2
Electrical Symbols	3-3
Electrical Components	3-4
Electrical System Preventive Maintenance	3-5
Electrical Components In Electrical Cabinets	3-5

Table of Contents

Limit Switches	3-5
Thermostats	3-6
Motors	3-6
Wiring	3-7
Proximity Switches	3-7
Electrically Held Control Devices	3-7
Operation	3-7
Adjustment	3-8
Preventive Maintenance	3-8
Trouble Shooting	3-9
Thermal Overload Relays	3-10
Contacts	3-10
Sliding Contacts	3-11
Magnets	3-12
Coils	3-12

Chapter 4 Machine Lubrication

4-1

General	4-1
Electric Motors	4-1
Machine Units	4-1
6000 RPM Spindle Grease Lubricated	4-1
Oil Requirements	4-1
6000 or 8000 RPM Spindle Air/Oil Lubricated	4-1

Chapter 5 Pneumatic And Coolant Systems

5-1

General Information	5-1
Air Supply	5-1
System Adjustment	5-1
Drawbar Clamp And Unclamp	5-1
Proximity Switches	5-1
Dropsa Air/Oil Spindle Lubrication Unit	5-2
Coolant System	5-2
General	5-2
Cleaning The Coolant Reservoir	5-3
Coolant Nozzles	5-3
Through Spindle Coolant – (Optional)	5-3
✓ Fluid Reservoir (Arrow 500/750)	5-3
✓ Fluid Reservoir (Arrow 1000)	5-3

Chapter 6 Slide Drive Units X, Y And Z

6-1

General	6-1
General Maintenance	6-1
X Axis – Arrow 500 Machines	6-1

Table of Contents

Ball Screw – Removal And Disassembly	6-1
Ball Screw – Assembly And Installation	6-2
X Axis – Arrow 750 Machines	6-2
Ball Screw – Removal And Disassembly	6-2
Ball Screw – Assembly And Installation	6-3
X Axis – Arrow 1000 Machines	6-3
Ball Screw – Removal And Disassembly	6-4
Ball Screw – Assembly And Installation	6-5
Y Axis – Arrow 500/750 Machines	6-5
Ball Screw – Removal And Disassembly	6-5
Ball Screw – Assembly And Installation	6-6
Y Axis – Arrow 1000 Machines	6-6
Ball Screw – Removal And Disassembly	6-6
Ball Screw – Assembly And Installation	6-7
Z Axis – Arrow 500/750 Machines	6-7
Ball Screw – Removal And Disassembly	6-7
Ball Screw – Assembly And Installation	6-8
Z Axis – Arrow 1000 Machines	6-8
Ball Screw – Removal And Disassembly	6-8
Ball Screw – Assembly And Installation	6-9

Chapter 7 Spindle Carrier 7-1

General	7-1
Spindle Motor Removal – 6000 RPM	7-1
Spindle Motor Installation	7-2
Drive Belt Removal	7-2
Drive Belt Installation	7-2
Spindle Cartridge Removal	7-2
Spindle Cartridge – Installation	7-3
Drawbar Cylinder Assembly – Removal	7-3
Drawbar Cylinder Assembly – Installation	7-3
Drawbar Removal	7-3
Drawbar Re-Assembly	7-4
Spindle Motor Removal – 8000 RPM	7-4
Spindle Motor Installation	7-5
Drive Belt Removal	7-5
Drive Belt Installation	7-5
Spindle Cartridge	7-5
Spindle Cartridge Removal	7-5
Spindle Cartridge – Installation	7-6
Drawbar Cylinder Assembly – Removal	7-6
Drawbar Cylinder Assembly – Installation	7-6
Drawbar Removal	7-6
Drawbar Re-Assembly	7-7

Chapter 8 Tool Storage Unit 8-1

General	8-1
---------------	-----

Table of Contents

Disc Storage Unit	8-1
Removal	8-1
Installation	8-2
Aligning Tool Pocket To Machine Spindle	8-2
Disassembly	8-2
Assembly	8-2
Motor/Gearbox	8-2
Removal	8-2
Installation	8-3
Linear Drive	8-3
Removal Of The Linear Drive Motor	8-3
Removal Of Gear Box	8-3