

# Mazak

# PARTS LIST

2 / 2

---

MANUAL No. H528LA0035E

---

Printed in Japan

# PREFACE

## CONTENTS

1	PURPOSE AND IMPORTANT REQUEST .....	1
2	PART LIST OUTLINE.....	2
2-1	Types and Manual Numbers.....	2
2-2	Composition of Book-Binding.....	2
2-3	Composition of Contents .....	2
3	HOW TO USE THE PART LIST .....	3
4	LIST DETAILS .....	4
5	HOW TO USE THE PAGE .....	5
6	PLACING A PART ORDER.....	5
7	ABBREVIATION.....	6

# MASTER INDEX

MODEL/MANUAL NO. : FJV-200/MM2000/SMM2000

/ H528LA0035E

U-NAME	UNIT
HEAD	01 1/2
COLUMN	03 1/2
BASE	04 1/2
SADDLE	05 1/2
TABLE	06 1/2
X DRIVE	11 1/2
Y DRIVE	12 1/2
Z DRIVE	13 1/2
ATC	16 1/2
TOOL SHIFTER	17 1/2
MAGAZINE	18 1/2
CONTROL BOX	26 1/2
CONTROL BOX 2	27 1/2
TERMINAL BOX	29 1/2
HEAD LUBE	32 1/2
WAY LUBE	34 1/2
COOLANT 1	36 1/2
COOLANT 2	37 2/2
AIR	38 2/2
WIRING	41 2/2
PENDANT	43 2/2
FRAME	44 2/2
X LIMIT	46 2/2
X WAY COVER	51 2/2
HEAD COVER	57 2/2
COOLANT COVER	59 2/2
WORK LIGHT	66 2/2
TOOL MEASURE	71 2/2
PATLIGHT	72 2/2
APC	73 2/2
PALLET	74 2/2
SCALE	78 2/2
CHIP CONVEYOR	79 2/2
TOUCH SENSOR	92 2/2