

TMC 15

CNC turning center

With NAKAMURA-FANUC

OTE/IOTEF

INSTRUCTION OPERATION MANUAL

 **NAKAMURA-TOME PRECISION INDUSTRY CO., LTD.**

B-1122BE / 02

1987-02

I N D E X

1	I n t r o d u c t i o n	1-1
2	S p e c i f i c a t i o n	2-1
2-1	Construction of the machine	2-1
	Fig.2-1 Name of parts and units	2-1
2-2	Dimensional drawing	2-2
	Fig.2-2 Machine Size	2-2
	Fig.2-3 Maintenance Space	2-3
	Fig.2-4-1 Slide Movable Range (Octagonal turret)	2-4
	Fig.2-4-2 Slide Movable Range (V D I turret)	2-5
	Fig.2-5-1 Octagonal turret working range	
	(Without Tailstock)	2-6
	Fig.2-5-2 (With Tailstock)	2-7
	Fig.2-5-3 VDI turret working range	
	(Without Tailstock)	2-8
	Fig.2-5-4 (With Tailstock)	2-9
	Fig.2-6-1 Octagonal turret head dimensional drawing	2-10
	Fig.2-6-2 VDI turret head dimensional drawing	2-11
	Fig.2-7 Spindle Nose Dimensional Drawing	2-12
	Fig.2-8 Spindle Speed/Output/Torque Diagram	2-13
2-3	Machine Specifications	2-15
2-4	NC Control Specifications (OT-E)	2-25
	NC Control Specifications (10TE-F)	2-29
3	S a f e t y P r e c a u t i o n s	3-1
3-1	For safety operations	3-1
3-2	Precaution during machining	3-1
3-3	How to stop the machine	3-2
3-4	Safety device	3-3
3-5	Warming-up	3-4

4	Manual operation	4-1
4-1	Switches and button on the operation panel	4-2
	Fig.4-1 Operation panel	4-2
4-1-1	Button and Switches(For standard function)	4-3
4-1-2	Button and Switches(For optional Function)	4-14
4-2	How to turn on control power	4-15
4-3	How to move X and Z axis slides	4-16
4-4	How to perform the machine zero return	4-19
4-5	How to operate the turret indexing	4-20
4-6	How to operate the spindle	4-22
4-7	How to turn off the power	4-25
4-7-1	Power consumption	4-26
4-7-2	Required input voltage	4-27
4-7-3	Fuse of main power switch	4-27
4-7-4	Wire size for power supply cable	4-27
4-7-5	Power connection	4-28
4-7-6	Check the supply voltage to the machine	4-32
4-8	Levelling	4-33
	Fig.4-7 Levelling position	4-34
	Fig.4-8 Levelling plate drawing	4-34
5	Manual Data Input operation	5-1
5-1	Key board of MDI & CRT panel (OTE)	5-2
5-2	Procedure for the automatic operations (OTE)	5-6
5-3	MDI operation (OTE)	5-7
5-4	Manual Data Input operation (10TEF)	5-11
5-5	Key board of MDI & CRT panel (10TEF)	5-12
5-6	Procedure for the automatic operations (10TEF)	5-16
5-7	MDI operation (10TEF)	5-17

6	Preparation of the actual machining	6-1
6-1	Tooling (Procedure of fixing the tool)	6-1
6-1-1	Tooling system for VDI turret	6-2
6-1-1-1	How to mount the tool holder	6-2
6-1-1-2	How to fix a cutting tool	6-2
	Fig.9-1 Tooling system for VDI turret	6-3
6-1-1-3	Drawings of tool holders	6-4
6-1-1-4	Tooling Interference	6-8
6-1-2	Tooling system for octagonal turret	6-9
6-1-2-1	How to mount the tool holder	6-9
6-1-2-2	How to fix a cutting tool	6-9
	Fig.9-2 Tooling system for octagonal turret	6-10
6-1-2-3	Drawings of tool holders	6-11
6-1-2-4	Tooling Intereference	6-17
6-2	Chuck(Jaw chuck & Collet chuck)	6-18
6-2-1	How to mount the chuck	6-18
	MATSUMOTO / NIKKO / KITAGAWA	
	RIKEN / SOUL / NAKAMURA	
6-2-2	Chucking pressure adjustment	6-29
6-2-3	Allowable maximum chuck pressure and speed	6-29
6-2-4	Chuck gripping force	6-30
6-2-5	Selection of chuck clamping direction	6-34
6-2-6	Chuck interlock switch adjustment	6-35
6-2-7	Boring soft jaws	6-37
6-3	Tailstock (Option)	6-38
6-3-1	Positioning of the tailstock slide	6-38
6-3-2	Adjusting of the tailstock quill pressure	6-39
6-4	Determining start position of machining	6-40
6-4-1	Using G50	6-40
6-4-2	Using Direct Input Value of Tool Offset	6-44

7	Machining (Actual Cutting)	7-1
7-1	Program registration	7-1
7-1-1	Registration from MDI/CRT panel	7-1
7-1-2	Registration from Tape reader	7-3
7-1-3	Tape reading	7-4
7-2	Program check	7-5
7-3	Program edit	7-7
7-4	Automatic operation without workpiece	7-9
7-5	Actual cutting	7-11
7-6	Measuring cutting size and other operations during automatic cycle	7-12
7-7	Tool offset	7-14
7-7-1	Input tool offset value	7-15
7-7-2	Offset display and setting (10TEF)	7-18
7-7-3	Changing	7-21
8	Appendix	8-1
8-1	Name of unit	8-1
8-2	Installation	8-2
8-2-1	Installation site	8-2
8-2-2	Foundation	8-2
8-2-3	Transportation and lifting of machine	8-3
8-2-4	Removing X and Z axis slide fixing plates	8-4
8-2-5	Cleaning	8-5
8-2-6	Oil supply before starting operation	8-5
8-2-7	Assembling of the part catcher	8-5A
8-3	PC Parameter setting	8-6
8-4	Machine Alarm display	8-21
9	Maintenance	9-1
9-1	Hydraulic equipment layout	9-1
9-2	Hydraulic equipment parts list	9-2
9-3	Limit switch parts list	9-3
9-4	Belt tension adjustment	9-4
9-5	Oil supply	9-5
10	N-T Setter	10-1
10-1	INDEX of NT Setter A & C	10-1