

ROBOFIL
240SL • 440SL
240cc • 440cc
380 • X90

Programming manual

IMPRESSUM

Technical data originate from our Wire product line managed by
J. Drouet, CTSA-Geneva.

Typesetting and production by
Edipresse Imprimeries Réunies s.a. / Renens.

- 0. General table of contents
Using the manual**

- 1. ISO language - Introduction**

- 2. ISO language - G functions**

- 3. ISO language - M functions**

- 4. ISO language - Special
programming**

- 5. ISO language: Custom macro B**

- 6. Command words**

- 7. CT-Expert**

- 8. Boot Loader**

- 9. CT-Graphic preview**

General table of contents

0. Table of contents	
- Using the manual	0.8
- Special case : ROBOFIL 380	0.8
1. ISO language - Introduction	
- Systems of coordinates	1.3
- Dimension words	1.4
- Use of decimal point	1.6
- Minimum angular increment	1.6
- Recommendations on the sequences of G and M instructions	1.6
2. ISO language - G functions	
ISO language - G functions	2.3
- Numerical index	2.3
- Modal commands	2.5
- Non-modal commands	2.7
Modal commands	2.8
- Move functions	2.8
- Mode selection	2.12
- Offset programming	2.16
- Taper programming	2.22
- Changing the direction of wire inclination	2.26
- Changing the angle of wire inclination	2.27
- Special tapering	2.29
- Programming of an attachment	2.32
Non-modal commands	2.33
- Program execution	2.33
- Measuring	2.40
Supplementary measuring cycles	2.46
- Corner Cycle	2.48
- Align Edge Cycle	2.49
- External Middle Cycle	2.50
- External Centering Cycle	2.51
- Holes Alignment Cycle	2.52
3. ISO language - M functions	
Numerical index and description of M functions	3.3
The M70 retrace function	3.10
- Example of application	3.10
- Determination of retrace memory area	3.10
The «Scrap remaining/cutting off of attachment» function	3.11
- Examples	3.12
M11 function	3.13
Side door management (option)	3.13

4. ISO language - Special programming

The sub-program (M98 - M99)	4.3
- Format of a sub-program	4.3
- Sub-program execution	4.4
- Special uses of sub-programs	4.5
The corner recess function	4.7
- Programming	4.7
- Example of programming	4.8
- Précautions	4.9
The corner rounding function (G48 - G49)	4.10
- Programming	4.10
- Specifying the radius of the arc	4.10
- Example of programming	4.11
- Precautions	4.11
Conversion/copy functions (M98)	4.12
- Rotation/copy	4.14
- Scale/copy	4.15
- Mirror/copy	4.16
- Repetitive rotation/copy	4.17
- The centre of the conversion/copy commands	4.19
The reverse/copy function (M96 - M97)	4.20
- Programming	4.21
- Examples of Programming	4.22
- Precautions	4.23
Special taper programming	4.24
- Independent upper and lower corner radii	4.24
- Deviation vector	4.24
- Arc deviation vector	4.25
- Specifying the angle of wire inclination in an independent block	4.26
- Specifying the height of the secondary surface	4.27
- General precautions	4.28
Taper machining: specifying upper and lower shapes	4.29
- Outline	4.29
- Programming	4.29
- Examples of programming	4.33
- Selecting the machining mode	4.34
- Precautions when specifying upper and lower shapes	4.34

5. ISO language: Custom macro B

General	5.3
Variables	5.4
- Variable expressions	5.4
- Quoted variables	5.4
- Undefined variables	5.5
- Displaying and setting variables	5.6
Types of Variables	5.7
- Local variables: #1 to #33	5.7
- Common variables: #100 to #149, #500 to #531	5.7
- System variables	5.7
Arithmetic commands	5.12
- Definition and substitution of variables	5.12

- Addition	5.12
- Multiplication	5.12
- Functions	5.12
- Combining arithmetic operations	5.14
- Modifying the arithmetic sequence	5.14
- Precision	5.15
- Notes on reduced precision	5.16
Control commands	5.17
- Branching (GOTO)	5.17
- Iteration (WHILE)	5.19
Creating and registering a custom macro body	5.23
- Creating a custom macro body	5.23
- Registering a custom macro body	5.23
- Macro and CNC statements	5.24
Commands that call macros	5.27
- Calling a macro locally (the G65 command)	5.27
- Calling a macro globally (the G66 command)	5.30
- Multiple calls	5.30
- Multiple global calls	5.31
- Calling macros using G commands	5.31
- Calling subprograms using M commands	5.33
- Calling subprograms using T commands	5.34
- The position of the decimal point in an argument	5.34
- The differences between the M98 and G65 commands	5.35
- Custom macro levels and local variables	5.35
Relationships with other functions	5.36
Special codes and commands used in custom macros	5.38
6. Command words	
Command words	6.3
- Movements and machining in the Machine system of coordinates	6.4
- Movements and machining in the Part system of coordinates	6.4
- Predefined movements	6.5
- Technologies and machining settings	6.5
- Auxiliary functions	6.6
- Execution of programs	6.6
7. CT-Expert	
Introduction	7.3
Utilization of a sequence in an ISO program	7.4
File management	7.4
Basic menu	7.4
CT-Expert user interface	7.4
- Keyboard	7.5
- Programmable keys (soft keys)	7.5
Automatic construction of a sequence	7.6
- Principle of operation	7.6

- Questionnaire	7.6
- Display of result	7.7
- Modification of result	7.7
- Saving of the result	7.7
Manual construction of a sequence	7.8
- Principle of operation	7.8
- Specification of the machining context	7.8
- Editing of the sequence	7.9
- Modification of the result	7.9
- Saving of the result	7.9
Standard sequences	7.10
- Principle of operation	7.10
- Specification of the machining context	7.10
- Editing of the sequence	7.10
- Modification of the result	7.11
- Saving of the result	7.11
- Saving of the sequence in the standard sequences	7.11
- Deletion of the sequence from the standard sequences	7.11
Rereading of a sequence	7.11
- Principle of operation	7.11
Generation of a command file	7.12
- Principle of operation	7.12
- Conditions concerning the part-program	7.12
- Execution parameterization	7.12
- Multiple parts	7.13
Rectangular layout	7.13
Random layout	7.13
Radial layout	7.14
Part by Part Machining	7.14

8. Boot Loader

Introduction	8.3
General	8.3
Activation of Boot Loader	8.4
Loading the update diskettes	8.5
Execution of the update	8.6
Anomalies - Interpretation of error messages	8.7
Summary of error messages	8.8
Continuity of production	8.9
Replacement of Boot Loader itself	8.10
- Anomalies - Interpretation of error messages	8.11
- Continuity of production	8.11

9. CT - Graphic preview

Introduction	9.3
- Purpose and functioning	9.3
- Hierarchy of the screen pages	9.3
- Activation of the Graphic preview module	9.3
Screen page Graphic Preview (selection)	9.4
Execution procedure	9.6
- Syntax check	9.6
- Loading into memory	9.6
- Drawing	9.7
- Function keys	9.7
Graphic Preview page	9.8
Context page	9.10
Advanced Options page	9.12
Draw Parameters page	9.14
Alternative representations	9.16
- Isometric display (XYZ)	9.16
- Full Screen page	9.16
Show ISO page	9.17
Log File page	9.18