


OPERATING INSTRUCTION

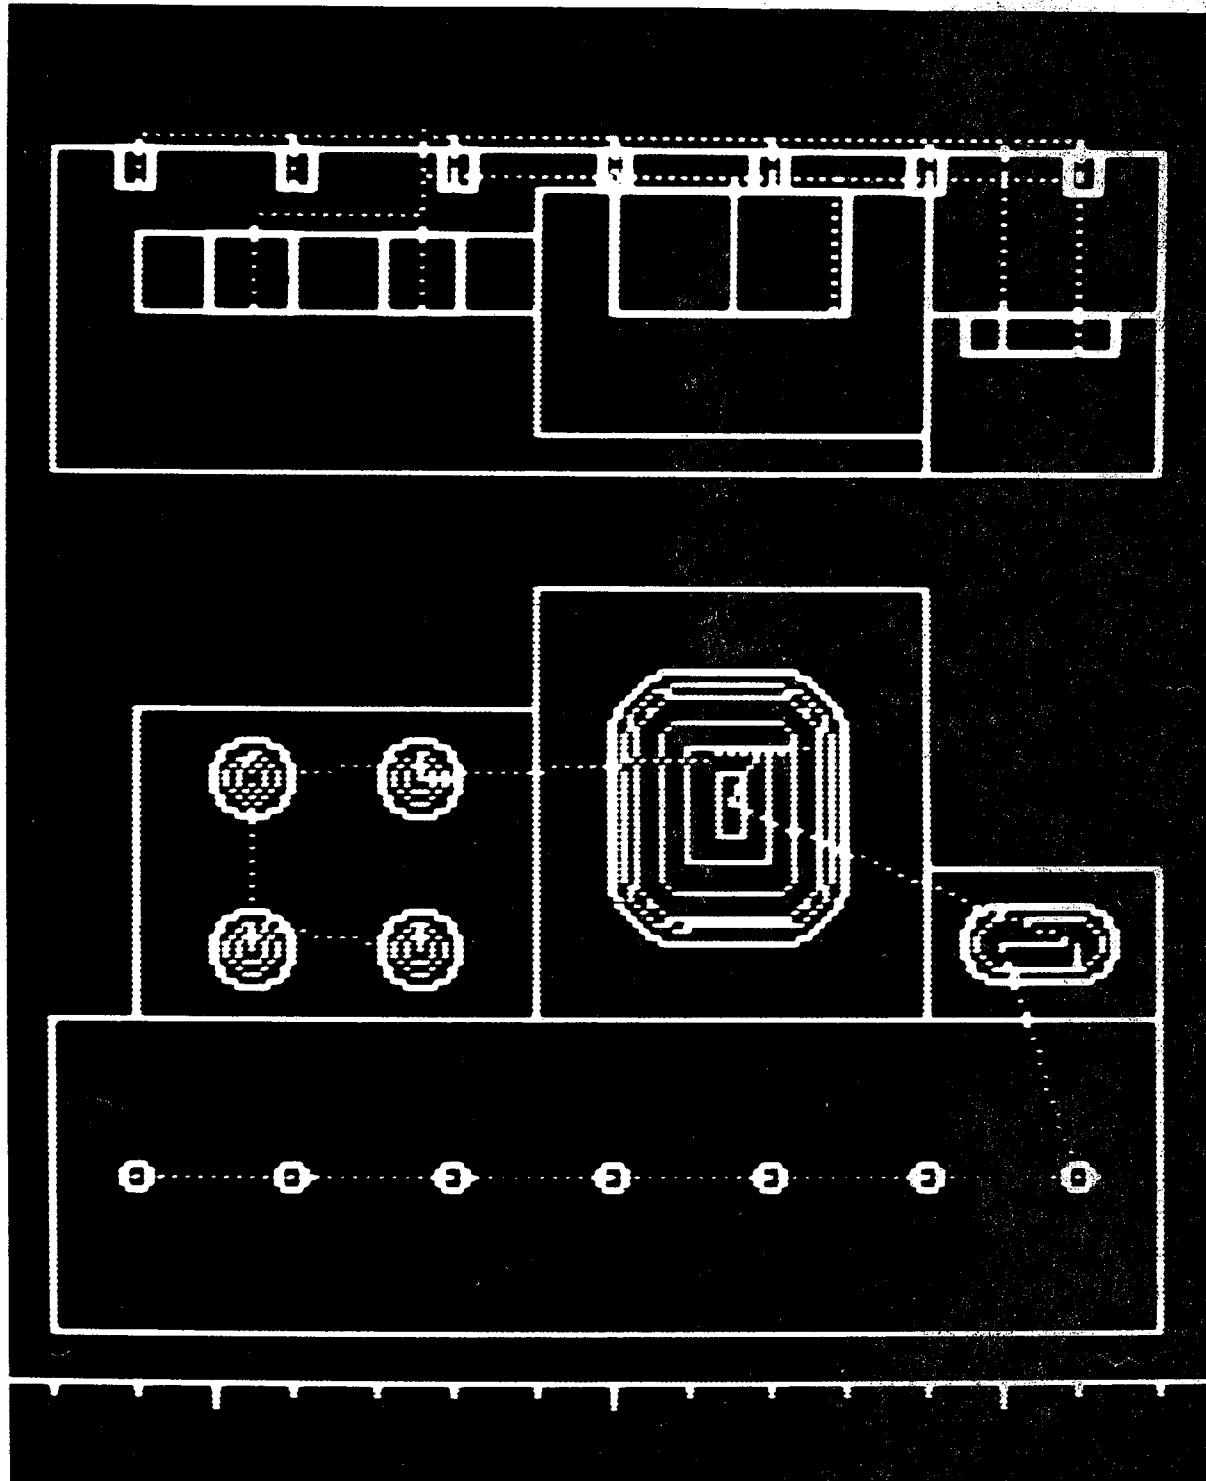

MAHO
CNC 432

1. COMMISSIONING

1.1	Startup of machine and CNC control	1-03
1.2	Seeking reference points of machine	1-05
1.2.1	Peculiarities - seeking ref.points	1-07
1.3	Seeking reference point of tool magazine	1-08
1.4	Deletion of error messages	1-09
1.5	Keyboard	1-10
1.5.1	Softkeys	1-11
1.5.2	Cursor control	1-12
1.6	Software version display	1-12
1.7	Saving machine constants	1-13
1.8	MEMORY LOCK keyswitch	1-13

2. MANUAL OPERATING MODE

2.1	The MANUAL image	2-03
2.2	MANUAL operation (MAN.OPER.)	2-04
2.2.1	Setting the traversing rate	2-04
2.2.2	Continuous jogging (JOG CONTINUE)	2-05
2.2.2.1	Jogging skip	2-06
2.2.2.2	Continuous operation	2-06
2.2.3	Incremental traversing (JOG STEP)	2-07
2.3	Working spindle key-held operation	2-08
2.4	Remote panel	2-08

2.5	Metric and Inch system	2-11
2.6	Reference point search	2-12
2.7	Part zero point	2-13
2.7.1	Setting the part zero point (RESET AXIS)	2-13
2.7.1.1	Setting the part zero point to 0	2-15
2.7.1.2	Setting the part zero point to a specific value	2-16

3. PART MACHINING PROGRAMMING

3.1	Operator guidance and auxiliary graphics	3-03
3.1.1	Selection of operator guidance	3-05
3.1.2	Selection of auxiliary graphics	3-06
3.2	Manual program input into inoperable machine ...	3-07
3.2.1	Principal rules for program input	3-07
3.2.2	Main program input	3-08
3.2.3	Subprogram input	3-11
3.2.4	Mask records	3-13
3.2.4.1	Mask record input	3-13
3.2.5	Parameter E	3-14
3.2.5.1	Parameter E definition	3-14
3.2.5.2	Arithmetic operations with parameters E	3-15
3.2.6	Program protection	3-17
3.3	Manual program input during a running program ..	3-18
3.4 X	Single record programming	3-19
3.4.1	TEACH-IN MDI mode	3-19
3.4.2	TEACH-IN PLAYBACK mode	3-22
3.4.2.1	Teach-in method	3-23

3.4.2.2	Playback method	3-25
3.4.2.3	Re-entering the TEACH-IN PLAYBACK mode	3-28
3.5	Stored zero offsets	3-30
3.5.1	Input and modification of zero offsets	3-33
3.5.2	Activating a zero offset	3-34
3.5.3	Checking zero offsets	3-34
3.5.4	Deleting one zero offset	3-35
3.5.5	Deleting all zero offsets	3-36

4. TOOL PROGRAMMING

4.1	Tool data (TOOL OFFSETS)	4-03
4.1.1	Seeking a tool T	4-04
4.1.2	Input and modification of tool data	4-05
4.1.3	Checking tool data	4-06
4.1.4	Deletion of offsets of one tool	4-07
4.1.5	Deletion of offsets of all tools	4-08
4.1.6	Input of magazine position numbers	4-09
4.2 X	Tool life	4-10
4.2.1	Input and modification of tool life	4-11
4.2.2	Checking tool lives	4-13
4.2.3	Deletion of tool life of one tool	4-14
4.2.4	Deletion of tool life of all tools	4-15
4.2.5	Release after tool life expiration	4-16
4.2.5.1	Tool release on machines without tool changer ..	4-16
4.2.5.2	Tool release on machines with tool changer	4-17
4.2.5.3	Release of an inhibited tool T	4-17
4.3 X	Spare tools	4-19

4.3.1	Input and modification of spare tools	4-20
4.3.2	Checking spare tools	4-22
4.3.3	Deletion of one spare tool	4-23
4.3.4	Deletion of all spare tools	4-24
4.4 X	Tool breakage monitoring	4-25
4.4.1	Input and modification of data for tool breakage monitoring	4-26
4.4.2	List of tool lengths A measured with active tool breakage monitoring (TOOL LENGTH MONITOR)...	4-28
4.5	The DNC tool memory	4-30

5. P R O G R A M T E S T

5.1 X	The program test runs (TESTRUN-1, TESTRUN-2, TESTRUN-4)	5-03
5.1.1	Execution of a program test run	5-04
5.1.2	Abortion of a program test run	5-06
5.1.3	Re-entering a program test run	5-06
5.2	The graphic test runs (TESTRUN-5, TESTRUN-6, TESTRUN-7)	5-07
5.2.1	Prerequisites for graphic test runs	5-08
5.2.1.1	Window definition	5-08
5.2.1.2	Blank definition	5-10
5.2.2	List of graphic parameters	5-12
5.2.2.1	Calling the graphic parameter list	5-12
5.2.2.2	Explanation of entries in the graphic parameter list	5-14
5.2.2.3	Editing the graphic parameter list	5-16
5.2.3	Calling the graphic test runs	5-16
5.2.4	TESTRUN-5 (2.5D plotter graphics)	5-18
5.2.4.1	Execution of graphic test run TESTRUN-5	5-20
5.2.5	TESTRUN-6 (3D plotter graphics)	5-20

5.2.5.1	Execution of graphic test run TESTRUN-6	5-21
5.2.6	TESTRUN-7 (simulation graphics)	5-22
5.2.6.1	Execution of graphic test run TESTRUN-7	5-23
5.2.7	The graphic cursor	5-24
5.2.8	Calling off graphic test runs	5-26

6. PROGRAM MODIFICATION

6.1	Release of protected programs	6-03
6.2	Search routines	6-05
6.2.1	Address search routine	6-05
6.2.2	Word search routine	6-07
6.3	Modification of active main program	6-08
6.3.1	Seeking the active main program	6-08
6.3.2	Seeking the program record to be modified	6-09
6.3.3	Modification, insertion and deletion of program words	6-10
6.3.4	Deletion of a program record	6-11
6.3.5	Insertion of a program record	6-12
6.3.6	Renumbering program records (RENUM-N)	6-13
6.3.7	Modification of program number (EDIT-ID)	6-13
6.4	Modification of the nonactive main programs	6-14
6.4.1	Seeking the nonactive main program	6-14
6.4.2	Seeking the program record to be modified	6-16
6.4.3	Modification	6-17
6.5 X	Modification of subprograms	6-18
6.5.1	Seeking the subprogram	6-18
6.5.2	Seeking the program record to be modified	6-19
6.5.3	Modification	6-19

6.6	Deletion of programs	6-20
6.6.1	Deletion of one main program	6-20
6.6.2	Deletion of all main programs	6-22
6.6.3	Deletion of one subprogram	6-23
6.6.4	Deletion of all subprograms	6-24

7. PROGRAM RUN

7.1	Feed correction (F-OVR)	7-03
7.2	Spindle speed correction (S-OVR)	7-03
7.3	Program and record search for part machining (BLOCK SEARCH)	7-05
7.3.1	Program search for part machining	7-05
7.3.2	Program record search for part machining	7-08
7.3.3	Seeking a program record in a repeat segment ...	7-10
7.3.4	Seeking a program record in the subprogram	7-12
7.4	Skipping masked records	7-14
7.5	SINGLE mode (single record program run)	7-15
7.6	AUTO mode (automatic program run)	7-18
7.7	Program stop	7-21
7.8	Tool changing by hand	7-21
7.9	Interruption and abortion of program run	7-23
7.9.1	Interruption of program run	7-23
7.9.2	Automatic repositioning and repetition of interrupted program record (REPOS)	7-24
7.9.3	Abortion of fixed cycle (CLEAR CYCLE)	7-27
7.9.4	Abortion of program run	7-28
7.9.5	Restarting a program	7-29

7.10	<i>List of parameters E (PARAMETERS)</i>	7-30
7.11	<i>List of points P (POINTS)</i>	7-33
7.12	<i>Turning off machine and CNC control</i>	7-36

8. DATA TRANSFER

8.1	<i>General information</i>	8-03
8.2	<i>Readin and readout of programs</i>	8-04
8.2.1	<i>Readin of programs from an external data carrier</i>	8-05
8.2.1.1	<i>Readin of all programs</i>	8-06
8.2.1.2	<i>Readin of one program</i>	8-07
8.2.2	<i>Readout of programs onto an external data carrier</i>	8-08
8.2.2.1	<i>Readout of all programs</i>	8-08
8.2.2.2	<i>Readout of one program</i>	8-09
8.3	<i>X Readin and readout of other data</i>	8-10
8.3.1	<i>Readin of data</i>	8-10
8.3.2	<i>Readin and readout of tool data</i>	8-11
8.3.3	<i>Readin and readout of tool life</i>	8-12
8.3.4	<i>Readin and readout of spare tools</i>	8-13
8.3.5	<i>Readin and readout of data for tool breakage monitoring</i>	8-14
8.3.6	<i>Readout of tool lengths A measured with active tool breakage monitoring</i>	8-15
8.3.7	<i>Readin and readout of zero offsets</i>	8-16
8.3.8	<i>Readin and readout of parameters E</i>	8-17
8.3.9	<i>Readin and readout of points P</i>	8-18
8.3.10	<i>Readin and readout of parameters for plotter graphics (and simulation graphics)</i>	8-19
8.4	<i>Readin and readout of tools when working with the DNC tool memory</i>	8-20

8.5 X BTR readin of programs 8-21

9. D I A G N O S I S

9.1	Error diagnosis	9-03
9.2	Diagnostic menu	9-05
9.3	Software version and configuration check	9-06
9.4	Hardware check routine (POWER-UP CHECK)	9-06
9.5 X	Diagnostic mode	9-07
9.5.1	Calling the diagnostic mode	9-07
9.5.2	CONTR.TELET.MOD.test program	9-10
9.5.3	CENTR.PROC.MOD. test program	9-11
9.5.4	PROM TEST program	9-11
9.5.5	32 INP./OUTP.MOD. test program	9-12
9.5.6	DRIVE MODULES test program	9-12
9.5.7	GRAPH.MOD. test program	9-13
9.5.8	SERVICE ONLY test program	9-14
9.5.9	Calling off the diagnostic mode	9-14

10. M I S C E L L A N E O U S

10.1	Machine constants	10-03
10.1.1	Checking of machine constants	10-03
10.1.2	Input and modification of machine constants without unlocking the machine constant memory	10-04
10.1.3	Input and modification of machine constants after unlocking the machine constant memory	10-06
10.1.4	Readin of machine constants	10-08

10.1.5	Readout of machine constants	10-09
10.2	Checking the signal status of the inputs and outputs of the CNC control	10-10
10.3	Checking the memory occupancy	10-12
10.4	Explanation of texts and abbreviations used in the screen pictures and on the keys of the CNC control operating panel	10-13
10.5	Function of CNC control operating panel keys	10-26