

纪和机械制造(上海)有限公司

KIWA-CW MachineManufacturing(SHANGHAI) Co.,Ltd

上海闵行区联曹路260号厂房I厂房. 邮编: 201108 TEL: (862)64349898 FAX: (8621)64349188

Triple V21i-S

[FANUC SYSTEM 21i-MB]

OPERATION

INDEX

INDEX

| | |
|--|--------------------|
| PREFACE | [Page i] |
| INDEX | [Page ii to iv] |
| SAFETY PRECAUTIONS | [Page 1 to 21] |
| A. MACHINE COMPOSITION | [Page a-1] |
| B. OUTLINE OF MACHINE | [Page b-1 to b-6] |
| B-1 Description of Machine..... | Page b-1 |
| B-2 Features | Page b-5 |
| B-3 Construction | Page b-6 |
| C. SWITCHES AND PUSHBUTTONS | [Page c-1 to c-32] |
| C-1 Electric Box | Page c-1 |
| C-2 Operation Panel of Machine..... | Page c-4 |
| C-3 Other Operation Switches and Pushbuttons | Page c-31 |
| D. STARTING AND ENDING OPERATION | [Page d-1 to d-10] |
| D-1 Emergency Stop | Page d-1 |
| D-2 Turning ON Power | Page d-3 |
| D-3 Warming-up Operation..... | Page d-5 |
| D-4 Turning OFF Power | Page d-7 |
| D-5 After Turning OFF Power | Page d-8 |
| D-6 Measures in Power Failure..... | Page d-9 |

INDEX

| | |
|--|--------------------|
| E. MANUAL OPERATION | [Page e-1 to e-7] |
| E-1 Zero Point Return | Page e-1 |
| E-2 JOG Feed | Page e-2 |
| E-3 Rapid Traverse | Page e-3 |
| E-4 Handle Feed | Page e-4 |
| E-5 Setting/Taking off Spindle Tool | Page e-5 |
| E-6 Spindle Revolution and Stop | Page e-7 |
| | |
| F. MDI OPERATION | [Page f-1 to f-5] |
| F-1 MDI (Manual Data Input) Operation | Page f-1 |
| F-2 Spindle Revolution in MDI | Page f-3 |
| F-3 Spindle Orientation in MDI | Page f-4 |
| F-4 ATC Magazine Indexing and Tool Change... | Page f-5 |
| | |
| G. AUTOMATIC OPERATION | [Page g-1 to g-7] |
| G-1 Starting Automatic Operation | Page g-2 |
| G-2 Stopping and Restarting Automatic | Page g-4 |
| Operation | |
| G-3 Door Safety Interlock | Page g-6 |
| | |
| H. ATC OPERATION | [Page h-1 to h-13] |
| H-1 Tool Setting and Removal | Page h-1 |
| H-2 Tool Registration | Page h-2 |
| H-3 Tool Exchange in MDI Operation | Page h-10 |
| H-4 Tool Exchange in Automatic Operation | Page h-11 |
| H-5 How to Set Special Tool | Page h-12 |
| H-6 Description of LCD Displays | Page h-13 |

INDEX

| | |
|--|-----------------------------|
| J. EMERGENCY STOP | [Page j-1] |
| J-1 Cases of Emergency | Page j-1 |
| J-2 To Release Emergency Stop Status | Page j-1 |
| K. INTERFERENCE | [Page k-1 to k-4] |
| K-1 Work-piece and Travels | Page k-1 |
| K-2 ATC Interference Area | Page k-2 |
| K-3 Tool | Page k-3 |
| K-4 Pullstud | Page k-4 |
| L. MISCELLANEOUS FUNCTIONS (M CODE) | [Page l-1 to l-3] |
| L-1 M Function Code List | Page l-1 |
| L-2 Remarks to use M Function Code | Page l-3 |
| M. ALARM MESSAGE | [Page m-1 to m-6] |
| M-1 Alarm Message | Page m-1 |
| M-2 Operation Message (Machine Side) | Page m-5 |
| APPENDIX-I SPINDLE THROUGH COOLANT SYSTEM | [Page APPENDIX-I -1 to 2] |
| APPENDIX-II CHIP CONVEYOR | [Page APPENDIX-II -1] |
| APPENDIX-III MACRO PROGRAM | [Page APPENDIX-III -1 to 2] |