


Instruction for replacing the Brake Release Board IRB 4400/4450S

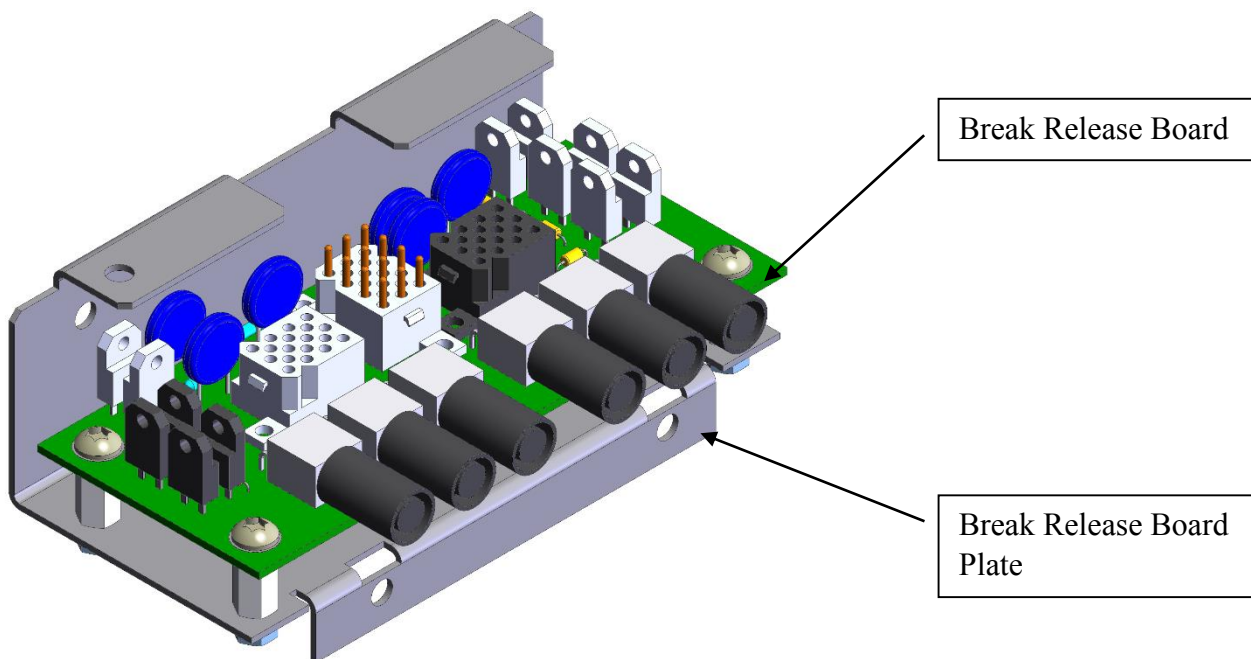

Removing the Brake Release Board

Follow the instructions in chapter 4.6.3 in the manual for removing the old Brake Release Board.

Replace parts

Replace the old Brake Release Board (3HAC16035-1) and the old Brake Release Board Plate (3HAC3585-1) with corresponding parts in the spare part kit.

Refitting the Brake Release Board

Follow the instructions for refitting the Break Release Board in the manual.

Prepared Joakim Vasilevski 0000-00-00	Responsible department RMRO SE/PRIM	Description Assembly Instruct. Instruction for replacing BRB,4400/4450S	
Approved Jan-Erik Nahls 20180223			Page 1
Status Approved	ECO no 500000096291		No. of pages 1
ABB		3HAC066386-001	01