


INSTRUCTION

HYDRAULIC PRESS

2902-17-0001

3HAC077982-001

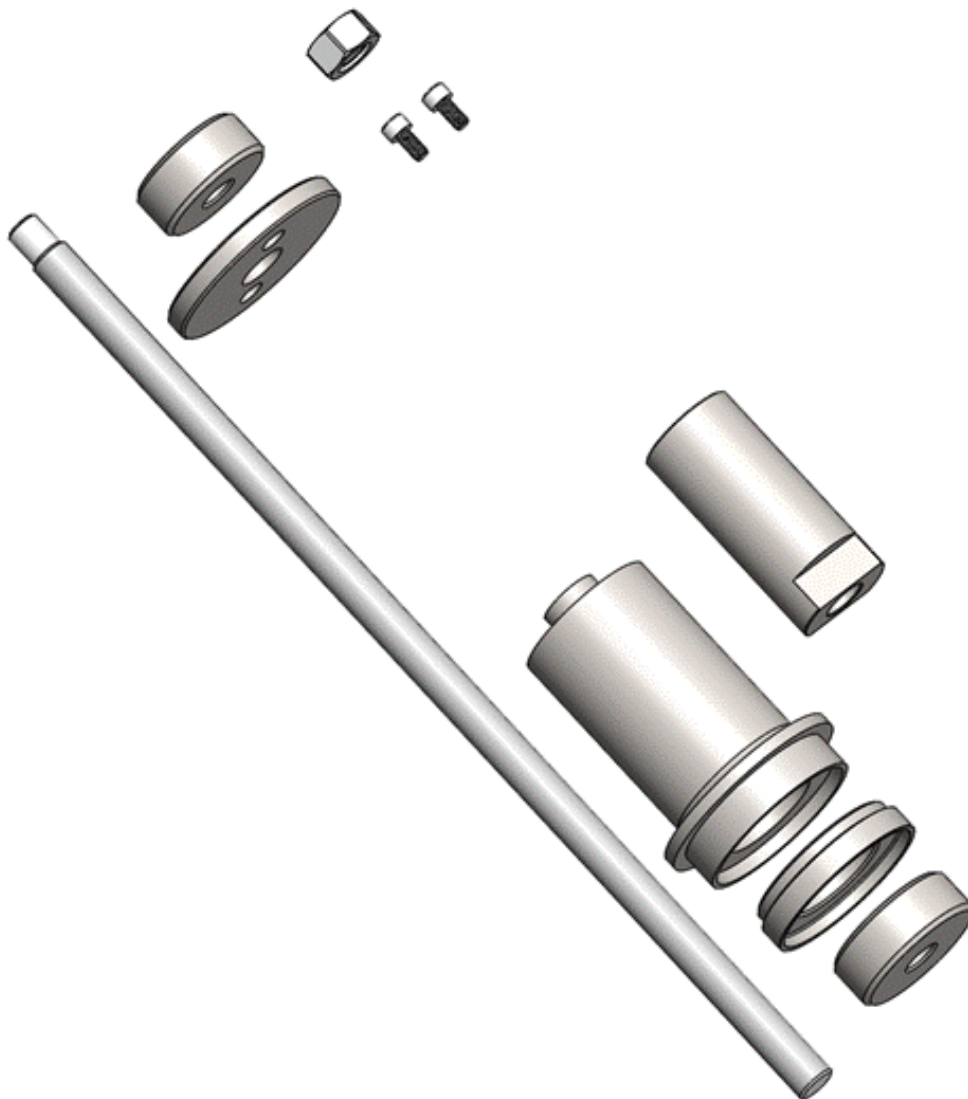

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions	Page
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	1
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

TABLE OF CONTENTS

General information	3
Safety information	7
Function description.....	10
Use	11
Breakdown and mishap.....	14
Maintenance	15
Dismantling/ Disposal.....	17
EC Declaration of conformity for machinery	18

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	Page
Approved B-O Kvist	Take over department		2
Status Approved	Original instructions		No. of pages 18
 DEVA MECANEYES		Document No. P2902-17 Instr	Rev. ind. 0

GENERAL INFORMATION

Instructions

This “Original instructions” is your direct guide in the correct usage and maintenance of the hydraulic press in question. The instructions must be studied carefully by all pertinent personnel before the hydraulic press is used.

"Original Instructions" means that it is a language version that has been developed and reviewed by the manufacturer. If there is no "Original instruction" in the user's language, it needs to be produced (translated). Such translated version shall be marked with "Translation of the original instructions". Such translations fall outside the manufacturer's responsibility.

The instructions should always be available to those who maintain and use the hydraulic press daily.

In addition, it is important that you:

- keep this instructions and other applicable documents for the entire life of the hydraulic press.
- forward the instructions and other applicable documents to other owners or users of the hydraulic press.
- add any supplements or modifications made by the manufacturer to the instructions.

Strictly observe the information mentioned in the instructions and found on the equipment. Serious personal injury and damages to the equipment can occur if you fail to observe this information.

Copyright

This instruction should be treated as confidential. It is intended solely for use by personnel authorized for this purpose. Information may only be disclosed to third parties upon written permission from the manufacturer. It is strictly prohibited to transmit or reproduce all or part of the content, or to sell or otherwise disseminate it, unless special permission has been expressly given in writing.

Responsibility

The manufacturer does not bear responsibility for personal injury or damage to equipment if this instruction is not observed.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 3
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

Marking

The hydraulic press is marked with the CE mark, Figure 1, which means that it is designed, manufactured, and described in accordance with EC Machinery Directive 2006/42/EC. The CE marking applies only when the hydraulic press is composed of the specified cylinder and pump provided by the user.



Figure 1 CE mark

Manufacturer

Deva Mecaneyes AB

Stansargränd 6

SE-721 30 Västerås

Sweden

Phone: +46 21-31 44 40

Warranty

The warranty period is 1 year from the date of delivery.

The warranty does not apply if the instructions have not been followed.

The warranty does not include Rehobot CHF 62 cylinder, and Rehobot pump, provided by the user.

Modification of the equipment

If the hydraulic press is rebuilt or supplemented with other products without the consent of the manufacturer, the CE-marking does not cover these. If such rebuilding or modification change the original function of the equipment, the CE-marking in its entirety ceases to apply.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	Page 4
Approved B-O Kvist	Take over department		No. of pages 18
Status Approved	Original instructions		Rev. ind. 0
 DEVA MECANEYES		Document No. P2902-17 Instr	

Intended use

The hydraulic press is intended for mounting bearing on shaft in the over arm on the following robots:

- IRB460
- IRB660

in connection with maintenance and repair work.

All other use is prohibited.

The hydraulic press must be used with cylinder Rehobot CHF 62 and pump from Rehobot with a working pressure of max 700 bar. These components are provided by the user.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	
Approved B-O Kvist	Take over department		Page 5
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

Technical data/Identification data

Max force: 6,7 tons
Weight: - kg
Drawing number: 2902-17-0001
ABB article number: 3HAC077982-001
Noise level: Hand pump <70 dBA

Pneumatic pump 76 dBA

Measured A-weighted emission sound
Pressure level LpA 76dB.
Uncertainty KpA 4dB.
Measurement method: The sound measurement performed at 1m distance. The pump stands on the floor, the sound meter measuring 1.6m above the floor.

Electrical pump 72,5 dBA .

Measured A-weighted emission sound
Pressure level LpA 72.5dB.
Uncertainty KpA 4dB.
Measurement method: The sound measurement performed at 1m distance. The pump stands on the floor, the sound meter measuring 1.6m above the floor.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	Page 6
Approved B-O Kvist	Take over department		No. of pages 18
Status Approved	Original instructions		Rev. ind. 0
		Document No. P2902-17 Instr	

SAFETY INFORMATION

General

Personnel working with the hydraulic press must have read the instructions and especially the chapter with safety information.

The instructions should always be available near the hydraulic press.

Failure to follow the safety instructions in these instructions may result in personal injury.

In addition to the instructions for use, all general and other applicable regulations for accident and environmental protection as well as general safety and health requirements must be followed. Such requirements may also e.g. include handling hazardous substances or providing/using personal protective equipment.

It is the responsibility of the operator to check before each use and, where applicable immediately report any visible damage on the hydraulic press.

It is the responsibility of the user to ensure that the hydraulic press is in good condition when used and that all relevant safety regulations and requirements are complied with.

The hydraulic press must immediately be taken out of service as soon as faults or deviations in the function are detected.

No alterations regarding extensions or alterations that may affect safety may be made without the manufacturer's permission.

Use only original parts. They meet the technical requirements and are a prerequisite for the guarantee to apply.

The prescribed maintenance intervals must be followed.

It is the user's responsibility to teach the staff to the required extent.

In the event of any uncertainty regarding the use of the hydraulic press, Deva Mecaneyes should be contacted.

Upon request, please provide hydraulic press 2902-17-0001 and serial number.

Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 7
Status Approved	Original instructions		No. of pages 18
 DEVA MECANEYES		Document No. P2902-17 Instr	Rev. ind. 0

Restrictions on use

The hydraulic press may only be used for its intended purpose. Any other use is prohibited.

Only Rehobot CHF 62 cylinder or equivalent may be used.

Only pumps with a maximum pressure of 700 bar may be used.

Do not touch a pressurized hose due to the risk of injury in the case of hose failure.



Signs and decals

Warning signs/decals and machine sign with CE mark on the hydraulic press must always be kept in legible condition. If any part that is equipped with a warning sign/decal or machine sign with CE mark is replaced, then a new warning sign/decal and machine sign with CE mark must be installed at the corresponding place. Damaged sign/decal and machine sign with CE mark must be replaced immediately.

Signal word

Pay attention to the following signal words:

WARNING – Indicates a hazard that is likely to result in death or serious injury if not avoided.

Warning of residual risks

Despite the built-in safeguards, there may be remaining risks. Information on such risks is given in this section.



WARNING!

Risk of projections in line with the drawbar when the press is under



WARNING!

Risks associated with hydraulic oil when handling this substance.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 8
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

Hydraulic oil

Always use high-quality hydraulic oil type ISO VG10 or equivalent.

Fire-fighting measures:

- Suitable extinguishing media: Powder, CO2, alcohol resistant foam or water spray (mist).
- Unsuitable extinguishing media: Water jet

The hydraulic oil is classified as hazardous according to Regulation (EC) 1272/2008 with changes.

See safety data sheet.



Personal protective equipment

The following personal protective equipment must be used to protect against risks from the hydraulic press:

- Safety shoes
- Safety glasses



Pump

Pump unit, which is held by the user, must be located such that inadvertent operation cannot take place.

When the pump unit is not connected, the hose must be placed so that it is not damaged and does not pose a danger to persons moving around the pump unit.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 9
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

FUNCTION DESCRIPTION

Structure

The hydraulic press parts, structure, and their placement in the storage box are shown in Figure 2-3.

- A. Drawbar
- B. Anvil
- C. Bearing adapter
- D. Support sleeve
- E. Press sleeve
- F. Hydraulic Cylinder
(provided by the user)
- G. Mounting washer
- H. Screw
- I. Anvil
- J. Nut
- K. CE sign
- L. Storage box

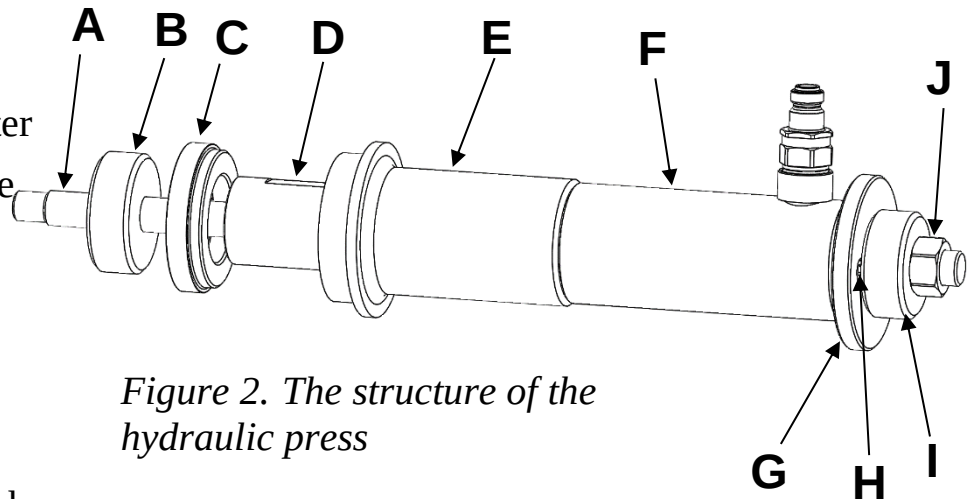


Figure 2. The structure of the hydraulic press

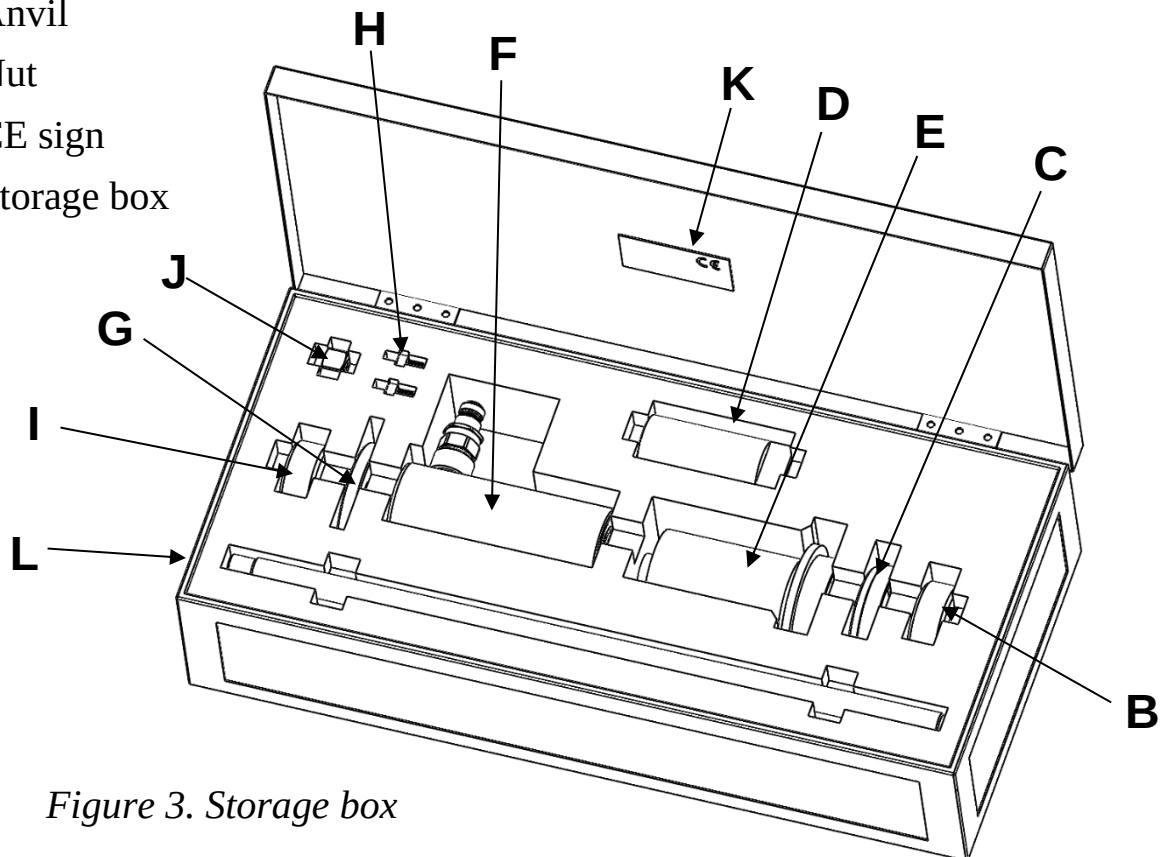


Figure 3. Storage box

Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	
Status Approved	Original instructions	Document No.	Page 10
		P2902-17 Instr	No. of pages 18
			Rev. ind. 0

USE

Prerequisites

The hydraulic press may only be used by personnel who meet the following conditions:

- is at least 18 years of age.
- is educated and has shown knowledge of the use of the hydraulic press.

Preparatory measures

In order for the hydraulic press to be used, it must be equipped with a hydraulic cylinder, which is provided by the user.

Before use:

- Pick up the required parts from the storage box.
- Check that the hydraulic press does not have broken or otherwise defective parts. Any damage to the hydraulic press must be repaired by maintenance personnel before use.
- Check that no persons are in the risk area of the hydraulic press, which is in line with the drawbar when the press is pressurized.

Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 11
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

Mounting of bearing– IRB460/660

The following steps shall be followed when the bearing is to be mounted on the shaft of the IRB460/660:

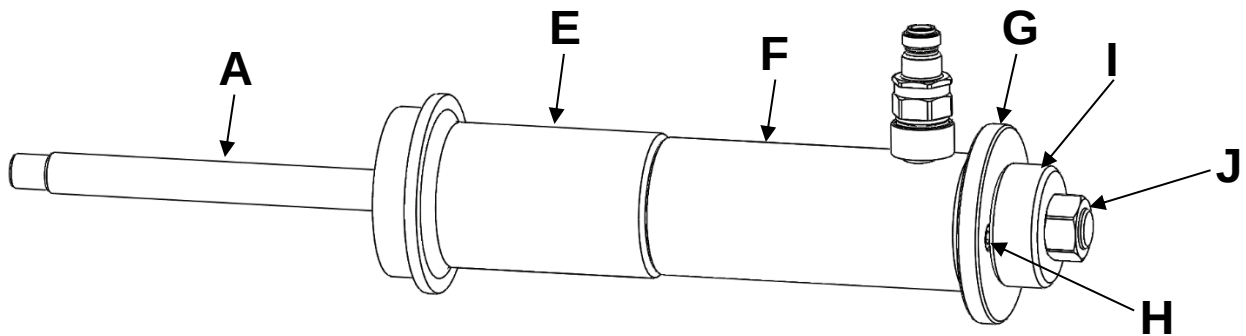


Figure 4. Drawbar with press sleeve and hydraulic cylinder

1. Assemble the hydraulic cylinder (F), press sleeve (E), and the mounting washer (G) with the screws (H), use 5 mm Allen key. Insert the drawbar (A) through the cylinder (F) and fasten the anvil (I) and the nut (J).

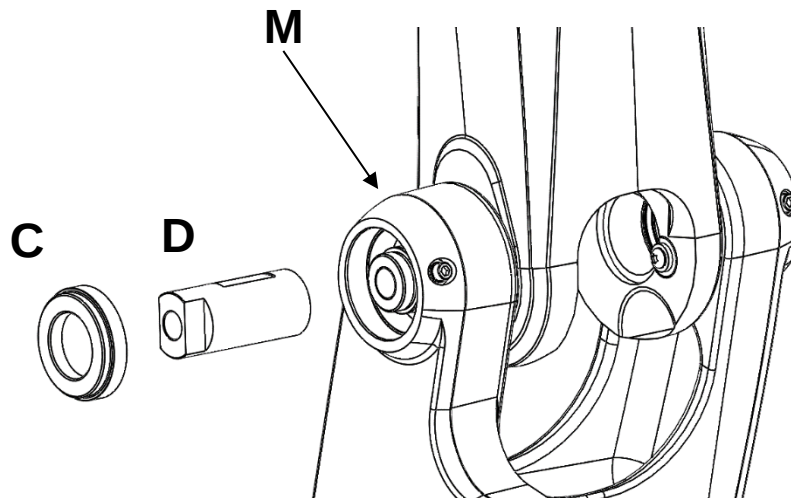


Figure 5. Shaft pin with support sleeve and bearing adapter.

2. Screw the support sleeve (D) on to the shaft pin (M). Slide the bearing (and for IRB660, the bearing adapter (C)) over the support sleeve (D).

Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 12
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

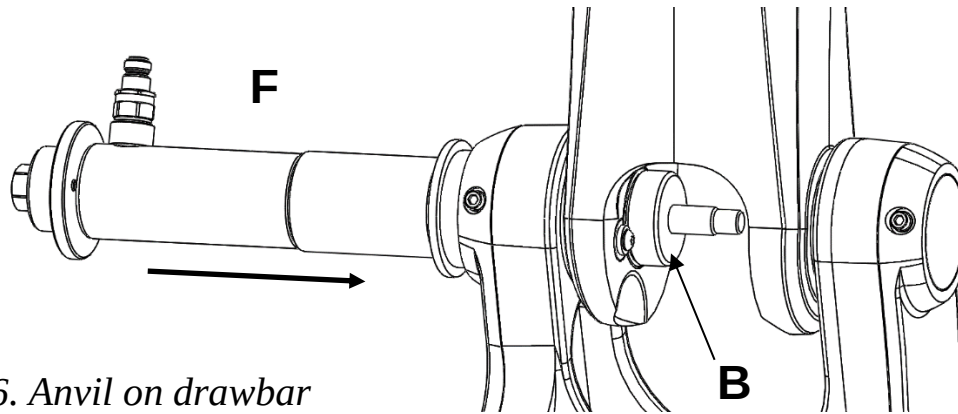


Figure 6. Anvil on drawbar

3. Insert the hydraulic cylinder (F) with drawbar through the hole of the shaft. Fasten the anvil (B) on the end of the drawbar.
4. Make sure that the anvils (B) and (I) are securely fastened.

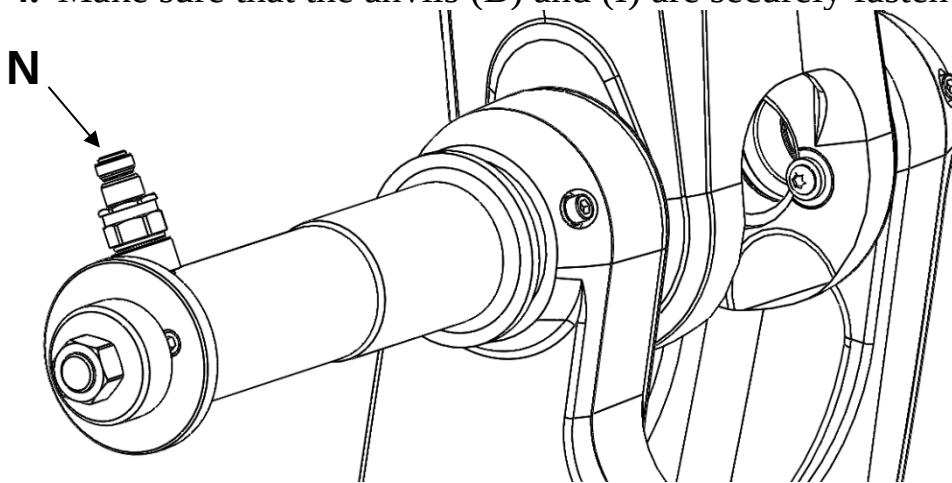


Figure 7. Mounted hydraulic press

5. Connect the hydraulic hose of the pump to the cylinder coupling (N).
6. Pressurize the pump to mount the bearing races.
Never touch the **pressurized** hose due to risk of serious injury in case of a rupture.
7. Depressurize the pump.
8. Disconnect the hydraulic hose from the cylinder coupling (N).
9. Unscrew the anvil (I) and remove the cylinder (F) and the drawbar (B).
10. Disassemble all the parts and place them in the designated area of the storage box.



Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 13
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

BREAKDOWN AND MISHAP

In the event of a breakdown or mishap, the pressure in the pump shall be relieved and compressed air or electricity disconnected before any action on the implement is started.

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	Page 14
Approved B-O Kvist	Take over department		No. of pages 18
Status Approved	Original instructions		Rev. ind. 0
 DEVA MECANEYES		Document No. P2902-17 Instr	

MAINTENANCE

General

In order for the hydraulic press to function with as few operating disturbances as possible, it must be serviced regularly.

Maintenance refers to measures for service and repair.



WARNING!


All maintenance must be carried out by trained maintenance personnel so that no personal or product damage occurs.

Preventive maintenance

Preventive maintenance should be performed and documented once a year. In connection with preventative maintenance, the following should be checked/corrected:

- Threads on drawbar (1) and screws (2), and nut (3): Regarding wear, see table 1.
- Threads and surfaces of anvil (4) and (8), and support sleeve (6): Regarding wear.
- Surfaces on the mounting washer (5) and bearing adapter (9): Regarding wear.
- Press sleeves (7): Regarding wear and function.
- CE sign (10): That it is mounted correctly and readable.

Maintenance work may only be done with disconnected power supply (hydraulics).

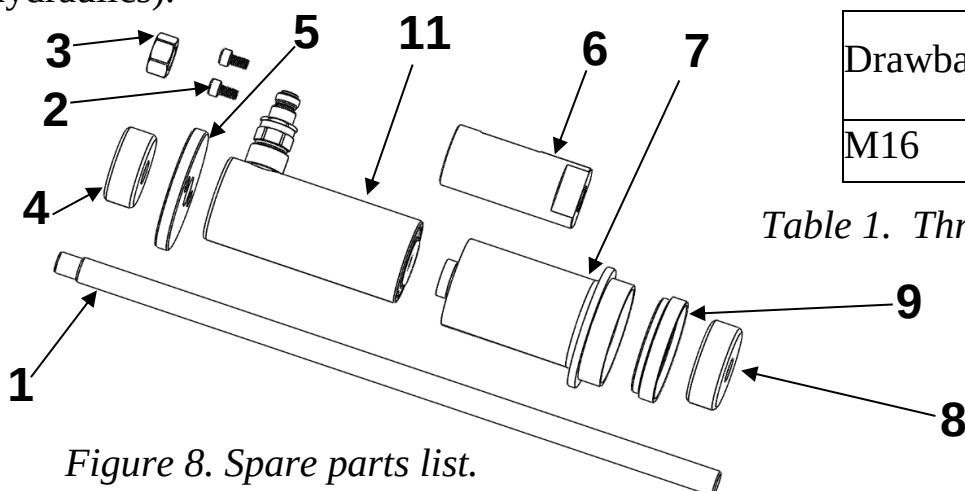

Drawbar	Min outer diameter
M16	15,5 mm

Table 1. Threads on drawbar

Figure 8. Spare parts list.

Prepared William Noritis	Inhouse	Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 15
Status Approved	Original instructions		No. of pages 18
		Document No. P2902-17 Instr	Rev. ind. 0

Hydraulic components

Hydraulic components are maintained according to the component manufacturer's recommendations.

Reservdelslista

Figures 8-9 and Table 2 show which components are considered as spare parts. Contact your local ABB office if spare parts are needed. Enter the item number and the desired quantity.

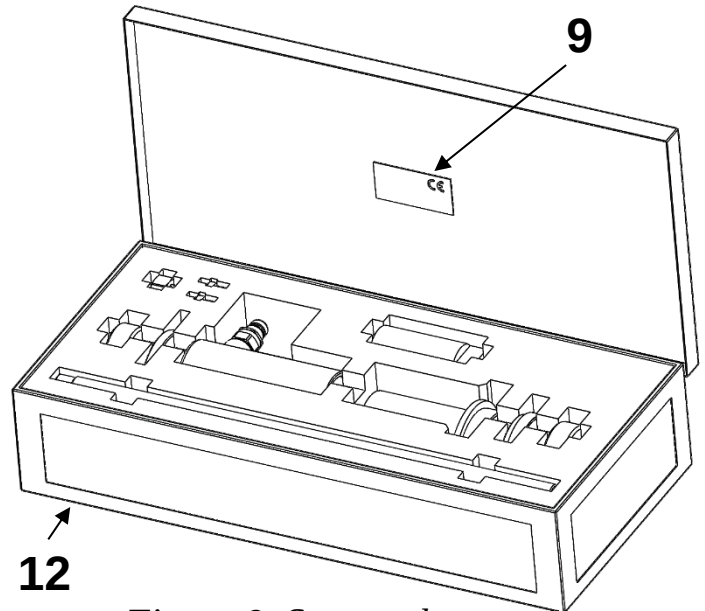


Figure 9. Storage box

Pos	Description	Article nr	ABB-nummer
1	Drawbar	2634-0010	3HAC063132-003
2	Screw	MC6S M6x12H	9ADJ450019P0156
3	Nut	M6M M16	9ADA267-10
4	Anvil	2634-0002	3HAC063128-003
5	Press sleeve	2634-0007	3HAC079477-001
6	Support sleeve	2634-0182	3HAC063120-005
7	Press sleeve	2634-0181	3HAC063120-004
8	Anvil	2634-0061	3HAC063128-011
9	Bearing adapter	2634-0183	3HAC063120-006
10	CE sign	2902-17-0004	3HAC077982-004
11	Hydraulic cylinder	CHF62	3HAC11731-1
12	Storage box	2902-17-0002	3HAC077982-003

Table 2. Spare parts list

Prepared William Noritis	Responsible department Inhouse	Description	Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)		Page 16
Status Approved	Original instructions			No. of pages 18
		Document No.	P2902-17 Instr	
			Rev. ind.	0

DISMANTLING/ DISPOSAL

The hydraulic press is dismantled in detail.

Details are sorted as scrap metal and left for recycling.

Oil is left as environmentally hazardous material

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions Instruction for 2902-17-0001 (3HAC077982-001)	Page 17
Approved B-O Kvist	Take over department		No. of pages 18
Status Approved	Original instructions		Rev. ind. 0
		Document No. P2902-17 Instr	

EC DECLARATION OF CONFORMITY FOR MACHINERY

Original

Directive 2006/42/EC, Annex II 1A

Manufacturer (and where appropriate his authorised representative):

Company: Deva Mecaneyes AB

Address: Stansargränd 6, SE-721 30 Västerås

Hereby declares that:

Type of machinery: Hydraulic press

Model: 2902-16-0001

ABB article number: 3HAC076203-001

Complies with the requirements of Machinery Directive 2006/42/EC.

Complies also with applicable requirements of the following EC directives:

The following harmonized standards have been applied

EN ISO 12100:2010 Maskinsäkerhet - allmänna konstruktionsprinciper - Riskbedömning och riskreducering

EN ISO 4413:2010 Maskinsäkerhet - Hydraulik - Allmänna regler och säkerhetskrav för system och deras komponenter

The following other standards and specifications have been applied:

Authorized to compile the technical file:

Name: William Noritis

Address: Deva Mecaneyes, Stansargränd 6, SE-721 30 Västerås

Signature:

Place and date: Västerås 2020-10-23

Name:

Name: Magnus Welén

Position: CEO

Prepared William Noritis	Responsible department Inhouse	Description Technical Provisions	
Approved B-O Kvist	Take over department	Instruction for 2902-17-0001 (3HAC077982-001)	Page 18
Status Approved	Original instructions		No. of pages 18
 DEVA MECANEYES		Document No. P2902-17 Instr	Rev. ind. 0