



ROBOTICS

Product specification

IRB 8700



Trace back information:
Workspace 26B version a10
Checked in 2026-06-16
Skribenta version 5.6.019

Product specification

IRB 8700

IRC5

Document ID: 3HAC052852-001

Revision: T

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

Table of contents

Overview of this product specification	7
1 Description	11
1.1 Structure	11
1.1.1 Introduction	11
1.1.2 Different robot variants	14
1.1.3 Technical data	15
1.2 Standards	17
1.2.1 Applicable standards	17
1.3 Impacting robot lifetime	19
1.4 Installation	25
1.4.1 Introduction to installation	25
1.4.2 Technical data	26
1.4.3 Assembling the manipulator	30
1.5 Calibration and references	36
1.5.1 Calibration methods	36
1.5.2 Fine calibration	38
1.5.3 Absolute Accuracy calibration	39
1.6 Load diagrams	41
1.6.1 Introduction	41
1.6.2 Load diagrams	42
1.6.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement	48
1.6.4 Wrist torque	50
1.6.5 Maximum TCP acceleration	51
1.7 Fitting equipment	52
1.8 Maintenance and troubleshooting	58
1.9 Robot motion	59
1.9.1 Robot motion	59
1.9.2 Performance according to ISO 9283	62
1.9.3 Velocity	63
1.9.4 Robot stopping distances and times	64
1.10 Servo gun	65
1.10.1 Introduction	65
1.10.2 Stationary Gun	66
1.10.3 Robot Gun	67
2 DressPack	69
2.1 Introduction	69
2.1.1 Included options	69
2.1.2 Product range	71
2.1.3 Limitations of robot movements	72
2.1.4 Impact on DressPack lifetime	73
2.1.5 Information structure	74
2.2 DressPack	75
2.2.1 Introduction	75
2.2.2 Built-in features for upper arm DressPack	76
2.2.3 Interface descriptions for DressPack	77
2.2.4 Dimensions	82
2.3 Type H/HS/HSe	83
2.3.1 Introduction	83
2.3.2 Configuration result for Type H HS HSe	85
2.3.3 Interface description for stationary gun	87
2.3.4 Summary common options Type H HS HSe	88
2.3.5 Summary options required for Type Hs HSe	89

Table of contents

2.4	Type Se	90
2.4.1	Introduction	90
2.4.2	Configuration result for Type Se	92
2.4.3	Summary common options for Type Se	94
2.5	Connector kits	95
2.5.1	Base - Connector kits	96
2.5.2	Axis 3 - Connector kits	98
2.5.3	Axis 6 - Connector kits	99
3	Specification of variants and options	101
3.1	Introduction to variants and options	101
3.2	Manipulator	102
3.3	Equipment	103
3.4	Floor cables	107
3.5	Process DressPack	108
3.6	DressPack floor cables	109
3.7	DressPack Lower Upper arm	110
3.8	Connector kits	111
3.9	Servo Gun	112
3.10	Process cabinet	113
3.11	User documentation	114
3.12	Warranty	115
4	Accessories	117
4.1	Introduction to accessories	117
Index		119

Overview of this product specification

About this product specification

It describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensions prints
- The fulfillment of standards, safety and operating requirements
- The load diagrams, mounting or extra equipment, the motion and the robot reach
- The specification of variants and options available

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

Users

It is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel
- Robot programmers
- Project leaders
- Design engineers

References

Reference	Document ID
<i>Product specification - Controller software IRC5</i>	<i>3HAC050945-001</i>
<i>Product specification - Controller IRC5</i>	<i>3HAC047400-001</i>
<i>Product manual - IRB 8700</i>	<i>3HAC052853-001</i>
<i>Product manual - DressPack IRB 8700</i>	<i>3HAC055802-001</i>

Revisions

Revision	Description
-	First release
A	• Value Max load for 800/3.50 "Vertical Wrist" changed from 950 to 1,000 kg. • Section "SpotWelding cabinet" updated.
B	• Warranty information for DressPack updated. • Working range updated. • Main dimensions updated.

Continues on next page

Revision	Description
C	Published in release R17.1. The following updates are done in this revision: • Illustrations for Tool flange is changed, see Holes for fitting extra equipment on page 54 • Major structural change in chapter Specification of variants and options • Restriction of load diagram added.
D	Published in release R17.2. The following updates are done in this revision: • Tool flange drawings changed • Updated list of applicable standards. • Delete option 828-1, 828-2, 768-3 and 782-1 as they were all phased out.
E	Published in release R18.1. The following updates are done in this revision: • Added reference to DressPack/SpotPack manual. • TCP acceleration added.
F	Published in release 19B. The following updates are done in this revision: • Updated information about <i>Absolute Accuracy</i>.
G	Published in release 19C. The following updates are done in this revision: • Graphics for DressPack updated.
H	Published in release 20A. The following updates are done in this revision: • M8 cable lug description added in DressPack section.
J	Published in release 20D. The following updates are done in this revision: • Warranty section updated
K	Published in release 21B. The following updates are done in this revision: • Removed Axis resolution. • Text regarding fastener quality is updated. • Updated information about the option <i>Extended working range</i>. • Removed option (SpotPack phase out) 782-13 Bosch MFDC ProfiNet, 858-1 Bosch Adaptive control, 788-1 Forced air cooling, 789-1 Earth fault protection unit, 790-1 Contactor for weld power, 791-1 Weld power cable, 7 m, 791-2 Weld power cable, 15 m, 809-1 process cable to stationary gun, 7 m, 809-2 process cable to stationary gun, 15 m, 792-1 Type S, 792-2 Type HS, 793-1 Second water return, 797-1 7m, 797-2 15m, 797-3 22m, 797-4 30m.
L	Published in release 21D. The following updates are done in this revision: • Updated the available type for DressPack Type H/HS/HSe and Type Se.
M	Published in release 22A. The following updates are done in this revision: • Added production data. See Production data on page 40.
N	Published in release 23C. The following updates are done in this revision: • Added RAL code in manipulator color introduction. • Corrections done in the DressPack connector kits, see Connector kits on page 95.
P	Published in release 24D. The following updates are done in this revision: • Updated the section Technical data on page 26.
Q	Published in release 25A. The following updates are done in this revision: • Corrected images in section for interface descriptions for DressPack.

Revision	Description
R	Published in release 25.3. The following updates are done in this revision: • Company name updated to reflect current legal entities. • Updated portal name from myABB to ABB Robotics One.
S	Published in release 26.1. The following updates are made in this revision: • Removed duplication of robot weight specification. • Updated data for power consumption at max load. • Company name updated to reflect current legal entities.
T	Published in release 26B. The following updates are made in this revision: • Corrected color code for option 209-1 ABB orange standard.

This page is intentionally left blank

1 Description

1.1 Structure

1.1.1 Introduction

General

The IRB 8700 serie is ABB Robotics 8:th generation of heavy payload robot, high performance industrial robots. With focus on high production capacity, compact design, simple service and low maintenance cost. The IRB 8700 is a general purpose robot targeting market segment as for example Automotive (BIW), Foundry, Mining and Metal fabrication.

Software product range

We have added a range of software products - all falling under the umbrella designation of Active Safety - to protect not only personnel in the unlikely event of an accident, but also robot tools, peripheral equipment and the robot itself.

Process options

There are a large number of process options for Material Handling/SpotWelding integrated in the robot.

Operating system

The robot is equipped with the IRC5 controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. see *Product specification - Controller IRC5*.

Safety

Safety standards valid for complete robot, manipulator and controller.

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software, see *Product specification - Controller software IRC5*.

Protection type Foundry Plus 2

Robots with the option Foundry Plus 2 are designed for harsh environments where the robot is exposed to sprays of coolants, lubricants and metal spits that are typical for die casting applications or other similar applications.

Typical applications are spraying insertion and part extraction of die-casting machines, handling in sand casting and gravity casting, etc. (Please refer to Foundry Prime robots for washing applications or other similar applications). Special care must be taken in regard to operational and maintenance requirements for

Continues on next page

1 Description

1.1.1 Introduction

Continued

applications in foundry are as well as in other applications areas. Please contact ABB Robotics Sales organization if in doubt regarding specific application feasibility for the Foundry Plus 2 protected robot.

The robot is painted with two-component epoxy on top of a primer for corrosion protection. To further improve the corrosion protection additional rust preventive are applied to exposed and crucial areas, e.g. has the tool flange a special preventive coating. Although, continuous splashing of water or other similar rust formation fluids may cause rust attach on the robots unpainted areas, joints, or other unprotected surfaces. Under these circumstances it is recommended to add rust inhibitor to the fluid or take other measures to prevent potential rust formation on the mentioned.

The entire robot is IP67 compliant according to IEC 60529 - from base to wrist, which means that the electrical compartments are sealed against water and solid contaminants. Among other things all sensitive parts are better protected than the standard offer.

Selected Foundry Plus 2 features:

- Improved sealing to prevent penetration into cavities to secure IP67
- Additional protection of cabling and electronics
- Special covers that protect cavities
- Well-proven connectors
- Nickel coated tool flange
- Rust preventives on screws, washers and unpainted/machined surfaces
- Extended service and maintenance program

The Foundry Plus 2 robot can be cleaned with appropriate washing equipment according to the robot product manual. Appropriate cleaning and maintenance is required to maintain the protection, for example can rust preventive be washed off with wrong cleaning method.


Available robot variants

The option Foundry Plus 2 might not be available for all robot variants.

See [Specification of variants and options on page 101](#) for robot versions and other options not selectable together with Foundry Plus 2.

Continues on next page

Robot axes

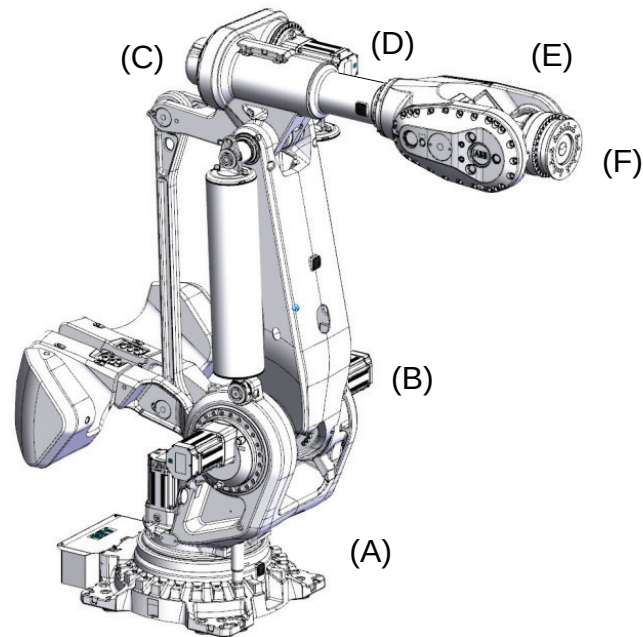

xx1400002403

Pos	Description	Pos	Description
A	Axis 1	B	Axis 2
C	Axis 3	D	Axis 4
E	Axis 5	F	Axis 6

1 Description

1.1.2 Different robot variants

1.1.2 Different robot variants

General

The IRB 8700 is available in two variants.

Robot variants

The following standard robot versions are available.

Robot	Handling capacity (kg)	Handling capacity for LeanID (kg)	Reach (m)
IRB 8700	550 kg	475 kg	4.20 m
IRB 8700	800 kg	630 kg	3.50 m



Note

If option 780-4, LeanID is selected, the payload will decrease as stated above, for detailed information see [Load diagrams on page 41](#)

1.1.3 Technical data

Available variants

The IRB 8700 is available in two variants, for floor mounting.


Robot variant	Maximum handling capacity (kg)	Maximum reach at wrist center (m)
IRB 8700-550/4.20	550	4.20
IRB 8700-800/3.50	800	3.50

Airborne noise level

Data	Description	Note
Airborne noise level	The sound pressure level outside the working space.	< 71 dB (A) Leq (acc. to machinery directive 2006/42/EG)

Power consumption at max load

Type of movement	-800/3.50
ISO Cube Max. velocity	4.14 kW
Robot in calibration position	-800/3.50
Brakes engaged	0.24 kW
Brakes disengaged	1.32 kW

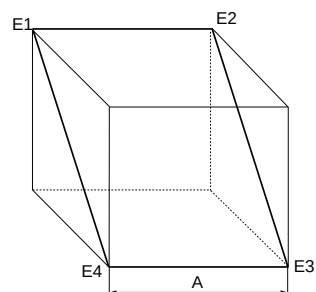

xx1000000101

Pos	Description
A	1,000 mm


Continues on next page

1 Description

1.1.3 Technical data

Continued

Main dimensions

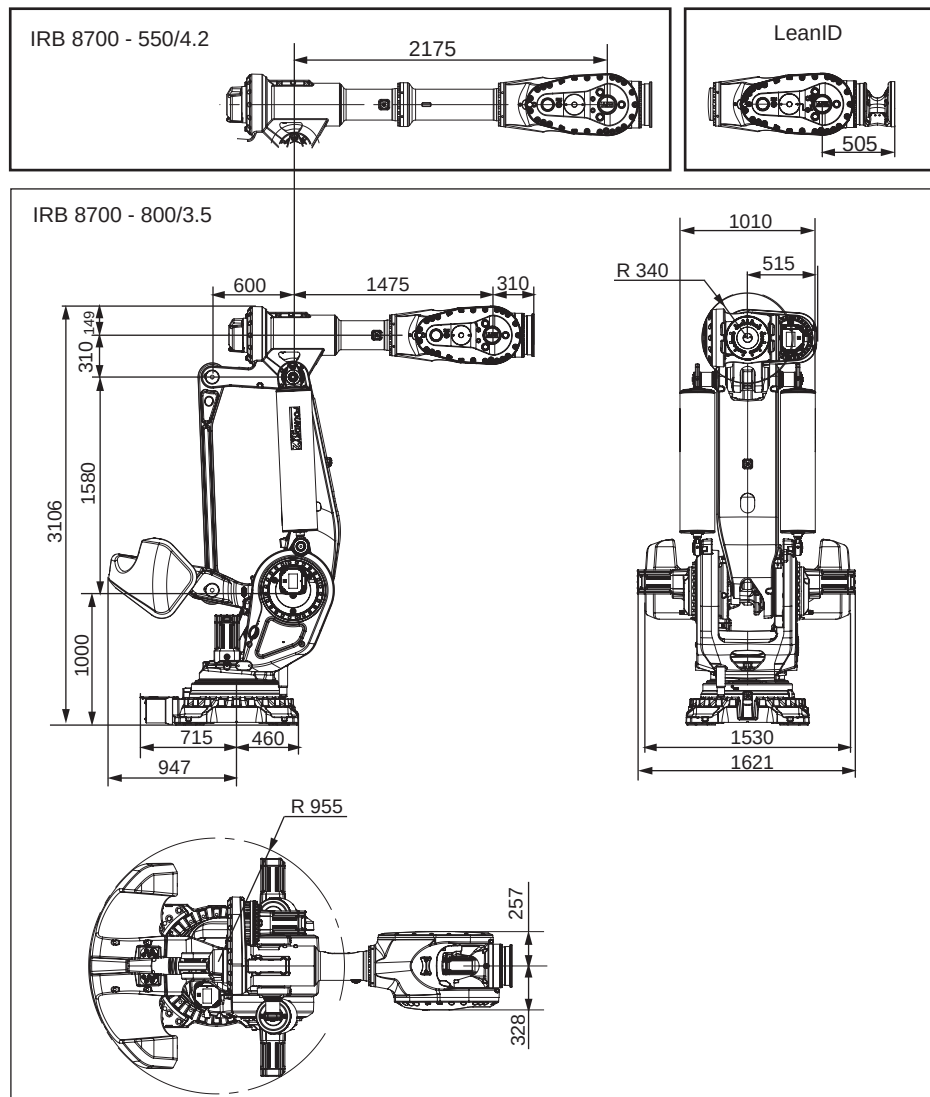

xx1400002868

1.2 Standards

1.2.1 Applicable standards



Note

The listed standards are valid at the time of the release of this document. Phased out or replaced standards are removed from the list when needed.

General

The product is designed in accordance with ISO 10218-1:2011, Robots for industrial environments - Safety requirements -Part 1 Robots, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviations from ISO 10218-1:2011, these are listed in the declaration of incorporation which is part of the product delivery.

Normative standards as referred to from ISO 10218-1

Standard	Description
ISO 9283:1998	Manipulating industrial robots - Performance criteria and related test methods
ISO 10218-2	Robots and robotic devices - Safety requirements for industrial robots - Part 2: Robot systems and integration
ISO 12100	Safety of machinery - General principles for design - Risk assessment and risk reduction
ISO 13849-1:2006	Safety of machinery - Safety related parts of control systems - Part 1: General principles for design
ISO 13850	Safety of machinery - Emergency stop - Principles for design
IEC 60204-1	Safety of machinery - Electrical equipment of machines - Part 1: General requirements

Region specific standards and regulations

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
ANSI/UL 1740	Safety standard for robots and robotic equipment
CAN/CSA Z 434	Industrial robots and robot Systems - General safety requirements

Other standards used in design

Standard	Description
ISO 9787:2013	Robots and robotic devices -- Coordinate systems and motion nomenclatures
IEC 61000-6-2	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
IEC 61000-6-4	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments

Continues on next page

1 Description

1.2.1 Applicable standards

Continued

Standard	Description
ISO 13732-1:2006	Ergonomics of the thermal environment - Part 1
IEC 60974-1:2012 ⁱ	Arc welding equipment - Part 1: Welding power sources
IEC 60974-10:2014 ⁱ	Arc welding equipment - Part 10: EMC requirements
ISO 14644-1:2015 ⁱⁱ	Classification of air cleanliness
IEC 60529:1989 + A2:2013	Degrees of protection provided by enclosures (IP code)

ⁱ Only valid for arc welding robots. Replaces IEC 61000-6-4 for arc welding robots.

ⁱⁱ Only robots with protection Clean Room.

1.3 Impacting robot lifetime

Introduction

The expected lifetime of a robot is an important factor when planning an installation. This information is aiming to help you to maximize the lifetime of your robot and avoid unnecessary downtime or repair.

The lifetime of a robot is influenced by the following, but not limited to, factors:

- [Robot type selection on page 19](#)
- [Duty factor on page 19](#)
- [Environmental conditions on page 20](#)
- [Application and usage on page 20](#)
- [Design limitations on page 21](#)
- [Maintenance on page 22](#)
- [Individual lifetime variability on page 22](#)
- [Extreme usage on page 22](#)

Robot type selection

Selecting the right robot for the application is generally done based on payload and reach criteria, but other factors can influence the selection, such as the duty factor. Selecting the most suitable variant is crucial to achieve the expected high performance, uptime, and lifetime. Always select a robot in accordance with the intended use, see [Structure on page 11](#).

ABB robots are capable of high accelerations and speeds. It is generally recommended to use RobotStudio to find out if a robot model is suitable for a specific application and duty factor. RobotStudio is an excellent tool to help with the assessment of the duty factor and the selection of the most suitable robot variant.

This robot is not specifically designed for use in demanding applications with a very high duty factor. If used in such conditions, a significant reduction in lifetime is possible for all axes, depending on the cycle. See [Extreme usage on page 22](#).

When selecting the robot variant, consider using application-specific robot, and suitable protection type.



Note

Use the Mechanical Analysis add-in in RobotStudio (see details below) for help with the assessment, or get technical support from ABB.

Duty factor

Duty factor is the percentage of time the robot is moving divided by the total time, including movement and wait time during the complete robot work cycle. It is a measurement of how much the robot is being used. Gearbox lifetime is reduced more rapidly by a higher duty cycle than by a lower one. See [Extreme usage on page 22](#).

Continues on next page

1 Description

1.3 Impacting robot lifetime

Continued



Note

The duty factor impact on lifetime can be analyzed in the add-in *Mechanical Analysis* in RobotStudio (see details below) and *Service Information System* (SIS) data in the controller. Contact ABB to analyze the SIS data.

Environmental conditions

Following factors within environmental conditions of the robot has an impact on the robot lifetime:

- Temperature:

The robot usage at high temperatures or extreme usage can lead to gearbox and motor cooling problems. Observe operating temperature limits stated in manipulator product manual. Extreme usage normally requires means of reduction of motor and gearbox oil heat.



Note

The add-in Mechanical Analysis in RobotStudio (see details below) or technical support from ABB can provide recommendation whether means of reduction of motor and gearbox oil heat is required.

- Exposure to chemicals might impact sealings, which can cause oil leakage.
- Vibrations caused by not following the foundation requirements might cause reduction of lifetime, for example for bearings. See [Requirements, foundation on page 28](#).
- Cleaning. Wrong cleaning can cause particles entering the sealings which can cause oil leakage. Proper cleaning is described in *Product manual - IRB 8700*.

Application and usage

Following factors within robot application and usage has an impact on the robot lifetime:

- Payload definition and overload:

It is important to define the payload within specification and correctly defined tool data. See section [Load diagrams on page 42](#), and *Technical reference manual - RAPID Overview*.

The service routine for load identification, *LoadIdentify*, is available to support tool data definition. See *Operating manual - IRC5 with FlexPendant*.

- Acceleration/deceleration:

The gearbox lifetime is reduced more rapidly by high accelerations/decelerations than by lower ones.



Note

Smoother movements bring reduced energy consumption.

Continues on next page



Note

Acceleration/deceleration can be modified with the instruction AccSet. See *Technical reference manual - RAPID Overview*.

Acceleration/deceleration is optimized by using automatic path planning functionality, either offline, or in RobotStudio, or using the online software.

- Limited movements:

If the range or the rotation angle for an axis is 10° or less, the expected life of the reduction gears may be reduced due to poor lubrication of internal parts or the internal parts being subject to a concentrated load. Add extra lubrication motion to the robot program or to maintenance schedule.



Note

Use RobotStudio *Signal Analyzer* or get technical support from ABB.

- High forces applied externally to the manipulator:

Some applications or not correctly programmed paths apply external forces to the manipulator, which might reduce its lifetime. Example of external force: gripper under constraint when gripping a part or load sharing between multiple robots.

- Number of collisions:

Collisions, especially at high speed and/or with high loads reduce the lifetime of the gearboxes. Avoid collisions and set collision detection sensitivity to the appropriate level.



Note

See the application manual for the controller software, section *Collision detection*, listed in [References on page 7](#).

- Number of emergency stops:

Emergency stops, especially at high speed and/or high loads reduce the lifetime of the gearboxes. Whenever permitted by risk assessment, set the robot stopping functions to stop category 1.



Note

See the product manual for the robot controller, listed in [References on page 7](#).

Design limitations

See the section *Expected component life* in *Product manual - IRB 8700*.

Continues on next page

1 Description

1.3 Impacting robot lifetime

Continued

Maintenance

The maintenance and use of the robot will affect the performance and lifetime. For example:

- Preventive maintenance will optimize the lifetime of the robot. The recommended maintenance activities and intervals are described in *Product manual - IRB 8700*.
- Observance of lubricant types and maintenance periods recommended by ABB.
- Possible pollution of the lubricant by an external cause, for example, water in the oil caused by high humidity.
- Extreme usage, for example high duty factor or environmental factors, will affect the maintenance schedule, for example, shorter intervals for oil change.

Contact your local ABB office to get technical support from ABB.

Individual lifetime variability

The lifetime varies with individual robots. For example, a cycle with a lower duty factor may fail earlier than one with a higher duty factor. But a cycle with a higher duty factor is more likely to fail earlier than a cycle with lower duty factor.

Extreme usage


Examples of extreme usage in regard to movement: a stress index range that shows up as red (51) in the RobotStudio add-in *Mechanical Analysis*, press tending application, very severe palletizing applications, major use of axis 1, 2, or 3 movement.

The controller can issue a duty factor warning on the FlexPendant, if applicable. See the chapter *Troubleshooting* in *Product manual - IRB 8700*.

Extreme usage requires specific maintenance, for example, shorter interval for oil change. See *Maintenance schedule* in *Product manual - IRB 8700*.

Summary

The diagram illustrates the relationship between robot run time and failure possibility.

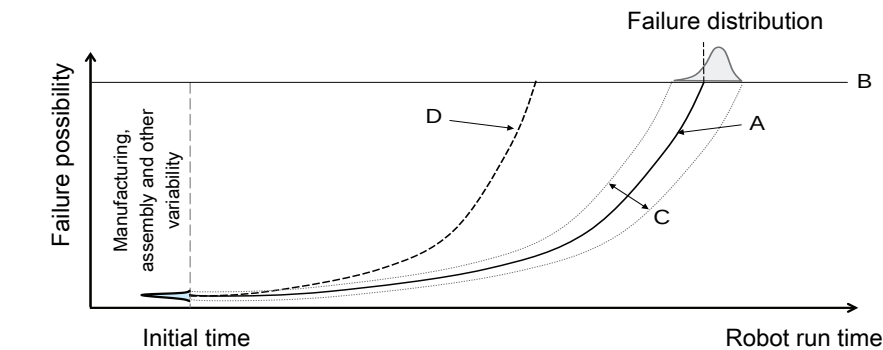

xx2500001942

A	Design lifetime
---	-----------------

Continues on next page

B	Failure threshold
C	Individual variability
D	Negatively affected lifetime

The curve (A) represents the design lifetime, showing how failure probability increases over time following a normal distribution pattern. The failure threshold (B) indicates the point at which component failure becomes likely.

Individual variability between robots is shown by the dotted lines (C), representing the natural variation in component life due to manufacturing, assembly, and other factors. This variability means that while most robots will follow the design lifetime curve, some individual units may experience earlier or later failures within the normal distribution.

As highlighted with the curve (D) in the diagram, robot lifetime can be negatively affected by not following best practices in the key areas discussed in this chapter:

- [Robot type selection on page 19](#)
- [Duty factor on page 19](#)
- [Environmental conditions on page 20](#)
- [Application and usage on page 20](#)
- [Maintenance on page 22](#)

By adhering to the recommendations outlined in each of these sections, users can maximize their robot's operational lifetime and ensure performance stays within the design lifetime curve, avoiding premature failure and unnecessary downtime.

Available tools

There are several tools available throughout the lifecycle of an ABB robot, from support with selecting the most suitable manipulator and optimizing its lifetime, to operation, maintenance, and repair:

ABB toolbox	Type	Product lifecycle		
		Sales, pre-study	Installation, commissioning	Operation, maintenance, repair
Product specification	Document	x	x	
Product manual	Document		x	x
Mechanical Analysis add-in	Add-in in RobotStudio	x	x	x
Service Information System (SIS) / Condition Based Maintenance (CBM)	RobotWare functionality / Customer service analysis		x	x
Connected Services	Hardware and Software		x	x
Automatic Path Planning	RobotStudio functionality and online software	x	x	(x)

Continues on next page

1 Description

1.3 Impacting robot lifetime

Continued

ABB toolbox	Type	Product lifecycle		
		Sales, pre-study	Installation, commissioning	Operation, maintenance, repair
Signal Analyzer / TuneMaster	RobotStudio functionality / Software	x	x	x
ABB support	Customer support	x	x	x

1.4 Installation

1.4.1 Introduction to installation

General

Both versions of IRB 8700 should be mounted on to the floor or tilted to $\pm 15^\circ$ (around the Y-axis or Y-axis). Depending on the robot version, an end effector with max. weight of 550 to 800 kg including payload, can be mounted on the tool flange (axis 6). See [Load diagrams on page 41](#).

Extra loads

Extra load (valve packages, DressPack) of 50 kg, which is included in the load diagrams, can be mounted on the upper arm. An extra load of 500 kg can also be mounted on the frame of axis 1.

See [Fitting equipment on page 52](#).

Working range limitation

The working range of axes 1 can be limited by mechanical stops as option. See [Working range limitation on page 105](#).

Explosive environments

The robot must not be located or operated in an explosive environment.

1 Description

1.4.2 Technical data

1.4.2 Technical data

Weight, robot

The table shows the weight of the robot.

Robot model	Weight
IRB 8700	4,750 kg



Note

The weight does not include tools and other equipment fitted on the robot.

Mounting positions

The table shows valid mounting options for the manipulator.

Mounting option	Installation angle	Note
Floor mounted	0°	



Note


The actual mounting angle must always be configured in the system parameters, otherwise the performance and lifetime is affected. See the product manual for details.

Continues on next page

Loads on foundation, robot

The illustration shows the directions of the robots stress forces.

The directions are valid for all floor mounted, suspended and inverted robots.

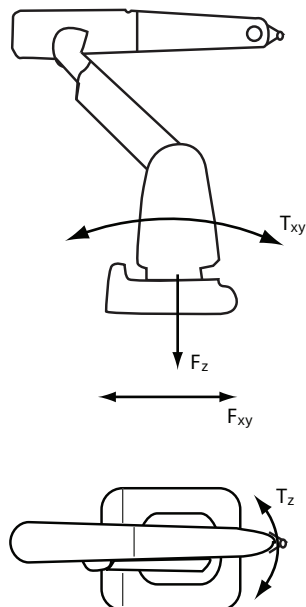

xx1100000521

F_{xy}	Force in any direction in the XY plane
F_z	Force in the Z plane
T_{xy}	Bending torque in any direction in the XY plane
T_z	Bending torque in the Z plane

The table shows the various forces and torques working on the robot during different kinds of operation.

**Note**

These forces and torques are extreme values that are rarely encountered during operation. The values also never reach their maximum at the same time!

**WARNING**

The robot installation is restricted to the mounting options given in following load table(s).

Floor mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±13.5 kN	±50.3 kN
Force z	52.2 ±13.7 kN	52.2 ±41.9 kN
Torque xy	±77.7 kNm	±146.9 kNm
Torque z	±9.2 kNm	±31.8 kNm

Continues on next page

1 Description

1.4.2 Technical data

Continued

Requirements, foundation

The table shows the requirements for the foundation where the weight of the installed robot is included:

Requirement	Value	Note
Flatness of foundation surface	0.3 mm	Flat foundations give better repeatability of the resolver calibration compared to original settings on delivery from ABB. The value for levelness aims at the circumstance of the anchoring points in the robot base. In order to compensate for an uneven surface, the robot can be recalibrated during installation. If resolver/encoder calibration is changed this will influence the absolute accuracy.
Minimum resonance frequency	22 Hz  Note It may affect the manipulator life-time to have a lower resonance frequency than recommended.	The value is recommended for optimal performance. Due to foundation stiffness, consider robot mass including equipment. ⁱ For information about compensating for foundation flexibility, see the application manual of the controller software, section <i>Motion Process Mode</i> .

ⁱ The minimum resonance frequency given should be interpreted as the frequency of the robot mass/inertia, robot assumed stiff, when a foundation translational/torsional elasticity is added, i.e., the stiffness of the pedestal where the robot is mounted. The minimum resonance frequency should not be interpreted as the resonance frequency of the building, floor etc. For example, if the equivalent mass of the floor is very high, it will not affect robot movement, even if the frequency is well below the stated frequency. The robot should be mounted as rigid as possibly to the floor.
Disturbances from other machinery will affect the robot and the tool accuracy. The robot has resonance frequencies in the region 10 – 20 Hz and disturbances in this region will be amplified, although somewhat damped by the servo control. This might be a problem, depending on the requirements from the applications. If this is a problem, the robot needs to be isolated from the environment.

Storage conditions, robot

The table shows the allowed storage conditions for the robot:

Parameter	Value
Minimum ambient temperature	-25 °C (-13 °F)
Maximum ambient temperature	+55 °C (+131 °F)
Maximum ambient temperature (less than 24 hrs)	+70 °C (+158 °F)
Maximum ambient humidity	Maximum 95% at constant temperature.

Operating conditions, robot

The table shows the allowed operating conditions for the robot:

Parameter	Value
Minimum ambient temperature	+5 °C ⁱ (41 °F)
Maximum ambient temperature	+50 °C (122 °F)

Continues on next page

Parameter	Value
Maximum ambient humidity	Maximum 95% at constant temperature.

ⁱ At low environmental temperature (below 10° C) a warm-up phase is recommended to be run with the robot. Otherwise there is a risk that the robot stops or runs with lower performance due to temperature dependent oil and grease viscosity.

Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

Protection type	Protection class ⁱ
Manipulator, protection type Foundry Plus	IP67

ⁱ According to IEC 60529.

1 Description

1.4.3 Assembling the manipulator


1.4.3 Assembling the manipulator

Maximum load

Maximum load in relation to the base coordinate system.

Floor mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	± 13.5 kN	± 50.3 kN
Force z	52.2 ± 13.7 kN	52.2 ± 41.9 kN
Torque xy	± 77.7 kNm	± 146.9 kNm
Torque z	± 9.2 kNm	± 31.8 kNm

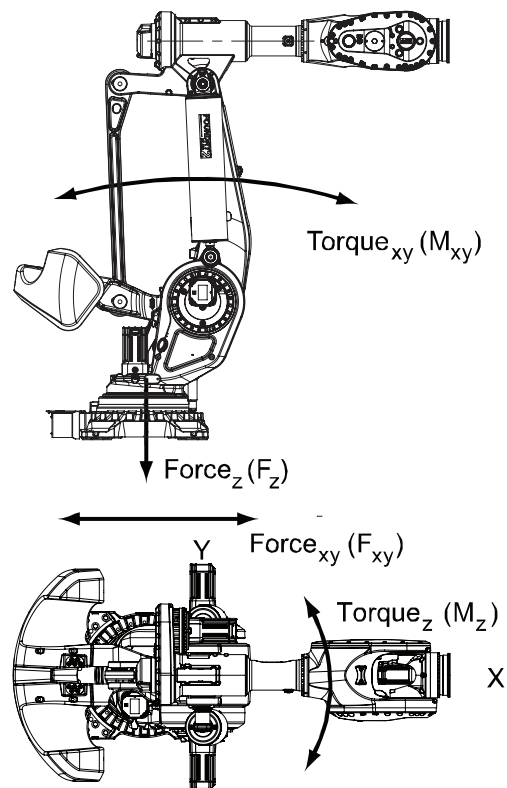

xx1400002869


Note regarding M_{xy} and F_{xy}

The bending torque (M_{xy}) can occur in any direction in the XY-plane of the base coordinate system.

The same applies to the transverse force (F_{xy}).

Continues on next page

Fastening holes robot base - for all variants

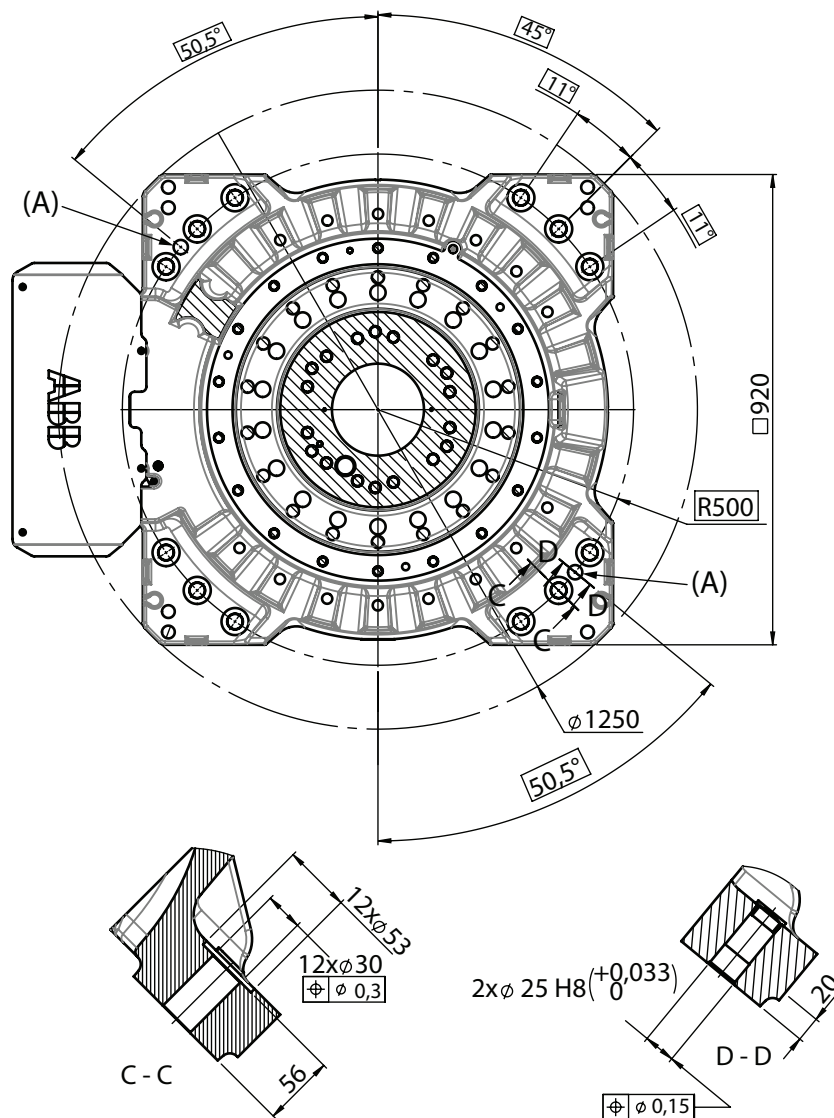

xx1400002870

Pos	Description
A	Holes for guide pins (x2) Rear hole straight slot

Continues on next page

1 Description

1.4.3 Assembling the manipulator

Continued

Attachment screws

The table below specifies the type of securing screws and washers to be used for securing the robot to the steel base plate/steel structure foundation.

Suitable screws, lightly lubricated:	M24 x 100
Quantity:	12 pcs
Quality:	8.8
Screw tightening yield point utilization factor (v) (according to VDI2230):	90% (v=0.9)
Suitable washer:	4 mm flat washer
Tightening torque:	550 Nm (screws lubricated with Molykote 1000) 600-725 Nm, typical 650 Nm (screws none or lightly lubricated)



Note

Only two guide pins shall be used. The corresponding holes in the base plate shall be circular according to figure [Installing a base plate on page 32](#).

Installing a base plate

Advantages of using a base plate

Instead of installing the robot directly on the floor, a steel base plate can be manufactured and used as an adapter between the floor and the robot base. This list specifies some of the advantages of using a steel base plate:


- to ensure a plain surface with a high precision of the robot base hole configuration
- to simplify adjustment of levelness by machined surfaces or by using shims
- to distribute the press force from the robot to a larger foot print
- to compensate poor floor quality that might not be suitable for fastening the robot base directly onto. The base plate has a greater number of fastening points to the foundation and makes a larger footprint, which reduces the load on each fastening point.
- to reduce surface pressure on the foundation contact points, which minimizes the risk of wearing down an uneven surface and thereby causing changes in the robot fastening tightening torque
- to be able to prepare the installation site before robot delivery
- to increase the precision between the positions of an installed robot and other equipment

Example of a base plate

This figure shows an example of a base plate (dimension in mm). The weight of the base plate is 750 kg. Number of bolts used to install the base plate to the floor

Continues on next page

(24 pcs) is an example and should be adjusted based on the circumstances of the foundation.

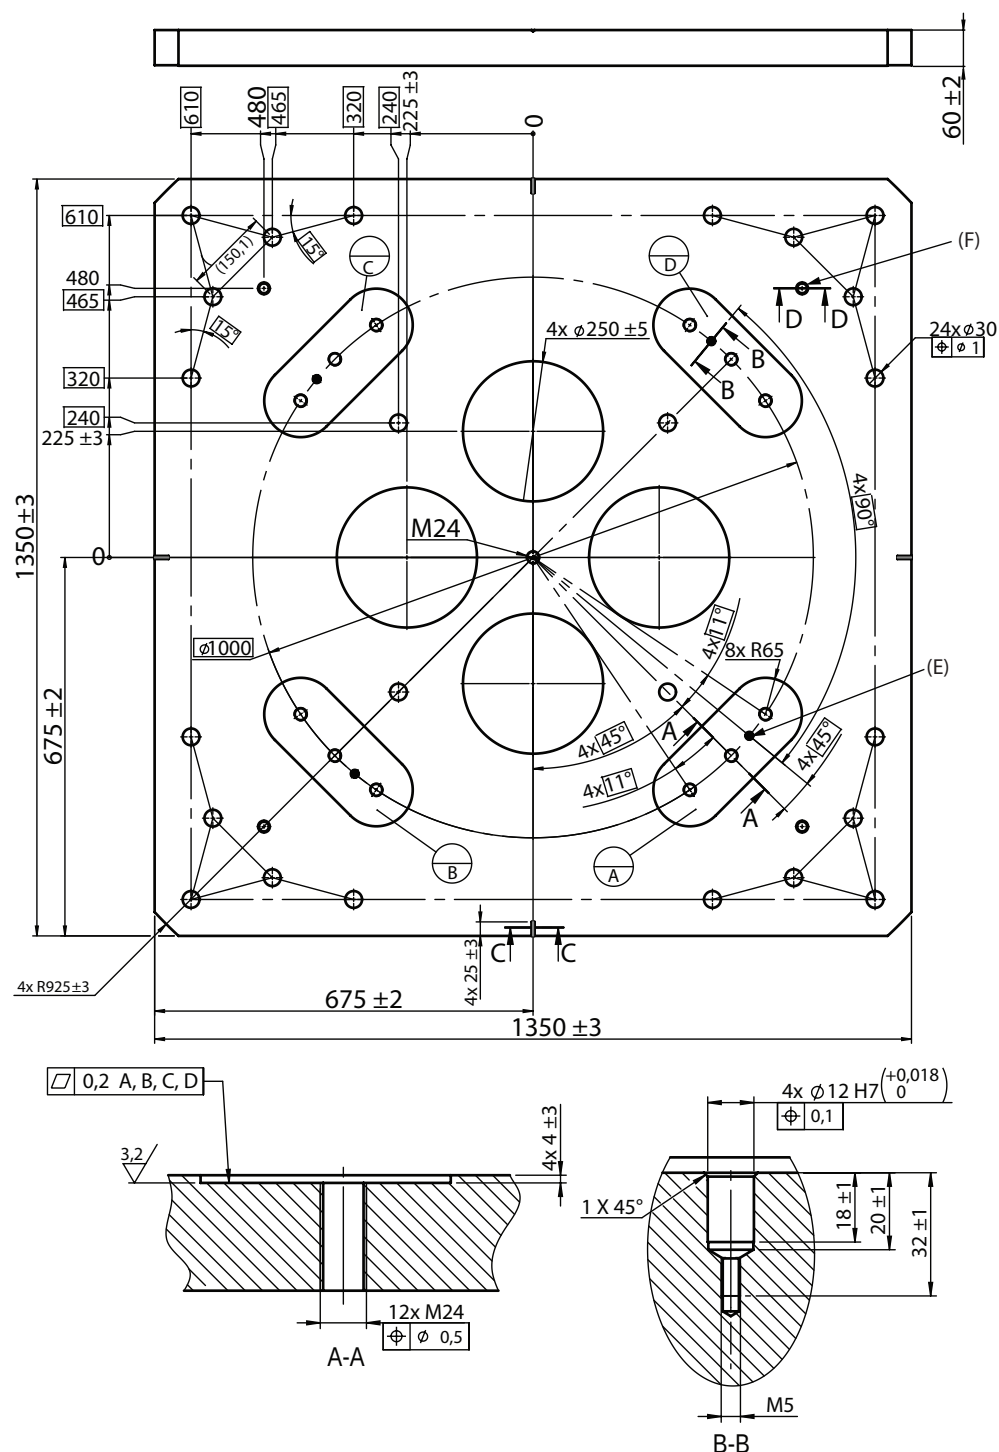

xx1500000820

Pos	Description
A, B, C, D	Common tolerance zone (accuracy all over the base plate from one contact surface to the other)
E	Hole for guide pins, see Guide pins on page 34


Continues on next page

1 Description

1.4.3 Assembling the manipulator


Continued

Pos	Description
F	Holes for levelling the base plate

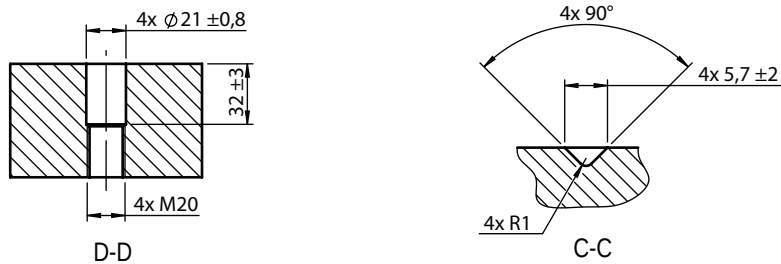

xx1500000830

Guide pins

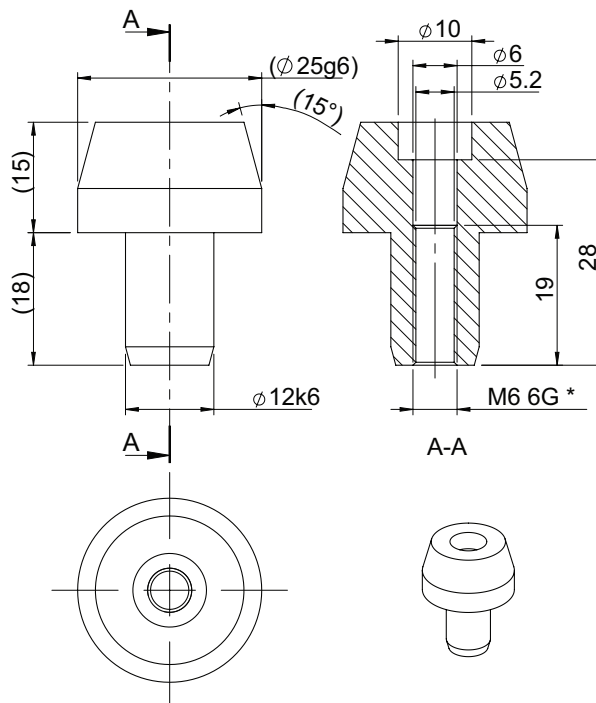


XX1500000248

Pos	Description
A	Cylindrical guide pin (x2), for position see Fastening holes robot base - for all variants on page 31

Continues on next page

Assembly of guide pins

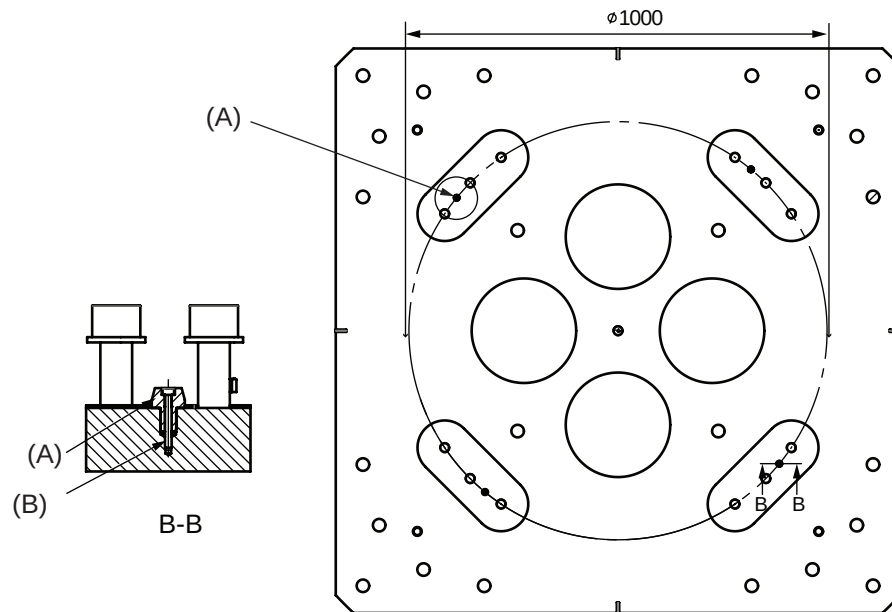

xx1500000831

Pos	Description
A	Cylindrical guide pin (x2)
B	M5 x 40. Tightening torque 6 Nm. (x2)

1 Description

1.5.1 Calibration methods

1.5 Calibration and references

1.5.1 Calibration methods

Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

More information is available in the product manual.

Types of calibration

Type of calibration	Description	Calibration method
Standard calibration	The calibrated robot is positioned at calibration position. Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.	Axis Calibration
Absolute accuracy calibration (optional)	Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for: • Mechanical tolerances in the robot structure • Deflection due to load Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot. Absolute accuracy calibration data is found on the serial measurement board (SMB) or other robot memory. For IRC5 robots, the absolute accuracy calibration data is delivered in a file, absacc.cfg, supplied with the robot at delivery. The file replaces the calib.cfg file and identifies motor positions as well as absolute accuracy compensation parameters. A robot calibrated with Absolute accuracy has a sticker next to the identification plate of the robot (IRC5). To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure.  ABSOLUTE ACCURACY 3HAC 14257-1 xx0400001197	CalibWare
Optimization	Optimization of TCP reorientation performance. The purpose is to improve reorientation accuracy for continuous processes like welding and gluing. Wrist optimization will update standard calibration data for axes 4 and 5.	Wrist Optimization

Continues on next page

Brief description of calibration methods

Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 8700. It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

Wrist Optimization method

Wrist Optimization is a method for improving reorientation accuracy for continuous processes like welding and gluing and is a complement to the standard calibration method.

The actual instructions of how to perform the wrist optimization procedure is given on the FlexPendant.

CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.

If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance. For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.


1 Description

1.5.2 Fine calibration

1.5.2 Fine calibration

General

Fine calibration is made using the Axis calibration, see *Product manual - IRB 8700*.

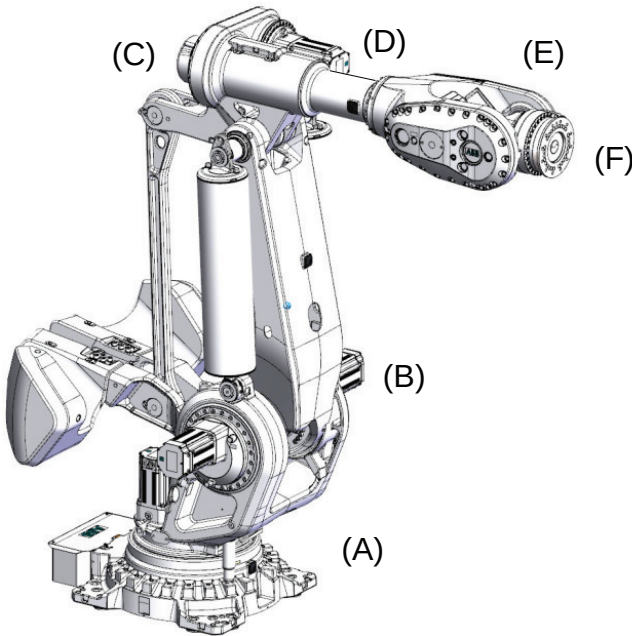

xx1400002403

Axes

Pos	Description	Pos	Description
A	Axis 1	B	Axis 2
C	Axis 3	D	Axis 4
E	Axis 5	F	Axis 6

Calibration

Calibration	Position
Calibration of all axes	All axes are in zero position
Calibration of axis 1 and 2	Axis 1 and 2 in zero position
	Axis 3 to 6 in any position
Calibration of axis 1	Axis 1 in zero position
	Axis 2 to 6 in any position

1.5.3 Absolute Accuracy calibration

Purpose

Absolute Accuracy is a calibration concept that improves TCP accuracy. The difference between an ideal robot and a real robot can be several millimeters, resulting from mechanical tolerances and deflection in the robot structure. *Absolute Accuracy* compensates for these differences.

Here are some examples of when this accuracy is important:

- Exchangeability of robots
- Offline programming with no or minimum touch-up
- Online programming with accurate movement and reorientation of tool
- Programming with accurate offset movement in relation to, for example, vision systems or offset programming
- Re-use of programs between applications

The option *Absolute Accuracy* is integrated in the controller algorithms and does not need external equipment or calculation.



Note

The performance data is applicable to the corresponding RobotWare version of the individual robot.



Note

Singularities might appear in slightly different positions on a real robot compared to RobotStudio, where *Absolute Accuracy* is off compared to the real controller.

What is included

Every *Absolute Accuracy* robot is delivered with:

- compensation parameters saved in the robot memory
- a birth certificate representing the *Absolute Accuracy* measurement protocol for the calibration and verification sequence.

A robot with *Absolute Accuracy* calibration has a label with this information on the manipulator.

Absolute Accuracy supports floor mounted, wall mounted, and ceiling mounted installations. The compensation parameters that are saved in the robot memory differ depending on which *Absolute Accuracy* option is selected.

When is *Absolute Accuracy* being used

Absolute Accuracy works on a robot target in Cartesian coordinates, not on the individual joints. Therefore, joint based movements (e.g. MoveAbsJ) will not be affected.

If the robot is inverted, the *Absolute Accuracy* calibration must be performed when the robot is inverted.

Continues on next page

1 Description

1.5.3 Absolute Accuracy calibration

Continued

Absolute Accuracy active

Absolute Accuracy will be active in the following cases:

- Any motion function based on robtargets (e.g. MoveL) and ModPos on robtargets
- Reorientation jogging
- Linear jogging
- Tool definition (4, 5, 6 point tool definition, room fixed TCP, stationary tool)
- Work object definition

Absolute Accuracy not active

The following are examples of when Absolute Accuracy is not active:

- Any motion function based on a jointtarget (MoveAbsJ)
- Independent joint
- Joint based jogging
- Additional axes
- Track motion



Note

In a robot system with, for example, an additional axis or track motion, the Absolute Accuracy is active for the manipulator but not for the additional axis or track motion.

RAPID instructions

There are no RAPID instructions included in this option.

Production data

Typical production data regarding calibration are:

Robot	Positioning accuracy (mm)		
	Average	Max	% Within 1.5 mm
IRB 8700-550/4.20	0.7	1.5	100
IRB 8700-800/3.50	0.6	1.3	100

1.6 Load diagrams

1.6.1 Introduction



WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data is used, and/or if loads outside the load diagram are used, the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



WARNING

In RobotWare, the service routine LoadIdentify can be used to determine correct load parameters. The routine automatically defines the tool and the load.

See *Operating manual - IRC5 with FlexPendant*, for detailed information.



WARNING

Robots running with incorrect load data and/or with loads outside the load diagram, will not be covered by robot warranty.

General

The load diagrams include a nominal payload inertia, J_0 of 100 kgm², and an extra load of 50 kg at the upper arm housing.

At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Control of load case with RobotLoad

To verify a specific load case, use the RobotStudio add-in RobotLoad.


The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.

1 Description

1.6.2 Load diagrams


1.6.2 Load diagrams

IRB 8700-550/4.20

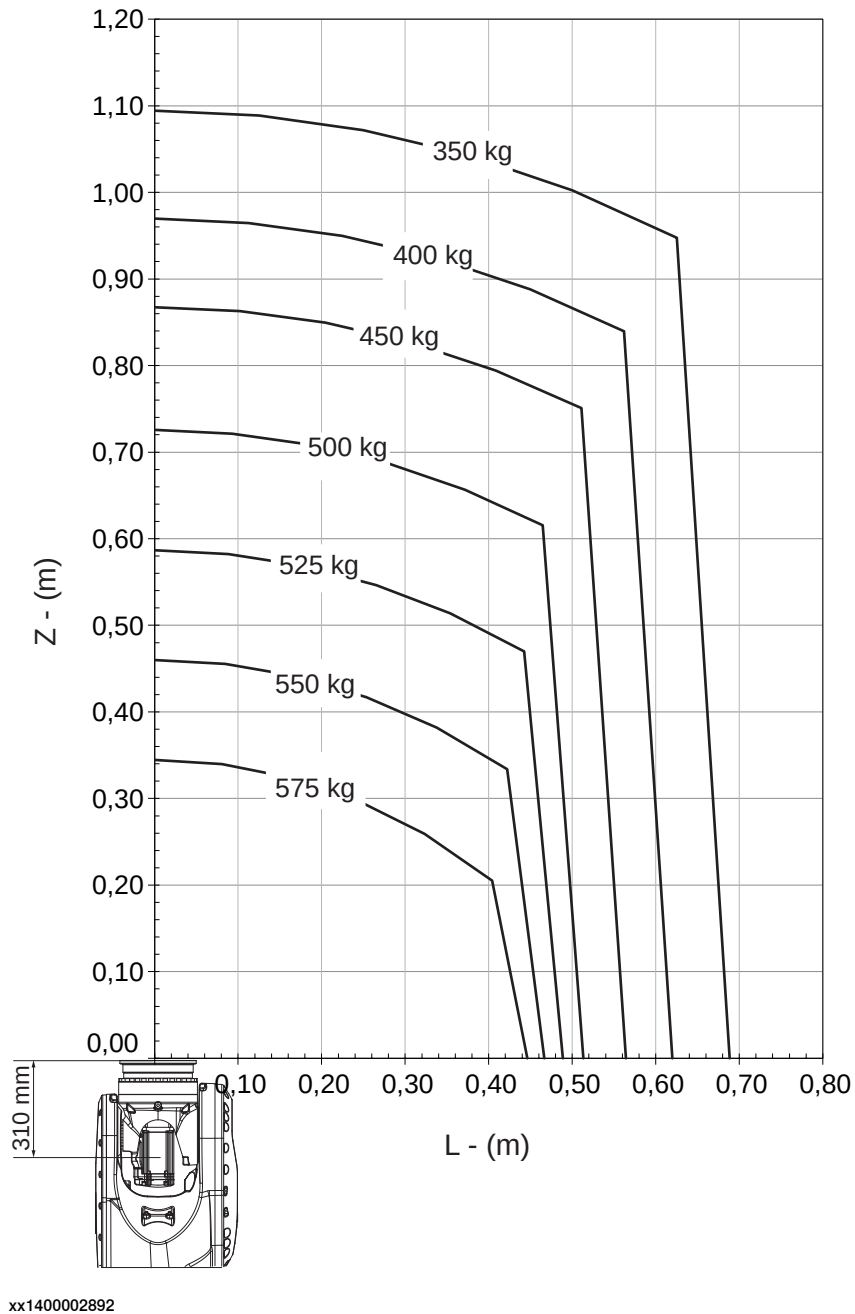

Continues on next page

IRB 8700-550/4.20 "Vertical Wrist" ($\pm 10^\circ$)

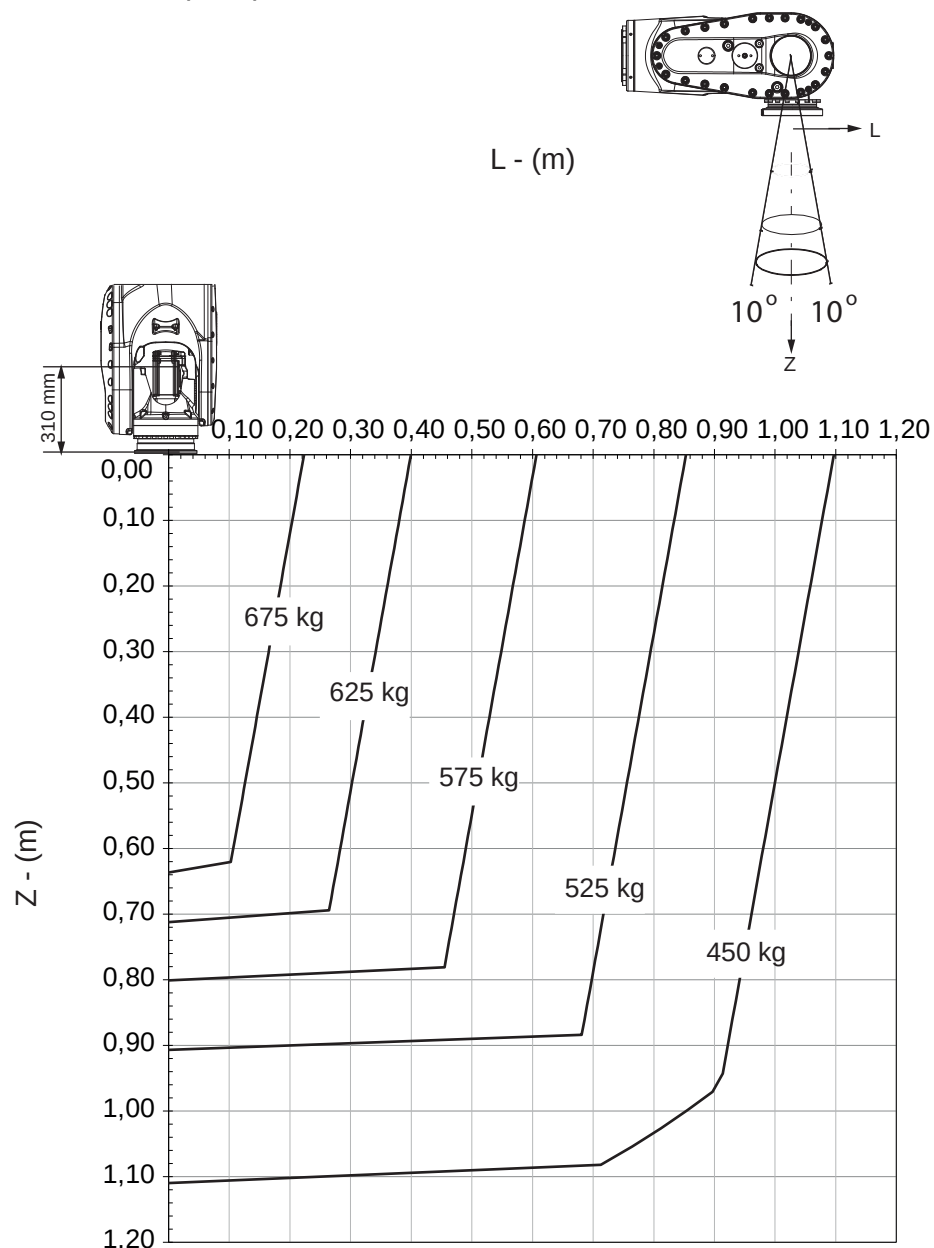

xx1400002893

For wrist down (0° deviation from the vertical line).

	Description
Max load	700 kg
$Z_{\max}$	0.602 m
$L_{\max}$	0.196 m


Continues on next page

1 Description

1.6.2 Load diagrams

Continued


IRB 8700-550/4.20 "LeanID", option 780-4

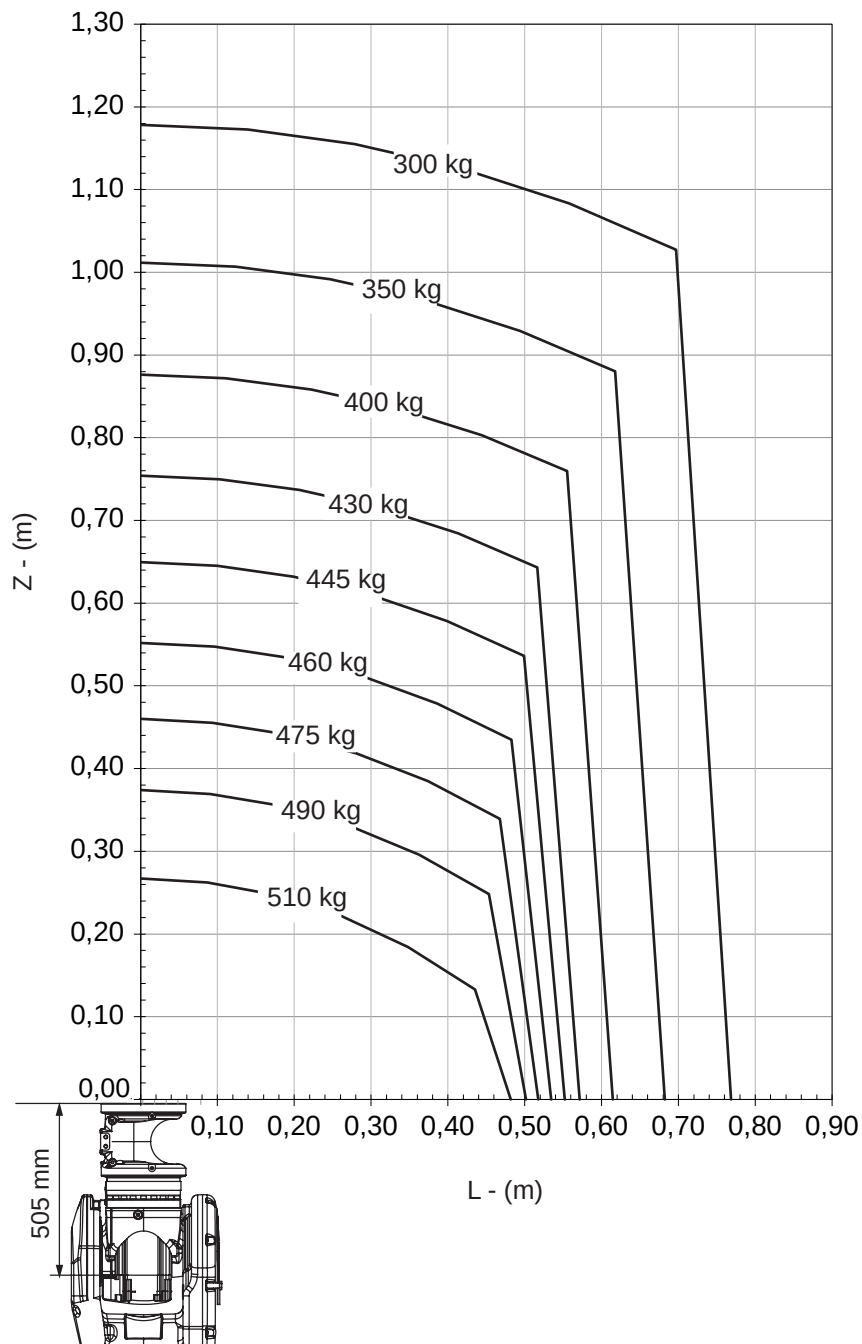

xx1400002894

Continues on next page

IRB 8700-800/3.50

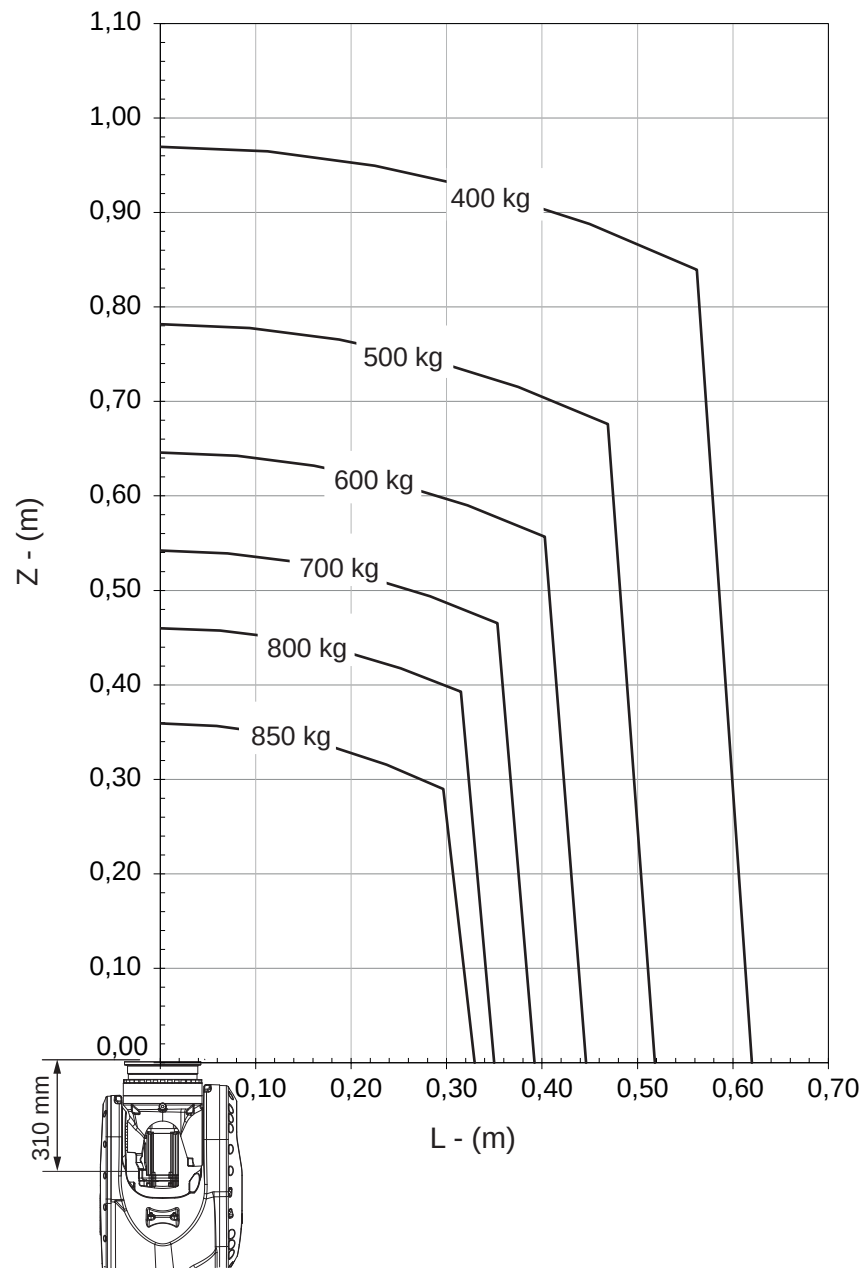


xx1400002895

Continues on next page

1 Description

1.6.2 Load diagrams
Continued

IRB 8700-800/3.50 "Vertical Wrist" ($\pm 10^\circ$)

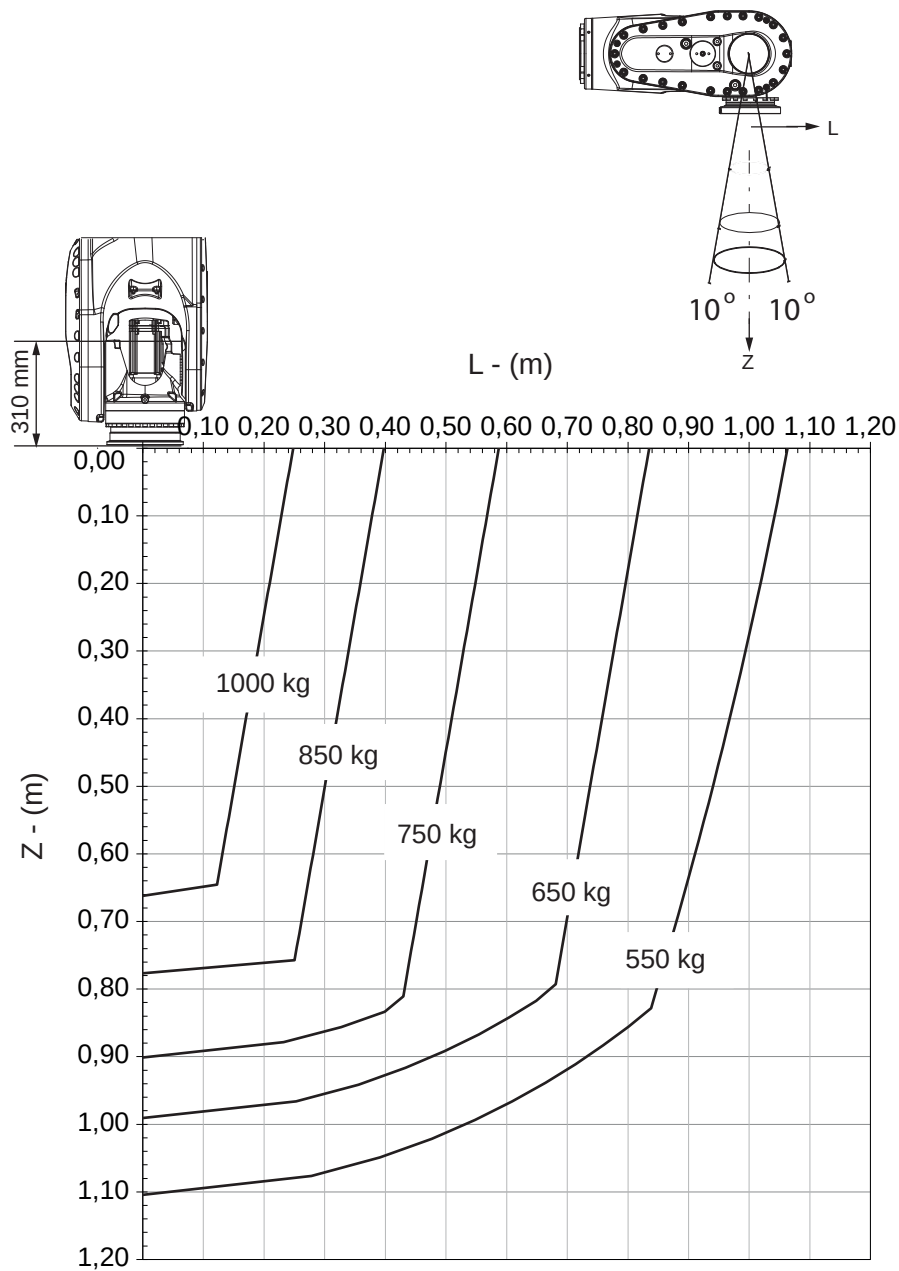


xx1400002896

For wrist down (0° deviation from the vertical line).

	Description
Max load	1,000 kg
Z _{max}	0.662 m
L _{max}	0.297 m

Continues on next page

IRB 8700-800/3.50 "LeanID", option 780-4

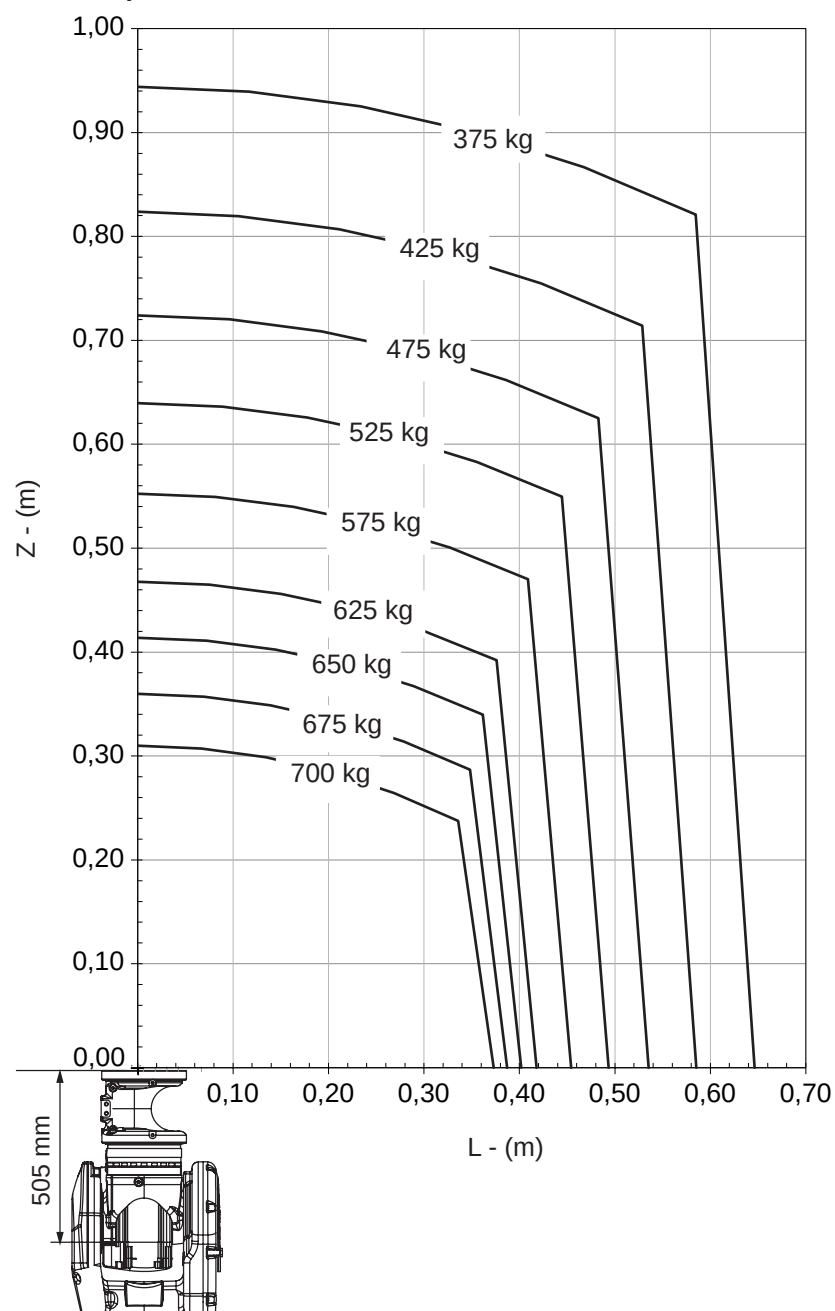

xx1400002897

1 Description

1.6.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

1.6.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement




Note

Total load given as: mass in kg, center of gravity (Z and L) in meters and moment of inertia (J_{ox} , J_{oy} , J_{oz}) in kgm^2 . $L = \sqrt{X^2 + Y^2}$, see the following figure.

Full movement of axis 5 ($\pm 130^\circ$)

Axis	Robot type	Maximum moment of inertia
5	IRB 8700-550/4.20 IRB 8700-800/3.50	$Ja_5 = \text{Load} \times ((Z + 0,310^i)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 1100 \text{ kgm}^2$
6	IRB 8700-550/4.20 IRB 8700-800/3.50	$Ja_6 = \text{Load} \times L^2 + J_{oz} \leq 725 \text{ kgm}^2$

 i For option 780-4, LeanID = 0,505 m



xx1400002028

Pos	Description
A	Center of gravity

	Description
J_{ox} , J_{oy} , J_{oz}	Max. moment of inertia around the X, Y and Z axes at center of gravity.

Continues on next page


1.6.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

Continued

Limited axis 5, center line down

Axis	Robot type	Maximum moment of inertia
5	IRB 8700-550/4.20 IRB 8700-800/3.50	$Ja_5 = \text{Load} \times ((Z + 0,310^i)^2 + L^2) + \max(J_{0x}, J_{0y}) \leq 1100 \text{ kgm}^2$
6	IRB 8700-550/4.20 IRB 8700-800/3.50	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 725 \text{ kgm}^2$

ⁱ For option 780-4, LeanID = 0,505 m

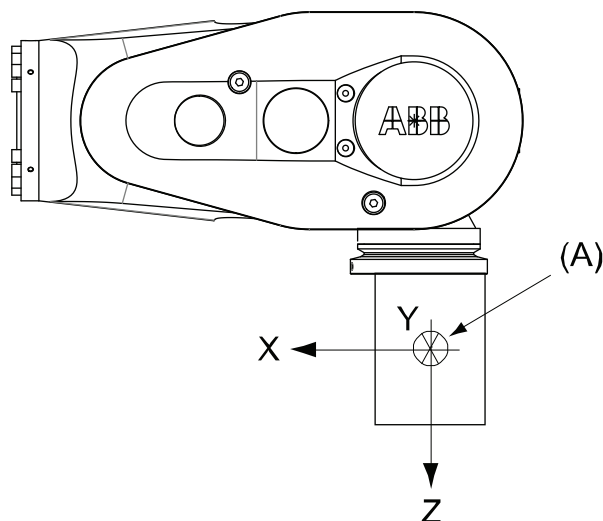

xx1400002029

Pos	Description
A	Center of gravity
Description	
J_{0x}, J_{0y}, J_{0z}	Max. moment of inertia around the X, Y and Z axes at center of gravity.

1 Description

1.6.4 Wrist torque

1.6.4 Wrist torque



Note

The wrist torque values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Furthermore, arm loads will influence the permitted load diagram. To find the absolute limits of the load diagram, use the RobotStudio add-in RobotLoad.

Torque

The table below shows the maximum permissible torque due to payload.

Robot type	Max wrist torque axis 4 and 5	Max wrist torque axis 6	Max torque valid at load
IRB 8700-550/4.20	5279 Nm	2517 Nm	475 kg
IRB 8700-800/3.50	6043 Nm	2747 Nm	800 kg

1.6.5 Maximum TCP acceleration

General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend to use RobotStudio.

Maximum Cartesian design acceleration for nominal loads

Robot type	E-stop Max acceleration at nominal load COG [m/s ²]	Controlled Motion Max acceleration at nominal load COG [m/s ²]
IRB 8700-800/3.50	32	17
IRB 8700-550/4.20	35	18
IRB 8700-630/3.50 LeanID	34	20
IRB 8700-475/4.20 leanID	37	18



Note

Acceleration levels for emergency stop and controlled motion includes acceleration due to gravitational forces. Nominal load is defined with nominal mass and cog with max offset in Z and L (see the load diagram).

1 Description

1.7 Fitting equipment

1.7 Fitting equipment



General

Extra loads can be fitted on the upper arm housing, the lower arm, and on the frame. Definitions of distances and masses are shown in the following figures. The robot is supplied with holes for fitting extra equipment (see figure in [Holes for fitting extra equipment on page 54](#)). Maximum allowed arm load depends on center of gravity of arm load and robot payload.

Frame (hip load)

Extra load can be fitted on the frame.

	Description
Permitted extra load on frame	$J_H = 200 \text{ kgm}^2$
Recommended position (see the following figure)	$J_H = J_{H0} + M4 \times R^2$ where: • J_{H0} is the moment of inertia of the equipment • R is the radius (m) from the center of axis 1 • $M4$ is the total mass (kg) of the equipment including bracket and harness ($\leq 500 \text{ kg}$)

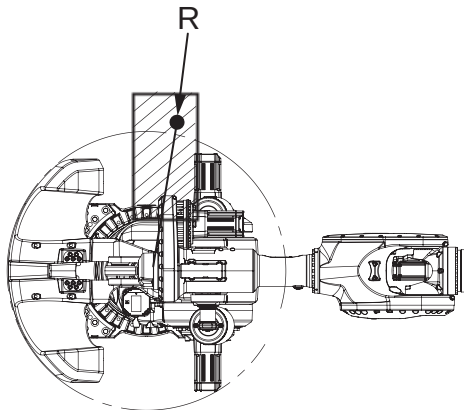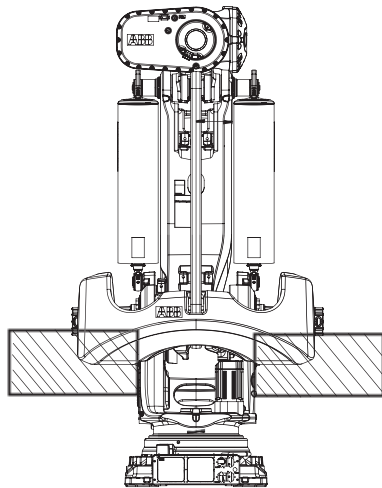


xx1400002873

Continues on next page


Upper arm

Allowed extra load on the upper arm housing, in addition to the maximum handling weight, is $M1 \leq 50$ kg with a distance $(a) \leq 500$ mm from the center of gravity in the axis-3 extension.

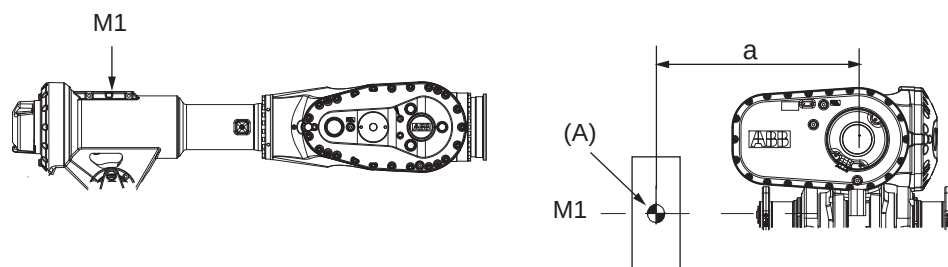

xx1400002874

A	Mass center
---	-------------

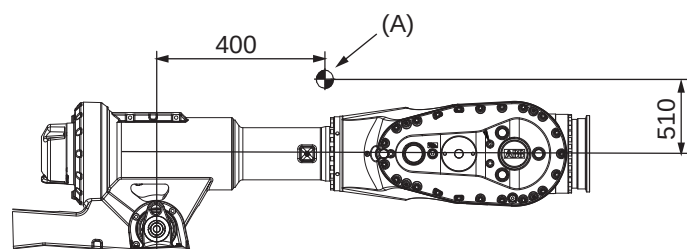

xx1400002875

A	Center of gravity 50 kg
---	-------------------------

Continues on next page


1 Description

1.7 Fitting equipment

Continued

Holes for fitting extra equipment


Upper arm

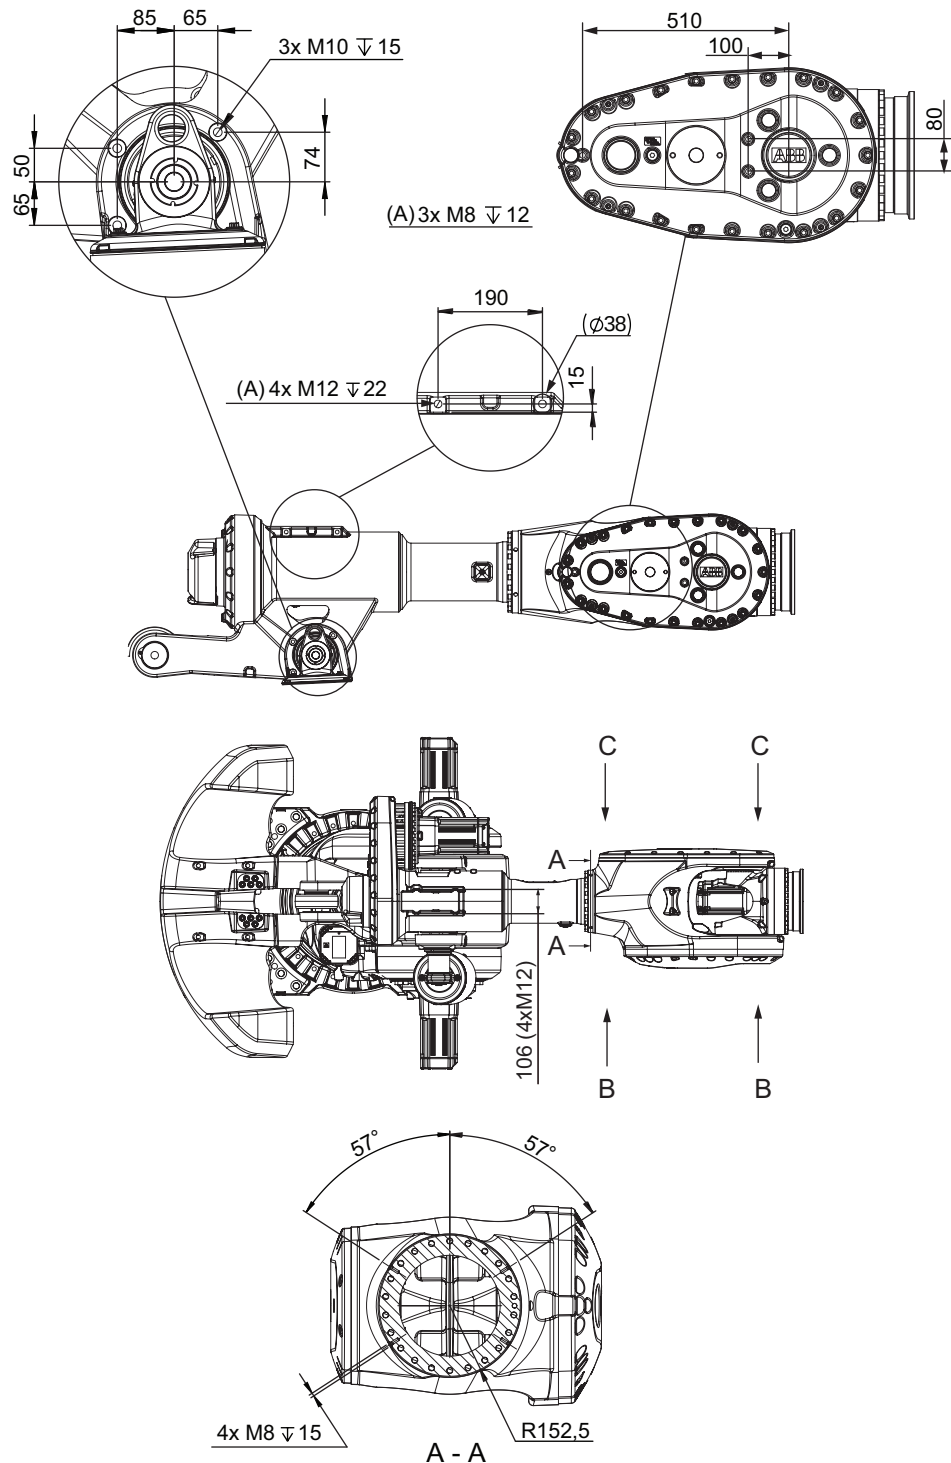

xx1400002876

A	Holes located on both sides.
---	------------------------------

Continues on next page

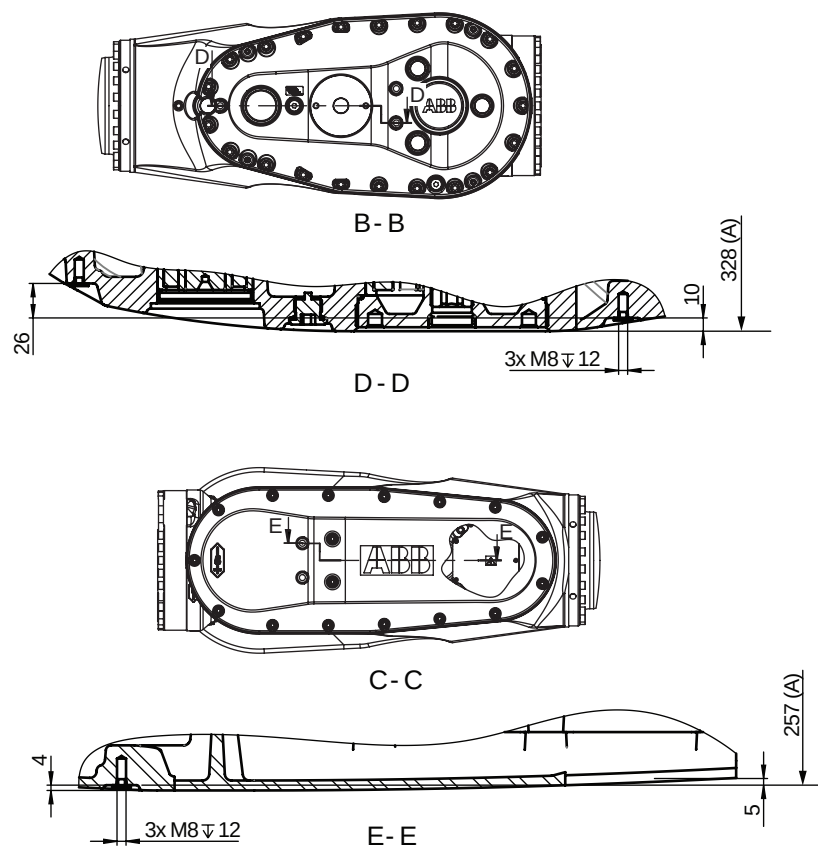

xx1500000869

A	Measure from center axis 6
---	----------------------------


Continues on next page

1 Description

1.7 Fitting equipment

Continued

Frame

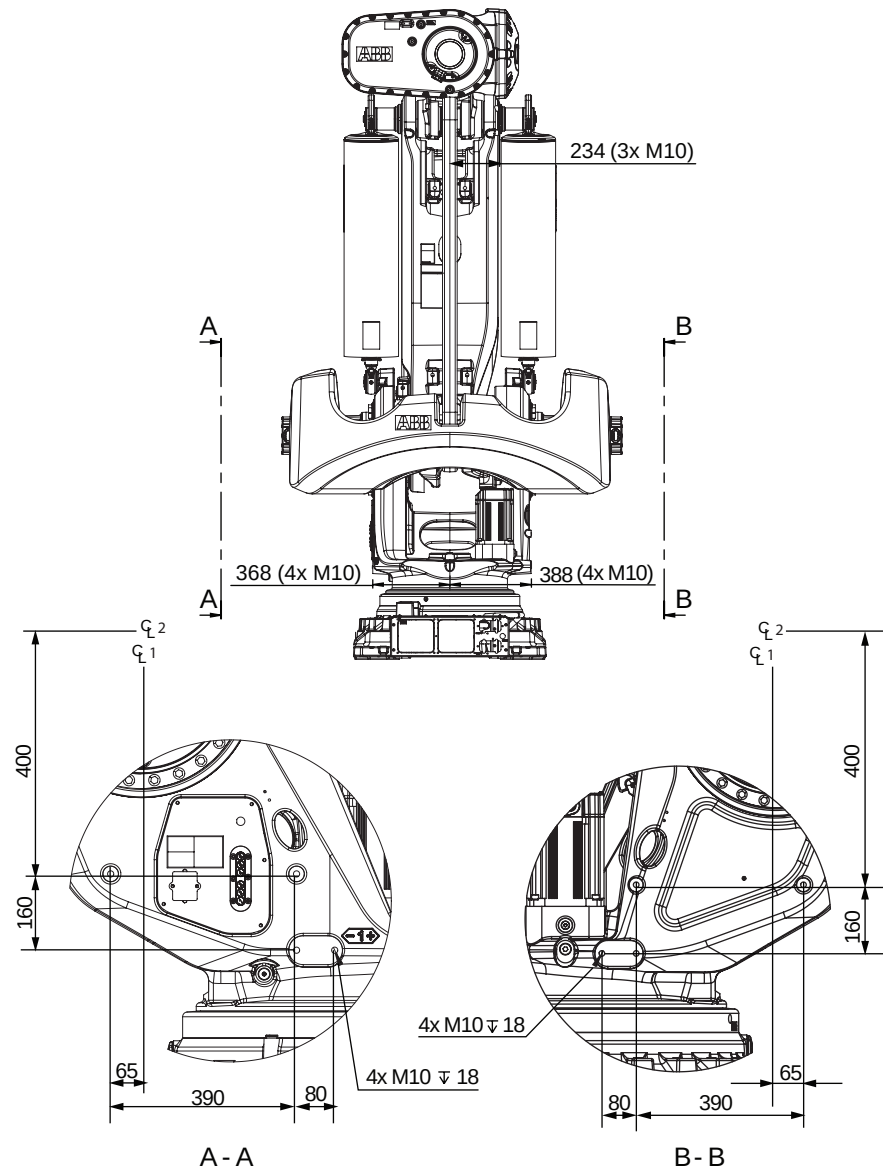

xx1400002877

Continues on next page

Technical drawing of a mechanical part, showing three views: Section A-A, Section B-B, and Section C-C.

Section A-A: A cross-sectional view of the part. Key dimensions and tolerances include:

- Top flange thickness: 17 ± 0.5
- Top flange inner diameter: $\phi 12 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange outer diameter: $\phi \pm 0.04 A$
- Top flange width: 15
- Top flange chamfer: 2.5
- Top flange chamfer angle: $0.5 \times 45^\circ$
- Top flange chamfer length: $1 \times 45^\circ$
- Top flange chamfer radius: $R42$
- Top flange chamfer angle: 75°
- Top flange chamfer length: 141
- Top flange chamfer radius: $R25$
- Top flange chamfer length: 25 ± 0.3
- Top flange chamfer length: $\phi 17.5 \text{ min}$
- Top flange chamfer length: 0.38
- Top flange chamfer length: 20
- Top flange chamfer length: $\phi 18 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange chamfer length: $\phi \pm 0.2 B C B$
- Top flange chamfer length: $f \mid 0.05 \mid C \mid D$

Section B-B: A cross-sectional view of the part. Key dimensions and tolerances include:

- Top flange thickness: 15
- Top flange inner diameter: $\phi 12 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange outer diameter: $\phi \pm 0.04 A$
- Top flange width: 15
- Top flange chamfer: 2.5
- Top flange chamfer angle: $0.5 \times 45^\circ$
- Top flange chamfer length: $1 \times 45^\circ$
- Top flange chamfer radius: $R42$
- Top flange chamfer angle: 75°
- Top flange chamfer length: 141
- Top flange chamfer radius: $R25$
- Top flange chamfer length: 25 ± 0.3
- Top flange chamfer length: $\phi 17.5 \text{ min}$
- Top flange chamfer length: 0.38
- Top flange chamfer length: 20
- Top flange chamfer length: $\phi 18 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange chamfer length: $\phi \pm 0.2 B C B$
- Top flange chamfer length: $f \mid 0.05 \mid C \mid D$

Section C-C: A cross-sectional view of the part. Key dimensions and tolerances include:

- Top flange thickness: 15
- Top flange inner diameter: $\phi 12 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange outer diameter: $\phi \pm 0.04 A$
- Top flange width: 15
- Top flange chamfer: 2.5
- Top flange chamfer angle: $0.5 \times 45^\circ$
- Top flange chamfer length: $1 \times 45^\circ$
- Top flange chamfer radius: $R42$
- Top flange chamfer angle: 75°
- Top flange chamfer length: 141
- Top flange chamfer radius: $R25$
- Top flange chamfer length: 25 ± 0.3
- Top flange chamfer length: $\phi 17.5 \text{ min}$
- Top flange chamfer length: 0.38
- Top flange chamfer length: 20
- Top flange chamfer length: $\phi 18 H7 \begin{smallmatrix} (+0.018) \\ 0 \end{smallmatrix}$
- Top flange chamfer length: $\phi \pm 0.2 B C B$
- Top flange chamfer length: $f \mid 0.05 \mid C \mid D$

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

1 Description

1.8 Maintenance and troubleshooting

1.8 Maintenance and troubleshooting

General

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for the gearboxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.

Maintenance

The maintenance intervals depend on the use of the robot. The required maintenance activities also depend on the selected options. For detailed information on maintenance procedures, see the maintenance section in *Product manual - IRB 8700*.

1.9 Robot motion


1.9.1 Robot motion

Type of motion

Axis	Type of motion	Range of movement	Note
Axis 1	Rotation motion	$\pm 170^\circ$	Option
		$\pm 220^\circ$	
Axis 2	Arm motion	$-65^\circ / +90^\circ$	
Axis 3	Arm motion	$-30^\circ / +132^\circ$	
Axis 4	Wrist motion	$\pm 300^\circ$	
Axis 5	Bend motion	$\pm 130^\circ$	
Axis 6	Turn motion	$\pm 360^\circ$	Maximum value. The default working range for axis 6 can be extended by changing parameter values in the software. Option 610-1 <i>Independent axis</i> can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis).
		± 93.7 revolutions	

Working range axis 5 and axis 6 for LeanID, option 780-4

Allowed working area for axis 6 related to axis 5 position is shown in the figure below.

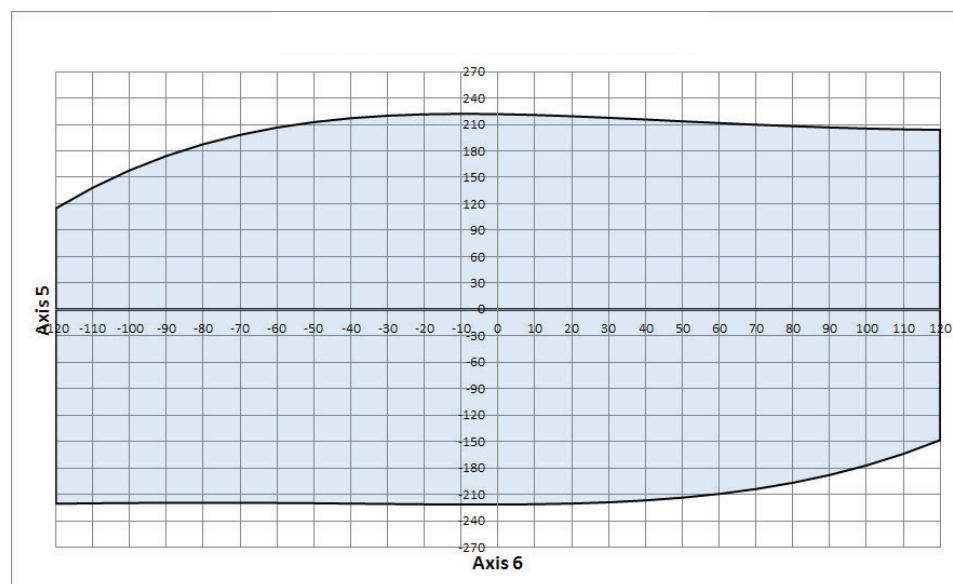

xx1300001587


Continues on next page

1 Description

1.9.1 Robot motion
Continued

Working range

Robot type	Handling capacity (kg)	Reach (m)
IRB 8700	550	4.20

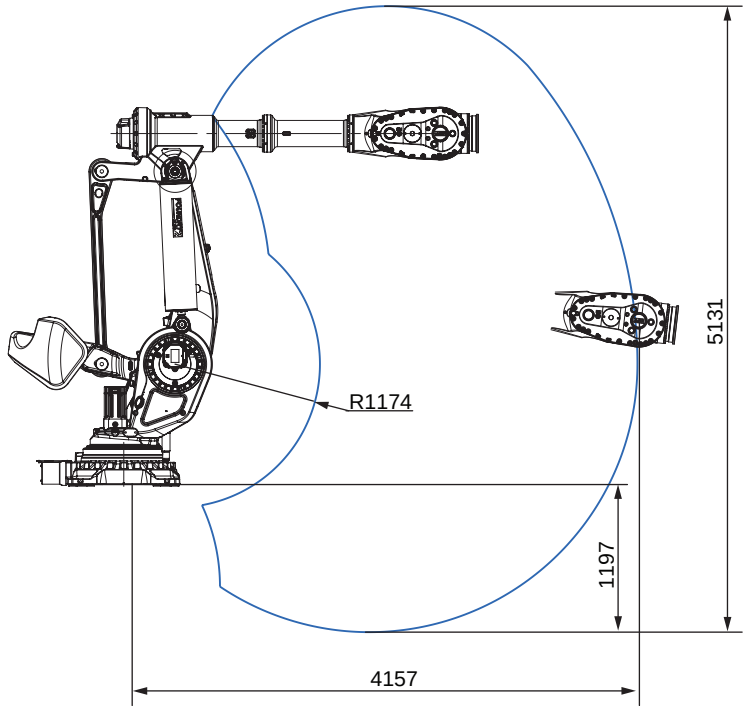

xx1400002880


Continues on next page

1 Description

1.9.1 Robot motion

Continued

Robot type	Handling capacity (kg)	Reach (m)
IRB 8700	800	3.50

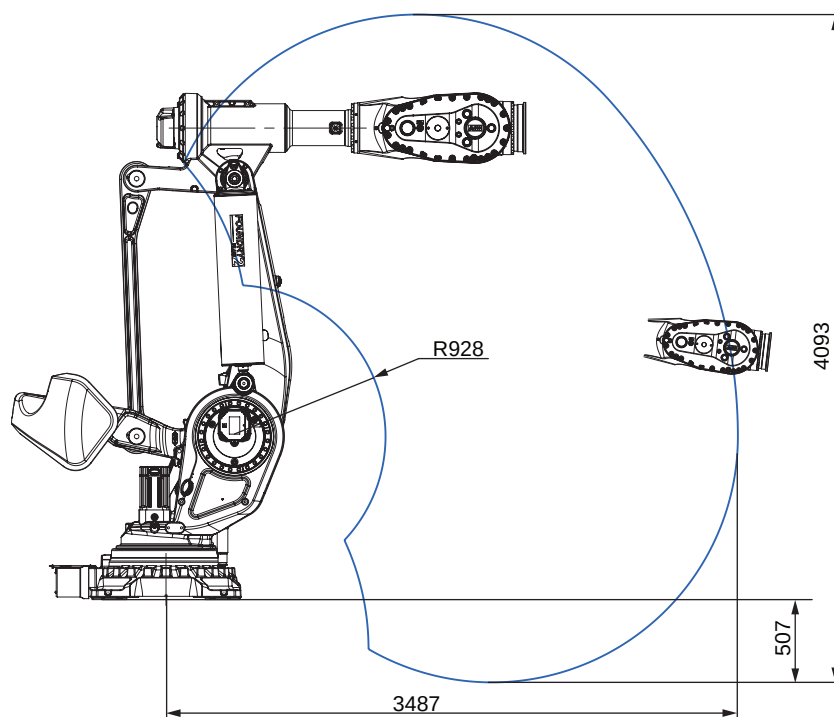

xx1400002879

1 Description


1.9.2 Performance according to ISO 9283

1.9.2 Performance according to ISO 9283

General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

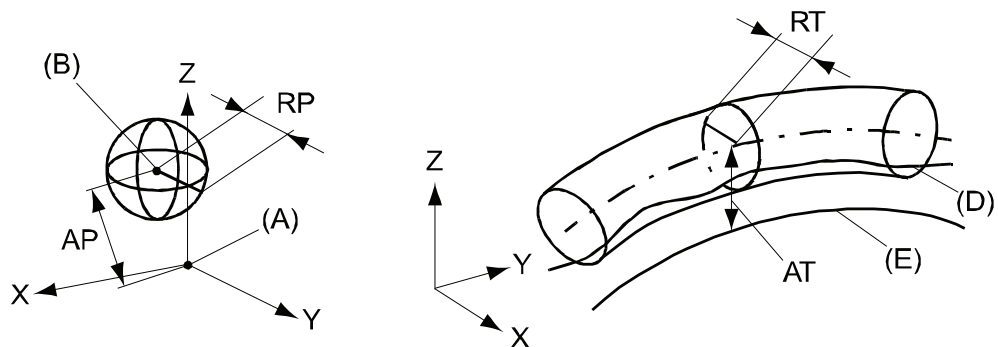

xx0800000424

Pos	Description	Pos	Description
A	Programmed position	E	Programmed path
B	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from programmed position	AT	Max deviation from E to average path
RP	Tolerance of position B at repeated positioning	RT	Tolerance of the path at repeated program execution

IRB 8700	-550/4.20	-800/3.50
Pose accuracy, AP (mm) ⁱ	0.07	0.09
Pose repeatability, RP (mm)	0.08	0.05
Pose stabilization time, PSt (s) within 0.4 mm of the position	0.48	0.25
Path accuracy, AT (mm)	1.36	1.29
Path repeatability, RT (mm)	0.14	0.07

ⁱ AP according to the ISO test above, is the difference between the taught position (position manually modified in the cell) and the average position obtained during program execution.

1.9.3 Velocity

Maximum axis speed

Robot type	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6
IRB 8700-550/4.20	75 °/s	60 °/s	60 °/s	85 °/s	85 °/s	115 °/s
IRB 8700-800/3.50	75 °/s	60 °/s	60 °/s	85 °/s	85 °/s	115 °/s

There is a supervision function to prevent overheating in applications with intensive and frequent movements.

1 Description

1.9.4 Robot stopping distances and times

1.9.4 Robot stopping distances and times

Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

1.10 Servo gun

1.10.1 Introduction

General

The robot can be supplied with hardware and software for control of the following configurations:

- Stationary Gun
- Robot Gun

The specific parts related to the servo motor control for electrical welding guns configurations are shown in the conceptual pictures below. The major parts and required options are also stated in the configurations lists below each picture.


The cables for control of the basic robot are shown in the pictures with dotted lines.

1 Description

1.10.2 Stationary Gun

1.10.2 Stationary Gun

General

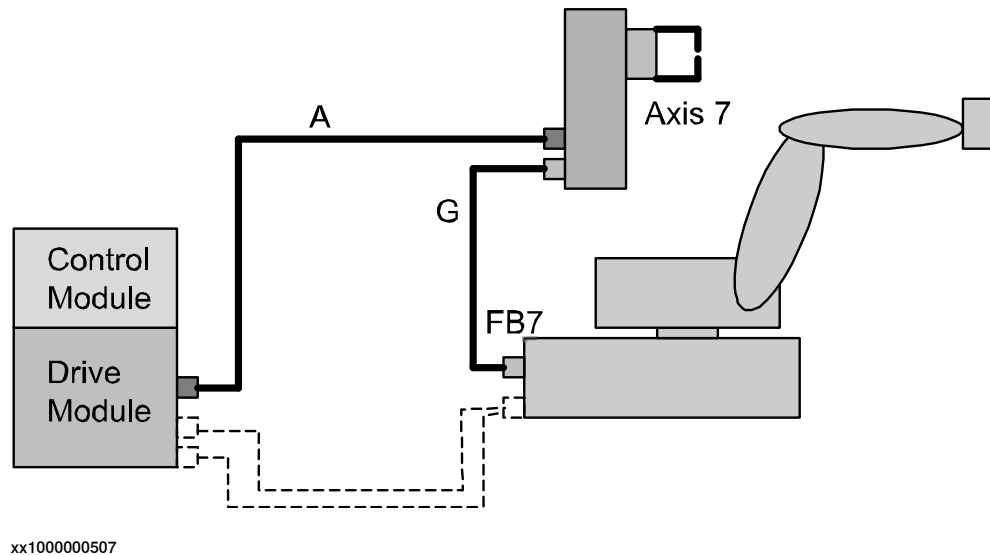


Options

Options according to the table below are required to complete the delivery. For further details on each option see corresponding product specification.

Option	Description	Product specification
785-5	Stationary gun. This option includes cable G (7 m length) for resolver signals from robot base (FB7) to stationary gun/axis 7.	
864-1	Resolver connection, axis 7, on base.	
907-1	First additional drive. Drive unit for 7th axis with corresponding cables assembled inside drive module.	<i>Product specification - Controller IRC5</i>
786-1, -2, -3, -4	Connection to first drive. Cable A (7-30 m) between drive module and stationary gun/axis 7 for servo drive power.	
635-3, -4, or -5	Spot Servo, Spot Servo Multiple Guns, or Spot Servo Equalizing.	<i>Product specification - Controller IRC5</i>

1.10.3 Robot Gun

General

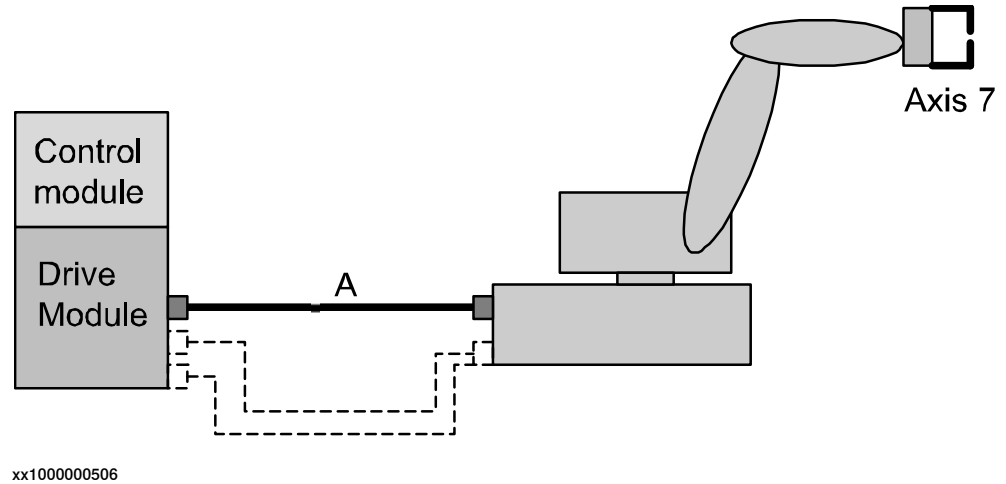

Option

Options according to table below are required to complete the delivery. For further details on each option see corresponding product specification.

Option	Description	Product specification
785-1	Robot gun. This option includes cables within manipulator for servo power signals (servo gun/axis 7).	
907-1	First additional drive. Drive unit for 7th axis with corresponding cables assembled inside drive module.	<i>Product specification - Controller IRC5</i>
786-1, -2, -3, -4	Connection to first drive. Cable A (7-30 m) between drive module and robot base for servo drive power.	
635-3, -4, or -5	Spot Servo, Spot Servo Multiple Guns, or Spot Servo Equalizing.	<i>Product specification - Controller IRC5</i>

This page is intentionally left blank

2 DressPack

2.1 Introduction

2.1.1 Included options

DressPack

Includes options for upper arm, lower arm and floor pos C, D and E, see the following figure. These are described separately below but are designed as a complete package for various applications.

The DressPack for the floor contains customer signals.

The DressPack for upper and lower arm contains process cable packages including signals, process media (water and/or air) and power feeding (for spot welding power) for customer use.

Necessary supports and brackets are also included.

The routing of the process cable package on the robot is available in different configurations.

Continues on next page


2 DressPack

2.1.1 Included options

Continued

Spot welding

The package supplies the transformer gun/gripper with necessary media, such as compressed air, electrical power and software.

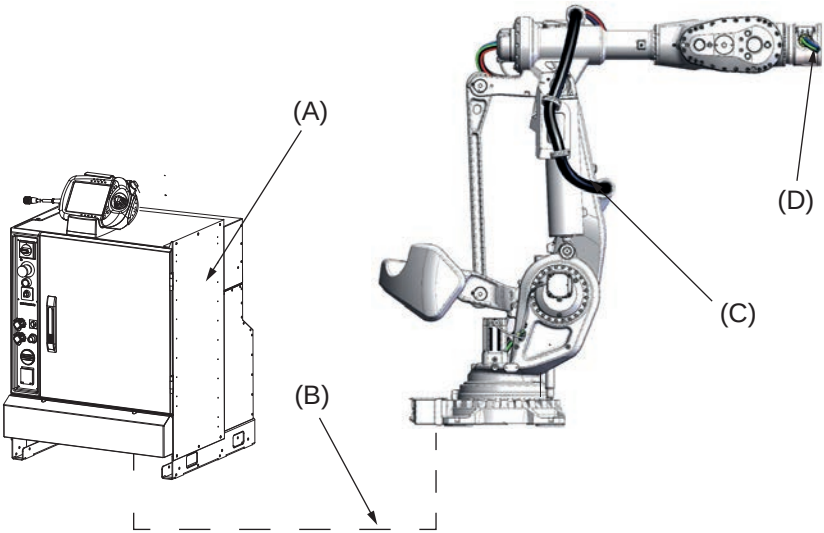

xx1500001712


Pos	Description
A	Robot controller, (including 7th axis drive for servo gun)
B	DressPack, floor
C	DressPack, lower arm
D	DressPack, upper arm

2.1.2 Product range

DressPack solutions for different users needs

The different robot types can be equipped with the well integrated cable and hose packages in the DressPack option. The DressPack is designed in close conjunction with the development of the manipulator and is therefore well synchronized with the robot.

As there is a big span between different users need of flexibility, depending of the complexity of the operation/wrist movements, there are two major levels of dress pack solutions available, see Figure below.

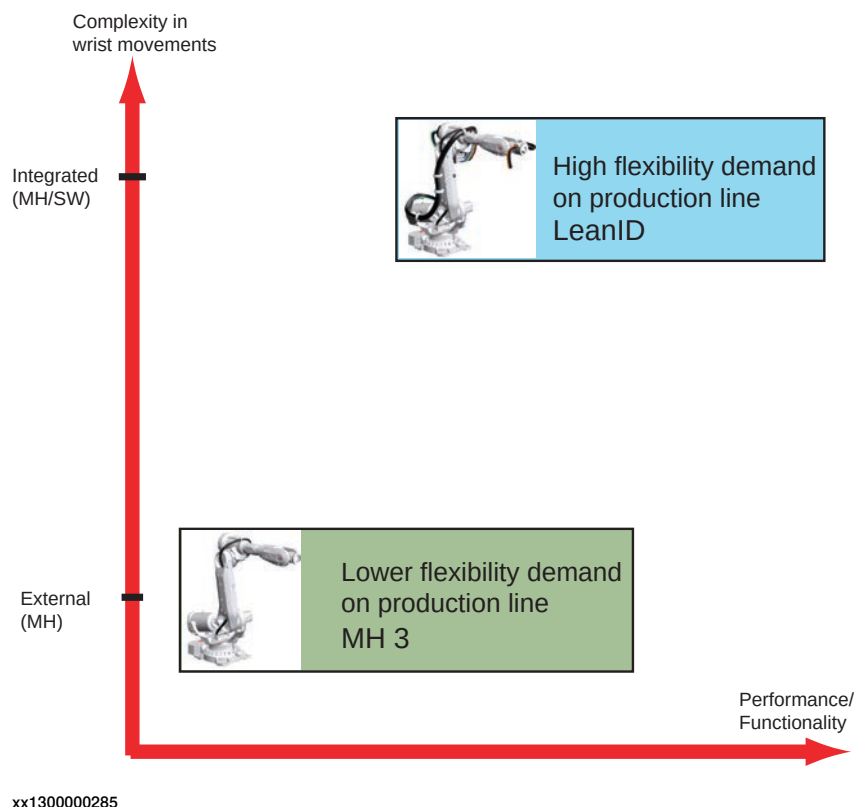

Integrated

This type of dress pack is intended for a production where there are many complex wrist movements and the need for flexibility in changing products is high.

Available options are 798-3 and 780-4 for material handling/spot welding, the LeanID concept.

External

This type of dress pack is recommended where there are less complexity in wrist movements. This normally occurs when there are not many different products running in the production cell. This package requires more individual adjustment to optimize towards robot program at set up.

Available options are 798-3 and 780-3 for material handling.

2 DressPack

2.1.3 Limitations of robot movements

2.1.3 Limitations of robot movements

General

When using DressPack options on the upper arm the robot movements will be limited.

- Might restrict working range, see [Robot motion on page 59](#).



Note

For more detail information please contact Serop Product support/SEROP/ABB.
E-mail address: serop.product_support@se.abb.com

Restrictions for LeanID

Limitation for axis 5 and 6 depends on how the dress pack is assembled at the tool and how adjustment has been done.

Axis	Working range
Axis 5	120° to -120°
Axis 6	220° to -220°

2.1.4 Impact on DressPack lifetime

General

There are some robot movements/positions that shall be avoided in the robot production program. This will improve the lifetime significantly of external upper arm DressPack and wear parts e.g. protection hose, hose reinforcement and protective sleeves.

- The axis 5 movement is not allowed to press the DressPack against the robot upper arm.
- Combined rotation of the wrist axes must be limited so that the DressPack is not wrapped hard against the upper arm.

For more detailed information and recommended set-up adjustments, see *Product manual - IRB 8700*.

2 DressPack

2.1.5 Information structure

2.1.5 Information structure

General

The information for DressPack is structured in the following way.

The DressPack can be delivered in five versions developed for two different applications. Each type is described in a separate section.

Section	Option	Description
2.2	DressPack	DressPack includes general description of DressPack with common information.

Material handling application / DressPack

Section	Option	Description
2.3	Type H	DressPack for Material Handling.
	Type HS	DressPack for handling the part against pneumatic transformer guns stationary mounted.
	Type Hse	DressPack for handling the part against electrical servo driven transformer guns stationary mounted.

Spot welding application / DressPack

Section	Option	Description
2.4	Type S	DressPack for pneumatic transformer guns carried by the robot manipulator.
	Type Se	DressPack for electrical servo driven transformer guns carried by the robot manipulator.

Connector kits

Section	Option	Description
2.7	Connector Kits	Includes general description of connector kits for DressPack.

2.2 DressPack

2.2.1 Introduction

Available DressPack configurations for Material Handling

The table below shows the different DressPack configurations available for Material Handling.



	Lower arm	Upper arm
Option 778-1 Material Handling	Option 798-3, Base to axis 3 Internal routing in lower arm	Option 780-3, Axis 3 to 6 External routing
		Option 780-4, Axis 3 to axis 6 (LeanID) Internal routing

Available DressPack configurations for Spot Welding

The table below shows the different DressPack configurations available for Spot Welding.

	Lower arm	Upper arm
Option 778-2 Spot Welding	Option 798-3 Base to axis 3	Option 780-4 Int. Axis 3 to 6 (LeanID) Internal routing
	Option 798-2 Base to axis 2	Option 780-2 Ext. Axis 2 to axis 6 External routing

Lower arm

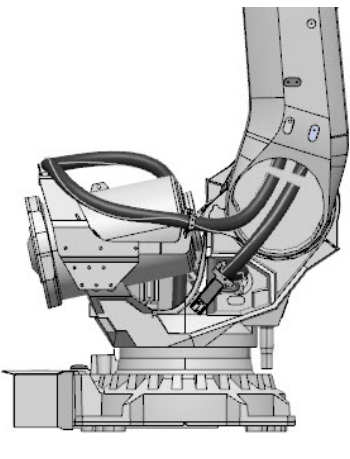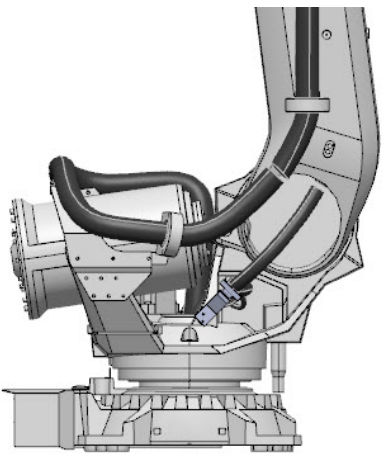	
Internal routing in lower arm Option 778-1 (Material handling) Option 798-3, Base to axis 3 Option 3325-1x, Base to axis 3	External routing Option 798-3, Base to axis 3 Option 3325-1x, Base to axis 3

2 DressPack

2.2.2 Built-in features for upper arm DressPack

2.2.2 Built-in features for upper arm DressPack

External

Material handling (option 780-3):

- Internal routing through the rear part of the upper arm.
- Protection hose can easily be replaced if damaged.
- One version for all IRB 8700 variants.
- Adjustment for optimal hose/cable lengths.
- Easy exchange of DressPack

Internal


Spot welding and Material handling (option 780-4):

- Partly internal routing through the upper arm.
- Suitable for complex movements.
- High demands for flexibility and accessibility.
- Longer life time
- Predictable movements
- Easy exchange of DressPack

2.2.3 Interface descriptions for DressPack

General

Below is an overview showing the different DressPack options connection points, and their locations. For detailed information see the circuit diagram, and product manual for the manipulator.

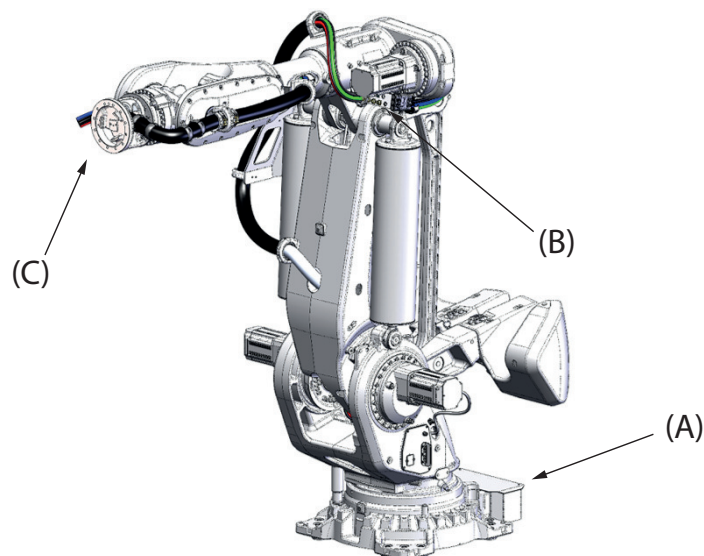

xx1500001714

Pos	Location	Description	Options
A	Base	FB7, CP/CS/CBUS/Ethernet	864-1, 798-3
B	Axis 3	CP/CS/CBUS/Ethernet	798-3
C	Axis 6	CP/CS/CBUS/Ethernet, WELD	780-3, 780-4

Base

Material handling (option 798-3), see figure below:

- Included are: A, one D (Proc 1).

Spot welding (option 798-3), see figure below:


- Included are: A, B (if applicable), C, D (Proc 1-4) and E, F (if applicable).

Continues on next page

2 DressPack

2.2.3 Interface descriptions for DressPack

Continued

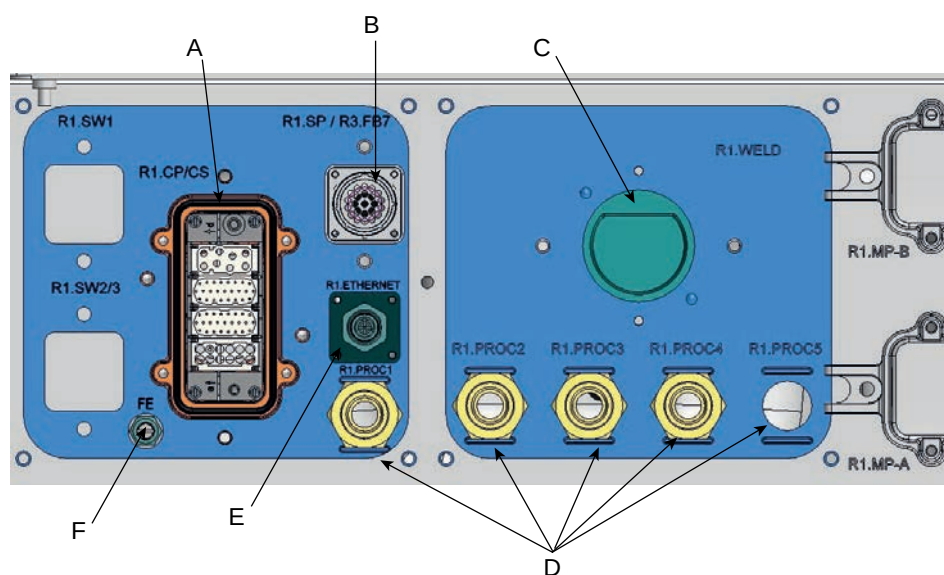

xx1900001522

For corresponding parts of the tool, see [Connector kits on page 95](#).

Pos	Description
A	R1.CP/CS
B	R1.SP (spot welding servo gun) or FB7 (resolver connection)
C	R1.WELD 3x35mm ² (spot welding)
D	R1.PROC 1 (material handling/spot welding 1/2", M22x1.5, 24 degree seal) R1.PROC 2 - 4 (spot welding 1/2", M22x1.5, 24 degree seal)
E	R1.ETHERNET (M12 connector, when EtherNet communication is selected)
F	FE (functional earth, when EtherNet communication is selected)

Axis 3


Material Handling (option 798-3), see figure below:

- Included are: A and one C (Proc 1).

Spot welding (option 798-3), see figure below:

- Included are: A, D, B/E/F/G/H (if applicable) and C (Proc 1-4).

Continues on next page

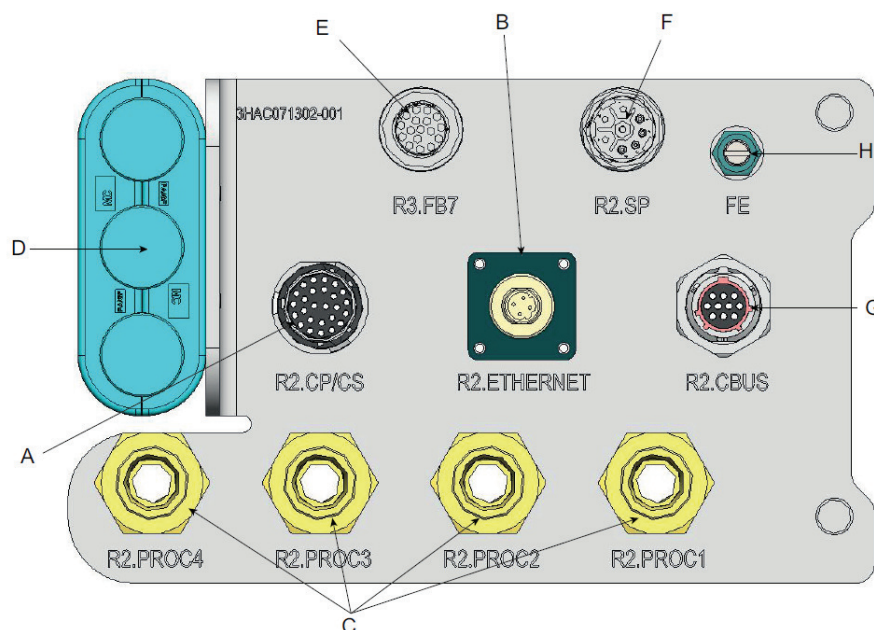2.2.3 Interface descriptions for DressPack
Continued

xx1900001511

For corresponding parts of the tool, see [Connector kits on page 95](#).


Pos	Description
A	R2.CP/CS
B	R2.ETHERNET (M12 connector, when EtherNet communication is selected)
C	R2.PROC 1 (material handling 1/2", M22x1.5, 24 degree seal) R2.PROC 2-4 (spot welding 1/2", M22x1.5, 24 degree seal)
D	R2.WELD 3x35mm ² (spot welding)
E	R2.FB7
F	R2.SP (spot welding servo gun)
G	R2.CBUS (UTOW connector when DeviceNet communication is selected)
H	FE (functional earth, when EtherNet communication is selected)

Axis 6**External**

Material handling (option 780-3), see figure below:

- Hose and cable free length, min. 1,000 mm
- Air hose ends with free end.

 The cable ends with a connector, the main parts are described in the list below (for corresponding parts of the tool, see [Connector kits on page 95](#)):



xx0900000728

Continues on next page

2 DressPack

2.2.3 Interface descriptions for DressPack

Continued

Material handling connector

Material handling (option 780-3), see figure below:

- Cable free length, min. 1,000 mm
- Signals are connected with an M12 connector.

The different main parts within the connector are described in the list below, both with name and Harting article number (for corresponding parts of the tool, see within the Harting product offer).

Name	Harting article
PIN connector, R3.ETHERNET	21 03 881 1405
PIN	61 03 000 0094



xx1100000956


Material handling connector (LeanID)

Material handling/spot welding option 780-4 (LeanID), see figure below:

- Hose and cable free length, min. 1,160 mm
- Hoses and weld power cable (only for spot welding) end with free end.

The cable ends with connectors, for corresponding parts of the tool, see [Connector kits on page 95](#) and within the UTOW product offer.


Continues on next page

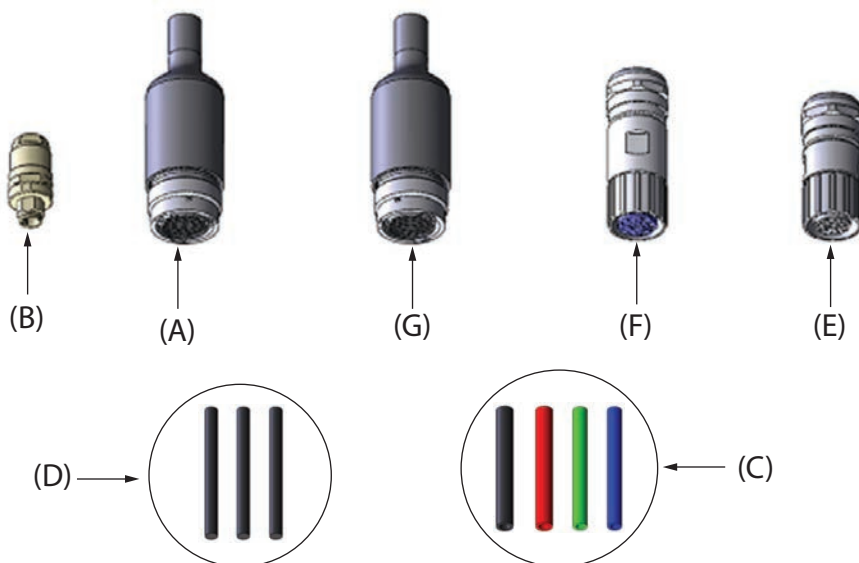

xx1200000117

Pos	Description
A	R3.CP/CS (UTOW connector 26p) Customer signals and power
B	R3.ETHERNET (M12 connector) EtherNet signals (when EtherNet communication is selected)
C	R3.PROC 1-2 (1/2", free end) R3.PROC 2-4 (3/8", free end) Media hoses
D	R3.WELD 3x25mm ² (free end) Spot Welding power
E	R3.FB7 (M23 connector 17p) Servo motor feedback (when Spot Welding Servo gun is selected)
F	R3.SP (M23 connector 8p) Servo motor power (when Spot Welding Servo gun is selected)
G	R3.CBUS (UTOW connector 10p) BUS signals (when Profibus or DeviceNet communication is selected)

- FE (M8 cable lug) Functional Earth 10 mm² (when Parallel and Ethernet communication is selected)

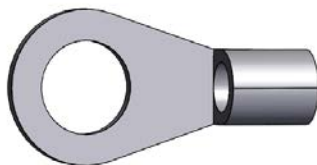


xx2000000109

2 DressPack

2.2.4 Dimensions

2.2.4 Dimensions

Dimensions for robot with DressPack

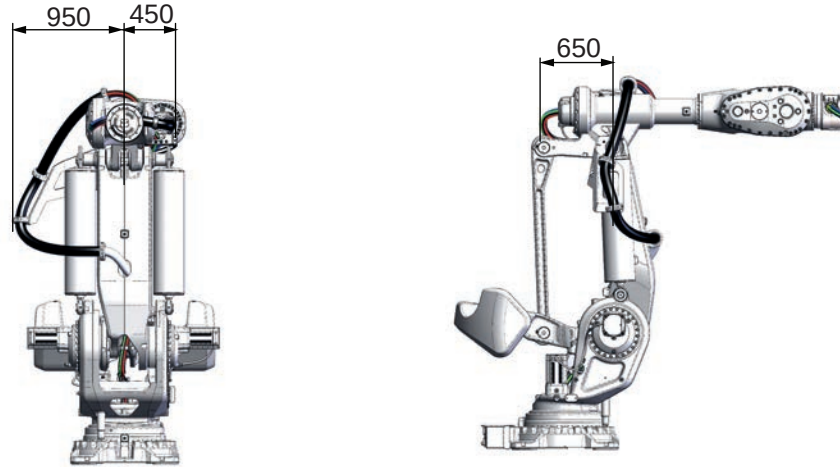

xx1500000772


Base to axis 3 + Axis 3 to axis 6 (option 798-3 + 780-4)

2.3 Type H/HS/HSe

2.3.1 Introduction

General

Variant Type H is designed for Material Handling (MH) application and HS(e) to handling parts against a stationary Spot Welding gun (pneumatic or servo controlled). Included modules are shown in Figure below.

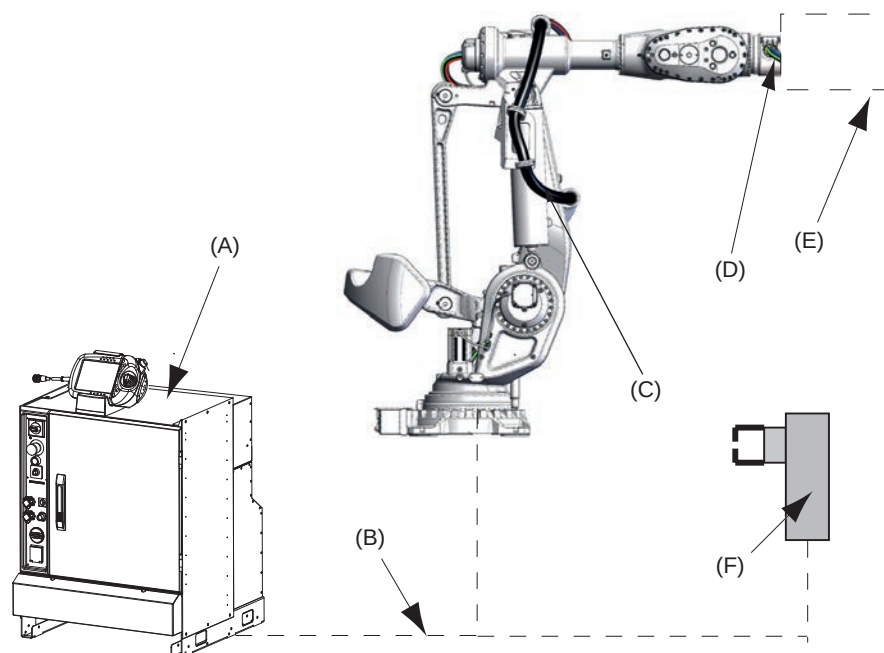

xx1500001713

Pos	Name	
A	Robot controller	Incl. 7:th axis drive for servo gun, HSe
B	DressPack, Floor	
C	DressPack, Lower arm	
D	DressPack, Upper arm	For type H, HS and HSe
E	Robot Gripper	
F	Stationary gun	Pneumatic or servo controlled, HS and HSe

Available configurations with linked option numbers are described below.

Continues on next page

2 DressPack

2.3.1 Introduction

Continued

Option description

Option	Type	Description
16-1	Connection to cabinet	Floor cables and connections inside the I/O section for the DressPack are chosen. The length and configuration of the floor harness is specified under the options below. Option 94-X for parallel communication. Option 90-X for parallel communication and field bus communication with Can/DeviceNet. Option 92-X for parallel communication and field bus communication with Profibus.
455-8	Parallel and Ethernet communication	Offers the signal cables needed for the bus communication in lower and upper arm DressPack. To be combined with option 859-X. Requires selection of option 94-X.

The available alternatives and allowed combinations are shown in the schematic Figures below.

Application Interface connected to Option 16-1, Cabinet	Option 455-8 Parallel and Ethernet communication	Option 859-X Cable length, Ethernet communication	Option 778-1 Material Handling
---	---	--	-----------------------------------

DressPack

	Lower arm	Upper arm
Option 778-1. Material Handling	Option 798-3, Base to axis 3	Option 780-3, Axis 3 to 6 External routing
		Option 780-4, Axis 3 to 6 Internal routing

2.3.2 Configuration result for Type H HS HSe

General

Depending on the choice of options above the DressPack will have different content.
The choice of routing will not affect the content. See tables for signal content below.

DressPack Type H/HS/HSe. Parallel and field bus communication, Ethernet

- Option 16-1 with Connection to cabinet
- (Option 859-X to specify cable length)
- (Option 94-X to specify cable length)
- Option 455-8. Parallel and Ethernet communication
- Option 778-1. Material Handling
- Option 798-3. Internal routing, DressPack Lower arm

One of the options:

- Option 780-3 (and Option 798-3). External routing
- Option 780-4 (and option 798-3) Internal routing

The table below shows the available type of wires/media.

Type	At termin- als in cabin- et	At connection point. Base, Axis 3 or axis 6	Cable/part area	Allowed capacity
Customer Power (CP)				
Utility Power	2+2	2+2	0.75 mm ²	250 VAC, 5 A rms
Protective earth		1	0.75 mm ²	250 VAC
Customer Signals (CS)				
Signals	13	13	0.2 mm ²	50 V DC, 1 A rms
Signals separate shielded	8	8 (4x2)	0.2 mm ²	50 V DC, 1 A rms
Customer bus (Ethernet)				
Bus signals	4	4	0.4 mm ²	Ethernet CAT 5e, 100 Mbit ⁱ
Media				
Air (PROC 1)		1	12.5 mm inner dia- meter	Max. air pressure 16 bar/230 PSI

ⁱ Ethernet with wire colors according to PROFINET standard, M12-connectors.

Required general options for Type HS/HSe

To enable the Spot welding function IRB 8700 to perform as intended, general standard robot options are required. These standard options are further described under other chapters and are also mentioned in this chapter.

- Option 716-1. 1 pc. Digital 24 VDC I/O 16 inputs/ 16 outputs
- Option 727-1. 24V 8 Amps power supply
- Option 635-1. Spot. Software option for pneumatic guns

Continues on next page

Required additional options for servo gun Type HSe

To enable the spot welding function IRB 8700 to run with a servo controlled gun, some additional (additional to those described in [Required general options for Type HS/HSe on page 85](#)) servo drive options are required. These standard options are described under other chapters and are also mentioned below in this chapter.

- Option 907-1. First additional drive
- Option 864-1. Resolver connection, axis 7
- Option 785-5. Stationary gun
- Option 786-1,-2,-3,-4. Connection to first drive (Cable length to be stated)
- Option 635-3. Spot Servo. Software option for servo controlled guns
- (Software option 635-5 could also be used)

Also option 630-1, Servo tool change, should be used if servo gun tool change is required.

2.3.3 Interface description for stationary gun

General

The interface towards the stationary gun includes 1 common part and 2 extra for servo gun.

Common parts:

- Water and air connections made by the customer directly on the water and air unit.

Extra for servo gun:

- Servo power cable (Option 786-1,-2,-3 or -4). Cable goes from robot control cabinet to stationary gun and ends with a 23 pin Souriau connector (Type UT 061823SH).
- Resolver signal cable, 7 m length (included in option 785-5). Cable goes from robot foot R3.FB7 to stationary gun and ends with 8 pin Souriau connector (Type UT 06128SH)

The connector configurations are described in the circuit diagram.

The Harting connector is shown below. The different main parts within the connector are showed both with name and Harting article number. Corresponding parts at the tool are available within the Harting product offer.

Name	Harting article No.
Hood	09 30 010 0543
Hinged frame, hood	09 14 010 0303
Multicontact, female (HD)	09 14 025 3101
Multicontact, female (DD)	09 14 012 3101
Multicontact, female (EE)	09 14 008 3101

For the contacts above corresponding female crimp-contacts for the different cable diameters are required.

2 DressPack

2.3.4 Summary common options Type H HS HSe

2.3.4 Summary common options Type H HS HSe

General

The following options are the minimum required to form a complete DressPack Type H/HS/HSe:

- Option 16-1. Connection to cabinet (Cable length and communication type to be stated)
- Option 455-8. EtherNet (Communication type to be stated)
- Option 778-1. Material Handling
- Option 798-3. DressPack Lower arm (Routing type to be stated)
- Option 780-3, -4. DressPack Upper arm (Routing type to be stated)

2.3.5 Summary options required for Type Hs HSe

General options

- Option 716-1. 1 pc. Digital 24 VDC I/O 16 inputs/ 16 outputs
- Option 727-1. 24V 8 Amps power supply
- Option 635-1. Spot (only for type HS)

Servo gun

- Option 907-1. First additional drive
- Option 785-5. Stationary gun
- Option 786-1. Connection to first drive (other lengths available)
- Option 635-3. Spot Servo. Software option for servo controlled gun

2 DressPack


2.4.1 Introduction

2.4 Type Se

2.4.1 Introduction

General

Variant Type S is designed for robot handled pneumatic gun and Se is designed for robot handled servo-controlled tool (electrical gun). Included modules are shown in Figure below. Available configurations with linked option numbers are described below.

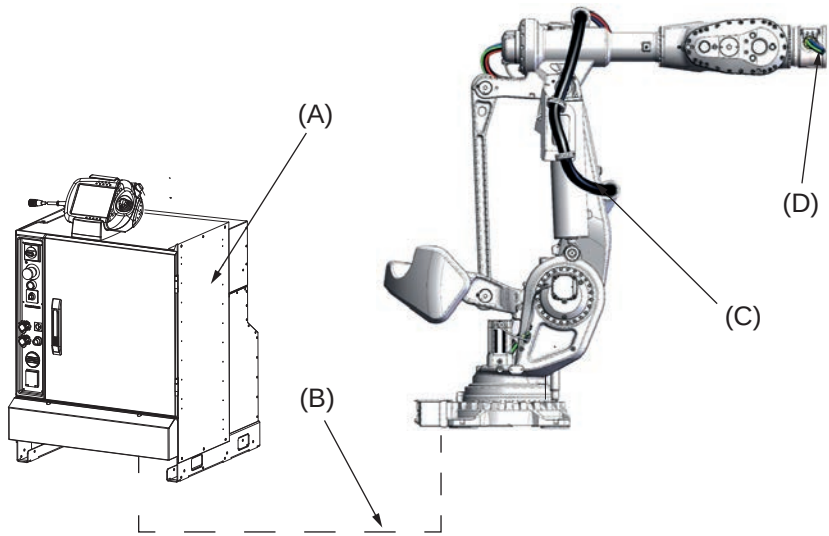

xx1500001712

Position	Name
A	Robot controller (including 7th axis drive), Se
B	DressPack, Floor
C	DressPack, Lower arm
D	DressPack, Upper arm

Available configurations with linked option numbers are described below. To achieve the specific servo motor connections within the DressPack for Type See option 785-1 Robot gun must also to be chosen. See Robot Gun for details.

Option description

Option	Type	Description
16-1	Connection to cabinet	Floor cables and connections inside the I/O section for the DressPack are chosen. The length and configuration of the floor harness is specified under the options below. Option 94-X for parallel communication Option 90-X for parallel communication and field bus communication with Can/DeviceNet Option 92-X for parallel communication and field bus communication with Profibus

Continues on next page

Option	Type	Description
455-8	Parallel and Ethernet	Offers the signal cables needed for the Ethernet communication in combination in lower and upper arm DressPack. To be combined with option 859-X. Requires selection of option 94-X.

Application Interface connected to Option 16-1, Cabinet	Option 455-8, Parallel and Ethernet communication	Option 859-X Cable length, Ethernet communication	Option 778-2, Spot Welding
---	---	--	-------------------------------

DressPack

	Lower arm	Upper arm
Option 778-2 Spot Welding	Option 798-3, Base to axis 3 External routing	Option 780-4, Axis 3 to 6 Internal routing

2 DressPack

2.4.2 Configuration result for Type Se

2.4.2 Configuration result for Type Se

General

Depending on the choice of options the DressPack will have different content. The choice of routing will not affect the content. See tables for signal content below.

DressPack Type Se. Parallel and field bus communication, Ethernet

- Option 16-1 with Connection to cabinet
- Option 785-1. Robot gun
- (Option 859-X to specify cable length)
- (Option 94-X to specify cable length)
- Option 455-8. Parallel and Ethernet communication
- Option 778-2. Spot Welding
- Option 798-3. External routing, DressPack Lower arm

and:

- Option 780-4 (and Option 798-3). Internal routing, DressPack Upper arm

The table below shows the available type of wires/media for type Se.

Type Se	At terminals in cabinet	At connection point. Base, axis 2/3 or axis 6	Cable/part area	Allowed capacity
Customer Power (CP)				
Utility Power	2+2	2+2	0.75 mm ²	250 VAC, 5 A rms
Protective earth		1	0.75 mm ²	250 VAC
Customer signals (CS)				
Signals	13	13	0.2 mm ²	50 V DC, 1 A rms
Signals separate shielded	8	8 (4x2)	0.2 mm ²	50 V DC, 1 A rms
Customer bus (Ethernet)				
Bus signals	4	4	0.4 mm ²	Ethernet CAT 5e, 100 Mbit ⁱ
Servo motor signals				
Servo motor power	At drive	3	1.5 mm ²	600 VAC, 12 A rms
Protective earth	At drive	1	1.5 mm ²	600 VAC
Signals twisted pair for resolver	-	6	0.23 mm ²	50 V DC, 1 A rms
Brake	-	2	0.23 mm ²	50 V DC, 1 A rms
Temperature control/PTC	-	2	0.23 mm ²	50 V DC, 1 A rms
Media				
Water/Air (PROC 1-4)		4	12.5 mm inner diameter ⁱⁱ	Max. air pressure 16 bar/230 PSI. Max. water pressure 10 bar/145 PSI.

Continues on next page

2.4.2 Configuration result for Type Se
Continued

Type Se	At terminals in cabinet	At connection point. Base, axis 2/3 or axis 6	Cable/part area	Allowed capacity
Welding power (WELD)				
Lower and Upper arm		2	35 mm ² ⁱⁱⁱ	600 VAC, 150 A rms at 20 °C (68 °F)
Protective earth (Lower and Upper arm)		1		

ⁱ Ethernet with wire colors according to PROFINET standard, M12-connectors.

ⁱⁱ For LeanID 2x1/2" + 2x3/8"

ⁱⁱⁱ For LeanID upper arm 25 mm², 135 A rms

Required general options for Type Se

To enable the Spot welding function package IRB 8700 to perform as intended, general standard robot options are required. These standard options are further described under other chapters and are also mentioned in this chapter.

- Option 716-1. 1 pc. Digital 24 VDC I/O 16 inputs/ 16 outputs
- Option 727-1. 24V 8 Amps power supply
- Option 635-1. Spot. Software option for pneumatic guns

Required options for servo gun, type Se

To enable the spot welding function package IRB 8700 to run with a servo controlled gun, some additional (additional to those described in [Required general options for Type Se on page 93](#)) servo drive options are required. These standard options are described under other chapters and are also mentioned below in this chapter.

- Option 907-1. First additional drive
- Option 864-1. Resolver connection, axis 7
- Option 785-1. Robot Gun
- Option 786-1,-2,-3,-4. Connection to first drive (Cable length to be stated)
- Option 635-3. Spot Servo. Software option for servo controlled guns.
- (Software option 635-4 and option 635-5 could also be used)

Also option 630-1, Servo tool change, should be added if servo gun tool change is required.

2 DressPack

2.4.3 Summary common options for Type Se

2.4.3 Summary common options for Type Se

General

The following options are the minimum required to form a complete DressPack Type S/Se:

- Option 16-1. Connection to cabinet, (Cable length and communication type to be stated)
- Option 455-8. EtherNet (Communication type to be stated)
- Option 778-2. Spot Welding
- Option 798-3. External routing, DressPack Lower arm
- Option 780-4 Internal routing, DressPack Upper arm

General options

- Option 716-1. 1 pc. Digital 24 VDC I/O 16 inputs/ 16 outputs
- Option 727-1. 24V 8 Amps power supply
- Option 635-1. Spot. (only for type S)

Servo gun type Se

- Option 907-1. First additional drive
- Option 785-1. Robot Gun
- Option 786-1,-2,-3,-4. Connection to first drive (cable length to be stated)
- Option 635-3. Spot Servo

Spot Welding cabinet

- Option 782-7 and -11. Weld timer capacity

2.5 Connector kits

General

For detailed information on connection location see [Interface descriptions for DressPack on page 77](#).

Below is an example of how a connector kit and its parts can look like.



xx1300000223



Note

Some connector kits listed in the overview tables are not available for all manipulators. See the available options in the specification forms.

Continues on next page

2 DressPack

2.5.1 Base - Connector kits

2.5.1 Base - Connector kits

Available options

		DressPack options	Resolver conn., axis 7	Description
Option	Name	798-3	864-1	
459-1	CP/CS, Proc 1 on base	X		
453-1	FB 7		X	



Note

Ethernet and Servo power connection kits not available.

Option CP/CS, Proc 1 on base - 459-1

R1. CP/CS and Proc 1 on base for option 798-3.

This option offers a kit with connectors. This must be assembled by the customer.

The kit contains:

- 1 Hose fittings (swivel nut adapter, (1/2", M22x1.5 Brass, 24 degree seal))
- Connector with:

1 pcs Hood Foundry (Harting)	HAN EMC / M 40
1 pcs Hinged frame (Harting)	Shell size 16
2 pcs Multicontact, female (Harting)	Type HD (25 pin)
1 pcs Multicontact, female (Harting)	Type DD (12 pin)
1 pcs Multicontact, female (Harting)	Type EE (8 pin)
10 pcs Female crimp contacts	For 1.5 mm ²
10 pcs Female crimp contacts	For 0.5 mm ²
10 pcs Female crimp contacts	For 1.0 mm ²
10 pcs Female crimp contacts	For 2.5 mm ²
12 pcs Female crimp contacts	For 0.14 - 0.37 mm ²
45 sockets	For 0.2 - 0.56 mm ²
Assembly Accessories to complete connector	
Assembly instruction	

Option FB7 - 453-1

R3. FB 7 on base for option 864-1

This option offers a kit with a connector. This must be assembled by the customer.

The kit contains:

- Connector with:

1 pcs Multiple connector (pin)	UTOW
1 pcs Adapter	8 pin
8 pcs Pin	For 0.13 - 0.25 mm ²

Continues on next page

Assembly Accessories to complete connector	
Assembly instruction	

2 DressPack

2.5.2 Axis 3 - Connector kits

2.5.2 Axis 3 - Connector kits

Available options

		DressPack options	Description
Option	Name	798-3	
458-1	CP/CS, CBUS/SP/SS, Proc 1 axis 3	X	UTOW

Option CP/CS/CBus/SP/SS, Proc 1 axis 3 - 458-1

CP/CS/CBus/SP/SS, Proc 1 axis 3 on tool side for option 780-3 and 780-4.

This kit offers a kit with connectors to be mounted at tool side of axis 3.

This must be assembled by the customer.

The kit contains:

- 1 Hose fitting (Parker Push lock (1/2", M22x1.5 Brass, 24 degree seal))
- Connector with:

CP/CS	
1 pcs UTOW Pin connector 26p, bayonet	UTOW61626PH, Shell size 16
26 pcs Pin	RM18W3K, 0.5-0.82 mm ²
CBUS	
1 pcs UTOW Pin connector 10p, bayonet	UTOW61210PH, Shell size 12
10 pcs Pin	RM18W3K, 0.5-0.82 mm ²
Ethernet	
1 pcs Pin connector M12	Harting 21 03 881 1405
4 pcs Pin	Harting 09670005576, 0.13-0.33 mm ²
SP (Servo Power)	
1 pc Straight connector M23 8p	
4 pcs Crimp pin 1 mm	AWG 24-17
4 pcs Crimp pin 2 mm	AWG 18-14
SS (Servo Signal)	
1 pcs Straight connector M23 17p	
17 pcs Pin	AWG 28-20
Assembly Accessories to complete connector	
Assembly instruction	

2.5.3 Axis 6 - Connector kits

Available options

Option	Name	780-3 (MH)	780-4 (LeanID)	Description
543-1	CP/CS/CBUS/SP/SS Proc 1 axis 6	X	X	UTOW
452-1	Weld Proc 1-4 axis 6		X	MC, Separate conductors

Option CP/CS/CBus, Proc 1 axis 6 - 543-1

CP/CS/CBus/SP/SS, Proc 1 axis 6 on tool side for option 780-3 and 780-4.

This kit offers a kit with connectors to be mounted at toolside of axis 6.

This must be assembled by the customer.

The kit contains:

- 1 Hose fitting (swivel nut adapter (1/2", M22x1.5 Brass, 24 degree seal))
- Connector with:

CP/CS	
1 pcs UTOW Pin connector 26p, bulkhead	UTOW71626PH05, Shell size 16
26 pcs Pin	RM18W3K, 0.5-0.82 mm ²
CBUS	
1 pcs UTOW Pin connector 10p, bulkhead	UTOW71210PH05, Shell size 12
10 pcs Pin	RM18W3K, 0.5-0.82 mm ²
Ethernet	
1 pcs Socket connector M12	Harting 21 03 881 2425
4 pcs Socket	Harting 09670005476, 0.13-0.33 mm ²
SP (Servo Power)	
1 pcs Bulkhead contact M23	
4 pcs Crimp pin 1 mm	AWG 24-17
4 pcs Crimp pin 2 mm	AWG 18-14
SS (Servo Signal)	
1 pcs Bulkhead contact M23	
17 pcs Pin	AWG 28-20
Assembly Accessories to complete connector	
Assembly instruction	

Option Weld, Proc 1-4 axis 6 - 452-1

Weld and Proc 1-4 axis 6 on manipulator side for option 780-4

The process cable package from axis 6 ends with free end for media and for weld power cable. The option 452-1 offers a kit for connectors. This must be assembled by the customer when hoses and power cable has been cut to required length.

Continues on next page

2 DressPack

2.5.3 Axis 6 - Connector kits

Continued

The kit contains:

- 4 Hose fittings (Swivel Nut adapter, (2 x 1/2", M22x1.5) and (2x 3/8", M16x1.5))
- 1 Multi contact connector (Female) type including:

1 pc Welding connector	3x25 mm ²
1 pc Cable gland	Diameter 24-28 mm
1 pc End housing	0.21-0.93 mm ²
1 pcs Reducing coupling	PG36/PG29
Assembly Accessories to complete connector	
Assembly instruction	

3 Specification of variants and options

3.1 Introduction to variants and options

General

The different variants and options for the IRB 8700 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

3 Specification of variants and options

3.2 Manipulator

3.2 Manipulator

Variants

Option	IRB Type	Handling capacity (kg)	Reach (m)
435-128	8700	550	4.20
435-129	8700	800	3.50

Manipulator color

Option	Color	RAL code ⁱ
209-1	ABB orange standard	NCS 2070-Y60R
209-2	ABB white standard	RAL 9003
209-202	ABB Graphite White std Standard color	RAL 7035
209	RAL code should be specified (ABB non-standard colors)	

ⁱ The colors can differ depending on supplier and the material on which the paint is applied.



Note

Notice that delivery time for painted spare parts will increase for ABB none standard colors.

3.3 Equipment


General

Option	Type	Description
213-1	Safety lamp	A safety lamp with an orange fixed light can be mounted on the manipulator. The lamp is active in MOTORS ON mode. The safety lamp is required on a UL/UR approved robot.
159-1	Fork lift device ⁱ	Lifting device on the manipulator for fork-lift handling. Note. When Cooling Fan for axis 1 motor unit is used, this must be disassembled in order to use fork lift device.
37-1	Base plate	See Installation on page 25 , for dimension drawing.
804-1	Labels for synchronization markings	For a more accurate marking of the synchronization position of the robot. Assembly instructions are included. See Figure for Synchronize labels, Axis 1 - 6.

ⁱ Its recommended to remove the fork lift devices after use

Synchronization labels

The option contains labels for each axis. Below is an example of the synchronization labels.

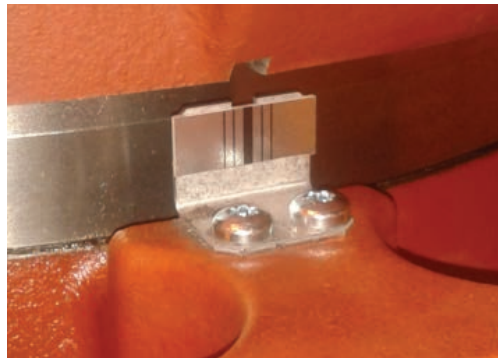

xx1300001127

Electronic Position Switches (EPS)

Electronic Position Switches (EPS) is an additional safety computer in the controller, with the purpose of providing safe output signals representing the position of robot axes. The output signals are typically connected to cell safety circuitry and/or a safety PLC which takes care of interlocking the robot cell, for example in order to prevent robot and operator to enter a common area simultaneously. See *Application manual - Electronic Position Switches*.

Foundry Plus Cable Guard

The manipulator cables are equipped with an additional protection of aluminized leather against e.g. aluminium spits and flashes and chips from machining. Process

Continues on next page

3 Specification of variants and options

3.3 Equipment

Continued

cable for material handling from base to axis 3, option 798-3 has the same protection.

Option	Type	Description
908-1	Foundry Plus Cable Guard	For extra protection of cables. Requires option 287-3 Foundry Plus.

Resolver connection, axis 7


Option	Description	Note
864-1	On base	Used together with first additional drive, option 907-1.

Continues on next page

Working range limitation

To increase the safety of the robot, the working range of axis 1 is limited by fixed mechanical stops and adjustment of the system parameter configuration. The working range can be reduced by adding additional mechanical stops giving 7.5 or 15 graduation, between 22.5° and 135° in both directions.

Option	Type	Description
29-1	Axis 1, 15 degrees	Two stops which allow the working range to be restricted in increments of 15°.

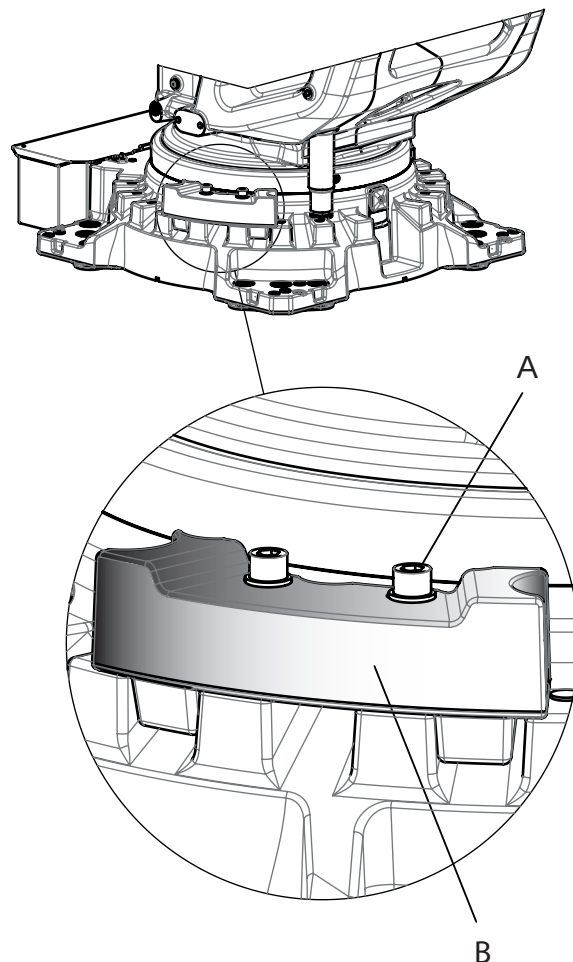

xx1400002592

Pos	Description
A	Tightening torque: 300 Nm.
B	Two mechanical stops

Continues on next page

3 Specification of variants and options

3.3 Equipment

Continued

Extended working range

Option	Type	Description
561-1	Extended work range axis 1	To extend the working range on axis 1 from $\pm 170^\circ$ to $\pm 220^\circ$. When the option is used the mechanical stop shall be removed. Requires options SafeMove or EPS (Electronic Position Switches).



CAUTION

The option *Extended work range* enables an extension of the working range for axis 1, through a software configuration. With this option installed, the working range can exceed the range limited by the mechanical stop on axis 1. The working range shall be limited through the option SafeMove.

A risk analysis must be done to ensure that no risks remain when using option *Extended work range*, to limit the working range, and before removing the mechanical stops.

For information about the option SafeMove, see *Application manual - Functional safety and SafeMove2*.

If the mechanical stop is removed, then the manipulator should have a marking for this, for example, a label. If the robot is delivered with the option *Extended work range*, then such a label is included on delivery.

3.4 Floor cables

**Note**

To comply with the EMC directive, the total cable length (including cables for the motor connection box) must not exceed 30 m between:

Controller and robot (IRB)

Controller and motor & gear units (MU/GU) or track motion (IRT)

Controller and positioner (IRP)

Manipulator cable length

Option	Lengths
210-2	7 m
210-3	15 m
210-4	22 m
210-5	30 m

3 Specification of variants and options

3.5 Process DressPack

3.5 Process DressPack

Connection to

Option	Connection to	Description
16-1	Cabinet	The signals CP/CS are connected to 12-pole screw terminals, Phoenix MSTB 2.5/12-ST-5.08, in the controller. The cable between R1.CP/CS and the controller is supplied. For information about the limited number of signals available, see Type H.

Communication

Option	Type	Description
455-8	Parallel and Ethernet communication	Includes CP, customer signals and PROFINET or Ethernet/IP for process cable package

3.6 DressPack floor cables

Connection to Parallel/Ethernet

Following information specifies the cable length for Parallel/Ethernet for connection to cabinet.

Option	Lengths	Description
94-1/859-1	7 m	
94-2/859-2	15 m	
859-3	22 m	
94-4/859-4	30 m	

3 Specification of variants and options

3.7 DressPack Lower Upper arm

3.7 DressPack Lower Upper arm

DressPack process configuration



Note

For more information about the process cable packages, see [DressPack on page 75](#)

Option	Description	Note
778-1	Material Handling	Includes signals and one air hose.
778-2	Spot Welding	Includes signals, weld power cable, one air hose and three media hoses.

DressPack lower arm

Option	Description	Note
798-3	Routing from base to axis 3	Material Handling / Spot Welding

DressPack upper arm

Option	Description	Note
780-3	External routing from axis 3 to axis 6	Requires option 778-1 and option 798-3.
780-4	Internal routing from axis 3 to axis 6	Requires option 798-3.



Note

If option 780-4, LeanID, is selected the payload will decrease, for detailed information see [Load diagrams on page 41](#)

3.8 Connector kits

General

The connectors fit to the connectors at the manipulator base, axis 3 and 6 respectively.

Content

The kit consists of connectors, pins and sockets. For technical description, see [Connector kits on page 95](#).

Option	Type	Description
459-1	R1.CP/CS, PROC1	For the Customer Power/Customer Signal connector and one Process connector on the manipulator base. Sockets for bus communication are included.
453-1	R3.FB7	For the 7-axis connector on the manipulator base.
458-1	R2.CP/CS, PROC1	For the Customer Power/Customer Signal connector and one Process connector at axis 3. Pins for bus communication are included.
543-1	CP/CS/BUS, PROC1 axis 6	Connector for customer power/customer signal/customer bus at axis 6 tool side.

3 Specification of variants and options

3.9 Servo Gun

3.9 Servo Gun

Content

For technical description see [Servo gun on page 65](#).

Option	Lengths
785-1	For robot handled Servo Gun.
785-2	For Stationary Servo Gun.

Connection to first drive

Following information specifies the cable length for Connection to first drive. For further information see [Servo gun on page 65](#).

Option	Lengths
786-1	7 m
786-2	15 m
786-3	22 m
786-4	30 m

3.10 Process cabinet

Empty cabinet

Option	Type	Description
768-1	Empty cabinet small	See <i>Product specification - Controller IRC5 with FlexPendant</i>
768-2	Empty cabinet large	See <i>Product specification - Controller IRC5 with FlexPendant</i>
715-1	Installation kit	See <i>Product specification - Controller IRC5 with FlexPendant</i>

Process cabinet

Option	Type	Description
768-3	Spot Welding small	Process DressPack on page 108 NOT TOGETHER WITH: Room temperature Max 52 C [708-2]
788-1	Forced air cooling	Process DressPack on page 108
789-1	Earth fault protection unit	Process DressPack on page 108
790-1	Contactor for weld power	Process DressPack on page 108

Weld Timer capacity

Option	Type	Description
782-1	Bosch Basic AC S/SE	Process DressPack on page 108
782-7	Bosch Basic MFDC S/SE	Process DressPack on page 108
782-13	Bosch MFDC ProfiNet	Process DressPack on page 108

Adaptive control

Option	Type	Description
858-1	Bosch Adaptive control	Offers additional functionality for adaptive welding regulation. Only together with option 782-13.

3 Specification of variants and options

3.11 User documentation

3.11 User documentation

User documentation

The user documentation describes the robot in detail, including service and safety instructions.



Tip

All documents can be found via ABB Robotics One, <https://one.robotics.abb.com/en/knowledge-hub>.

3.12 Warranty

Warranty

For the selected period of time, ABB will provide spare parts and labor to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly *Preventative Maintenance* according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed with ABB Connected Services for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The *Extended Warranty* period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the *Terms & Conditions*.



Note

This description above is not applicable for option *Stock warranty* [438-8]

Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig. Note Special conditions are applicable, see <i>Robotics Warranty Directives</i>.

Continues on next page

3 Specification of variants and options

3.12 Warranty

Continued

Warranty for DressPack



Note

Option 780-3 upper arm DressPack MH3 is not covered by the warranty.



Note

Option 780-4 DressPack LeanID is covered by the warranty.

4 Accessories

4.1 Introduction to accessories

General

There is a range of tools and equipment available, especially designed for the manipulator.

Basic software and software options for robot and PC

For more information, see *Product specification - Controller IRC5* and *Product specification - Controller software IRC5*.

Robot peripherals

- Track Motion
- Motor Units

This page is intentionally left blank

Index

A

Absolute Accuracy, 39
Absolute Accuracy, calibration, 37
accessories, 117
ambient humidity
 operation, 28
 storage, 28
ambient temperature
 operation, 28
 storage, 28

C

calibration
 Absolute Accuracy type, 36
 standard type, 36
calibration, Absolute Accuracy, 37
Calibration Pendulum, 38
CalibWare, 36
category 0 stop, 64
category 1 stop, 64
compensation parameters, 39

D

documentation, 114
DressPack warranty, 116

E

extended working range, 106

F

fine calibration, 38
foundation
 requirements, 28

H

humidity
 operation, 28
 storage, 28

I

instructions, 114

L

loads on foundation, 27

M

manuals, 114

O

operating conditions, 28
option
 Extended working range, 106
options, 101

P

product standards, 17
protection classes, 29
protection type, 29

R

requirements on foundation, 28
robot
 protection class, 29
 protection types, 29

S

safety standards, 17
securing the robot to foundation, attachment screws, 32
service instructions, 114
standards, 17
 ANSI, 17
 CAN, 17
 EN IEC, 17
 EN ISO, 17
standard warranty, 115
stock warranty, 115
stopping distances, 64
stopping times, 64
storage conditions, 28

T

temperatures
 operation, 28
 storage, 28
torques on foundation, 27

U

user documentation, 114

V

variants, 101

W

warranty, 115
warranty for DressPack, 116
weight, 26



ABB Robotics Sweden AB
S-721 71 VÄSTERÅS, Sweden
Telephone +46 10-732 50 00

ABB Robotics Norway AS
Nordlysvegen 7, N-4340 BRYNE, Norway
Box 265, N-4349 BRYNE, Norway
Telephone: +47 22 87 2000

ABB Robotics (Shanghai) Limited
No. 39, 99 Miaoqiao Road,
Pudong New Area,
Shanghai, 201315, China
Telephone: +86 21 6105 6666

ABB Robotics LLC
1250 Brown Road
Auburn Hills, MI 48326
USA
Telephone: +1 248 391 9000

abb.com/robotics