

# **User's Manual**

**BH504**

---

**Coordinate Measuring Machine**

**Mitutoyo**

# CONTENTS

PRECAUTIONS .....	i
WARRANTY .....	ii
<b>1. INTRODUCTION .....</b>	<b>52</b>
1.1 Outline .....	52
1.2 Features .....	53
1.2.1 Features of coordinate measuring machines .....	53
1.2.2 Features of the BH504 series .....	53
<b>2. SITE PLANNING AND INSTALLATION .....</b>	<b>54</b>
2.1 Site Planning-Environmental and Facility Requirements .....	54
2.1.1 Temperature .....	54
2.1.2 Humidity .....	54
2.1.3 Vibration .....	54
2.1.4 Dust .....	54
2.1.5 Air source .....	55
2.1.6 Grounding .....	55
2.1.7 Floor space requirements .....	56
<b>3. NAME AND FUNCTION OF EACH PART .....</b>	<b>58</b>
3.1 Nomenclature .....	58
3.2 Description of Components .....	59
3.2.1 Machine stand .....	59
3.2.2 Base .....	60
3.2.3 Air regulator unit .....	61
3.2.4 Carriage .....	62
3.2.5 X-axis slider .....	63
3.2.6 Z-axis spindle and balance unit .....	64
3.2.7 Fine feed and clamp knobs .....	66
3.2.8 Name and function of buttons and switches .....	67

# CONTENTS

<b>4. OPERATION .....</b>	<b>70</b>
4.1 Setup .....	70
4.2 Loading a Workpiece .....	70
4.3 Attaching a Probe and Balance Adjustment.....	71
4.3.1 Attaching a probe .....	71
4.3.2 Measuring range .....	72
4.3.3 Balance adjustment .....	74
4.4 Measurements .....	75
4.4.1 Measurement with a 3D touch signal probe .....	75
4.4.2 Measurement with a ball probe .....	75
4.4.3 Measurement with a centering microscope.....	75
4.5 Clamping and Fine Feeding.....	75
<b>5. INSPECTION AND MAINTENANCE .....</b>	<b>76</b>
5.1 Inspection and Maintenance .....	76
5.1.1 Supplied air pressure .....	76
5.1.2 Air filter and mist separator .....	76
5.1.3 X- and Y-axis guide faces, and Z-axis spindle .....	78
5.1.4 Measuring table .....	78
5.1.5 Scales.....	78
5.1.6 Removing the covers .....	79
5.1.7 Setting the DIP switches on the counter.....	80
5.2 Common Repair Parts .....	82
5.3 Accuracy Control .....	82
<b>6. SPECIFICATIONS .....</b>	<b>84</b>
6.1 Main Unit.....	84
6.2 External View, Dimensions and Mass .....	85
6.3 Standard and Optional Accessories .....	86
6.4 Optional Accessories .....	87
<b>SERVICE NETWORK .....</b>	<b>89</b>