

**TMC 20**  
**turning center**

**INSTRUCTION  
OPERATION MANUAL**

**NAKAMURA-TOME PRECISION INDUSTRY CO., LTD**

**B-12211 E/01  
1986-09**

# I N D E X

<b>1</b>	<b>I n t r o d u c t i o n</b>	<b>1-1</b>
<b>2</b>	<b>S p e c i f i c a t i o n</b>	<b>2-1</b>
2-1	Construction of the machine	2-1
2-2	Dimensional drawing	2-1
	Fig.1 Machine Size	2-2
	Fig.2 Maintenance Space	2-3
	Fig.3 Slide Movable Range	2-4
	Fig.4-1 Working Range(Without Tailstock)	2-5
	Fig.4-2 Working Range(With Tailstock)	2-6
	Fig.5 Turret Head Dimensional Drawing	2-7
	Fig.6 Spindle Nose Dimensional Drawing	2-8
	Fig.7 Spindle Speed/Output/Torque Diagram	2-9
2-3	Machine Specifications	2-10
2-4	NC Control Specifications	2-16
<b>3</b>	<b>S a f e t y P r e c a u t i o n s</b>	<b>3-1</b>
3-1	For safety operations	3-1
3-2	Precaution during machining	3-1
3-3	How to stop the machine	3-2
3-4	Safety device	3-3
3-5	Warming-up	3-4
<b>4</b>	<b>M a n u a l o p e r a t i o n</b>	<b>4-1</b>
4-1	Switches and button on the operation panel	4-2
	Fig. 8 Operation panel	4-2
4-1-1	Button and Switches(For standard function)	4-3
4-1-2	Button and Switches(For optional Function)	4-14
4-2	How to turn on control power	4-15
4-3	How to move X and Z axis slides	4-16
4-4	How to perform the machine zero return	4-19
4-5	How to operate the spindle	4-20
4-6	How to operate the turret indexing	4-23
4-7	How to turn off the power	4-25
4-7-1	Power consumption	4-26
4-7-2	Required input voltage	4-27
4-7-3	Fuse of main power switch	4-27
4-7-4	Wire size for power supply cable	4-27
4-7-5	Power connection	4-28
4-7-6	Check the supply voltage to the machine	4-32
4-8	Levelling	4-33

<b>5</b>	<b>M a n u a l D a t a I n p u t o p e r a t i o n</b>	<b>5-1</b>
5-1	Key board of MDI & CRT panel	5-2
5-2	Procedure for the automatic operations	5-6
5-3	MDI operation	5-7
<b>6</b>	<b>P r e p a r a t i o n o f</b>	
	the actual machining	6-1
6-1	Tooling(Procedure of fixing the tool)	6-1
	Fig.9 Tooling system	6-2
6-2	Chuck(Jaw chuck & Collet chuck)	6-10
6-2-1	How to mount the chuck	6-11
	MATSUMOTO / NIKKO / KITAGAWA	
	RIKEN / SOUL / NAKAMURA	
6-2-2	Chucking pressure adjustment	6-25
6-2-3	Allowable maximum chuck pressure and speed	6-25
6-2-4	Chuck gripping force	6-26
6-2-5	Selection of chuck clamping direction	6-30
6-2-6	Chuck interlock switch adjustment	6-31
6-2-7	Boring soft jaws	6-33
6-3	Tailstock (Option)	6-34
6-3-1	Positioning of the tailstock slide	6-34
6-3-2	Adjusting of the tailstock quill pressure	6-35
6-4	Determining start position of machining	6-36
6-4-1	Using G50	6-36
6-4-2	Using Direct Input Value of Tool Offset	6-40
<b>7</b>	<b>M a c h i n i n g ( A c t u a l C u t t i n g )</b>	<b>7-1</b>
7-1	Program registration	7-1
7-1-1	Registration from MDI/CRT panel	7-1
7-1-2	Registration from Tape reader	7-3
7-1-3	Tape reading	7-5
7-2	Program check	7-6
7-3	Program edit	7-8
7-4	Automatic operation without workpiece	7-10
7-5	Actual cutting	7-12
7-6	Measuring cutting size and other operations during automatic cycle	7-13
7-7	Tool offset	7-15
7-7-1	Input tool offset value	7-16
7-7-2	Changing	7-20

<b>8 Appendix</b>	<b>8-1</b>
8-1 Name of unit	8-1
8-2 Installation	8-2
8-2-1 Installation site	8-2
8-2-2 Foundation	8-2
8-2-3 Transportation and lifting of machine	8-3
8-2-4 Removing Z axis slide fixing plate	8-4
8-2-5 Cleaning	8-4
8-2-6 Oil supply before starting operation	8-5
8-3 PC Parameter setting	8-6
8-4 Machine Alarm display	8-14
8-5 VDI Turret	8-17
8-5-1 VDI Turret Head configuration	8-17
8-5-2 Slide moveable range	8-18
8-5-3 VDI Tooling	8-19
8-5-4 VDI Tooling layout (Turning Holder)	8-20
(Boring Holder)	8-21
8-5-5 Interference between workpiece and tool holder	8-22
8-5-6 Interference between tools and tailstock for center work	8-25
8-5-7 Tool Interference	8-26