

**Operation Manual
for
PGX-2500N**

First Edition: 7 October 1998

Waida Mfg. Co., Ltd.

CONTENTS

Safety Precautions	1
Chapter 1 Overview	3
Chapter 2 Outer Appearance	5
Chapter 3 Operating Instructions	11
1. Modes	11
2. Manual Operation of Axes	12
—axis selection, handle, jog, LITP, C axis indexing, single play-back	
3. Setting the Origin and Zero Return	21
4. Measurement on the Machine	25
5. Dressing on the Machine	28
6. Operating Commands for the Pendant	30
Projector reflection/transmission, oscillation, braking the oscillation axis, wheel spindle rotation, dressing motor rotation, dressing, lifting/lowering the table, table speed, cycle activation, feed stop, jog speed, oscillation override, wheel rotation override, grinding feed override, rapid feed override, emergency stop, clamp open	
7. NC Mode Setting	33
Block skip, single block, dry run, optional stop, X·Y offset, zero return, automatic stop, automatic full stop, machine lock, reset, work table Auto mode, work table offset	
8. Calendar Timer	37
Chapter 4 Operation on the Screen	38
0. Overall Configuration	39
1. CRT Screen	39
2. MDI Key Configuration	40
3. Screen Configuration	43
I. Operation Display	46
I-A. OPERATION DISPLAY	46
I-B. LITP	48
I-C. SINGLE PLAYBACK	50
I-D. RUNNING TIME DISPLAY	53
I-E. MAINTENANCE	54
I-F. TOOL POSITION DISPLAY	64
I-G. PROJECTION MODE DISP.SET	66

II.	Setting Conditions	67
II-A.	Setting Grinding Wheel Conditions	67
II-B.	Setting Speed Conditions	67
II-C.	Setting Relief Conditions	70
II-D.	Tool Radius Information	71
II-E.	Setting Measurement Conditions	72
II-F.	Setting Dressing Conditions	75
III.	Setting Start-up Condition	77
III-A.	GRINDING SETUP	77
IV.	Edit	89
IV-A.	Entering and Editing Shape Programs	92
IV-B.	Setting Processing Conditions	98
V.	Extension Functions	104
V-A.	Play Back Edit	105
V-B.	R Processing	112
V-C.	Tie-Bar Processing	113
VI.	External Input/Output	116
VI-A.	Reading from a Floppy Disc	117
VI-B.	Writing to a Floppy Disc	123
VI-C.	Input from an External Device/PTR	124
VI-D.	Output to an External Device/PTR	129
VI-E.	Reading a DXF File	131
VI-F.	Error Messages	133
VI-G.	Setting Parameters	139
VII.	Grinding Wheel Speed Control Function (Optional)	142