

YCM
ELECTRICAL MANUAL

MODEL : XV560A

(FANUC MXP100i / MXP200i / 18iMB)
(NSV/NDV/XV/DCV/FX350A 薄膜式操作面板適用)

VERTICAL MACHINING CENTER
(FOR NSV/NDV/XV/DCV/FX350A SERIES MACHINE)

OPVMCE125
R008



INDEX	PAGE
1.CAUTION AND WARNING 注意與警告.....	1-1
2.PREFACE 序文	
2.1 PREFACE 序文.....	2-1
2.2 THE CODE IDENTIFICATION OF ATC TYPE 刀庫型式代碼表.....	2-2-1
2.3 THE CODE INDNTIFICATION OF APC TYPE 床台交換型式代碼表.....	2-3
2.4 THE CODE INDNTIFICATION OF MEMBRANE PANEL TYPE 薄膜面板型式代碼表.....	2-4
3.ELECTRIC-SYMBOL DETAIL 電氣符號表.....	3-1
4.CONNECTION BLOCK DIAGRAM 接線方塊圖	
4.1 MXP-100i/MXP-200iM/18iM TOTAL DIAGRAM MXP-100i/MXP-200iM/18iM 總連接圖(電源供應器單元).....	4-1-1
4.2 CONNECTION DIAGRAM PSM,SPM, I/O LINK,AND SVM(FSSB) PSM,SPM I/O LINK,與 SVM(FSSB)連接圖	
4.2.1 CONNECTION DIAGRAM CF PSM,SPM, AND SVM(FSSB) PSM,SPM 與 SVM(FSSB)連接圖.....	4-2-1
4.2.2 CONNECTION DIAGRAM OF IO LINK(OPTION)	4-2-2
4.3 MACHINE I/O CONNECTION BLOCK DIAGRAM 機械輸入/輸出連接方塊圖.....	4-3-1
5.ELECTRIC LAYOUT 電氣箱配置圖	
5.1 WIRING LAYOUT&EARTHING ARRANGEMENT 配線及接地圖... 5-1-1	
5.1.1 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A STANDARD MACHINES	5-1-1
5.1.2 FOR XV1250A STANDARD MACHINES	5-1-2
5.1.3 FOR XV1020A/XV560A STANDARD MACHINES	5-1-3
5.1.4 FOR DCV4016B/DCV3016B/DCV2012B STANDARD MACHINES	5-1-4
5.1.5 FOR DCV2012A STANDARD MACHINES.....	5-1-5
5.1.6 FOR DCV4025B WIRING LAYOUT & EARTHING ARRANGEMENT 配線及接地圖.....	5-1-6
5.2 OPERATOR CABINET BLOCK DIAGRAM 操作箱方塊圖.....	5-2-1
5.2.1 FOR XV560A MACHINES.....	5-2-1
5.2.2 FOR XV1020A MACHINES.....	5-2-2
5.2.3 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A MACHINES	5-2-3
5.2.4 FOR XV1250A/FX350A MACHINES	5-2-4
5.2.5 FOR DCV2012A/DCV2012B/DCV3016B/DCV4016B MACHINES	5-2-4
5.2.6 FOR DCV4025B MACHINES	5-2-5

5.3 RS232C I/O CONNECTION AND SIGNAL TOWER CONNECTION	
RS232C I/O 接線與警示燈接線	5-3-1
5.3.1 RS232C I/O CONNECTION RS232C I/O 接線.....	5-3-1
5.3.2 SIGNAL TOWER CONNECTION 警示燈接線.....	5-3-1
5.4 MAIN OPERATOR'S PANEL 主操作面板.....	5-4-1
5.4.1 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/XV1020A/ XV560A MACHINE(SYMBOLIC+ENGLISH)(TM1)(TWO-STAGE SWITCH)	
FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/XV1020A/ XV560A 機種(符號+英文)(TM1)(二段式開關)	5-4-1
5.4.1.1 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/ XV1020A/XV560A MACHINE(SYMBOLIC+ENGLISH)(TM1) (THREE-STAGE SWITCH)	
FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/ XV1020A/XV560A 機種(符號+英文)(TM1)(三段式開關)	5-4-1-1
5.4.2 FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A MACHINE(SYMBOLIC+ENGLISH)(TM1)(TWO-STAGE SWITCH)	
FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A 機種(符號+英文)(TM1)(二段式開關)	5-4-2
5.4.2.1 FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A MACHINE(SYMBOLIC+ENGLISH)(TM1)(THREE-STAGE SWITCH)	
FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A 機種(符號+英文)(TM1)(三段式開關).....	5-4-2-1
5.4.3 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/XV1020A/ XV560A MACHINE(CHINESE)(TM1)(TWO-STAGE SWITCH)	
FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/XV1020A/ XV560A 機種(中文)(TM1)(二段式開關)	5-4-3
5.4.3.1 FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/ XV1020A/XV560A MACHINE(CHINESE)(TM1) (THREE-STAGE SWITCH)	
FOR NDV102A/NDV85A/NDV66A/NSV102A/NSV85A/NSV66A/ XV1020A/XV560A 機種(中文)(TM1)(三段式開關).....	5-4-3-1
5.4.4 FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A MACHINE(CHINESE)(TM1)(TWO-STAGE SWITCH)	
FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A 機種(中文)(TM1)(二段式開關).....	5-4-4
5.4.4.1 FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A MACHINE(CHINESE)(TM1)(THREE-STAGE SWITCH)	
FOR XV1250A/DCV3016B/DCV4016B/DCV2012B/DCV2012A/FX350A	

機種(中文)(TM1)(三段式開關).....	5-4-4-1
5-4-5-1FOR-TCOL MACHINE(TM2).....	5-4-5-1
6. WIRING 配線	
6.1 BASE FUNCTION 基本功能.....	6-1-1
6.1.1 POWER SUPPLY(FOR STANDARD MACHINE) 電源供應(標準機)....	6-1-1
6.1.1.1 POWER SUPPLY (CE) 電源供應(CE).....	6-1-1-1
6.1.2 CONTROL VOLTAGE 220/110V AC 控制電壓交流 220V/110V.....	6-1-3
6.1.3 CNC POWER ON/OFF CNC 之電源開關	6-1-4
6.1.3.1 CNC POWER SUPPLY UNIT POWER ←→ON/OFF BUTTON CNC 電源供應器單元 POWER ←→開/關按鈕	6-1-4
6.1.4 EMERGENCY STOP 緊急停止	6-1-5
6.1.4.1 STROKE LIMIT CIRCUIT (CE) 極限開關(CE).....	6-1-5
6.1.4.2 STROKE LIMIT 極限開關	6-1-6
6.1.4.3 EMERGENCY STOP BUTTON 緊急停止按鈕.....	6-1-6
6.1.4.4 SAFETY COMPONENT 安全元件	6-1-7
6.1.4.4.1 SAFETY COMPONENT (CE) 安全元件(CE)	6-1-7
6.1.4.4.2 EMERGENCY STOP RELAY 緊急停止繼電器(NON CE MARK MACHINE) 非 CE 規格機器.....	6-1-7-1
6.1.4.5 EMERGENCY BUTTON 緊急按鈕.....	6-1-7-1
6.1.5 FUNCTION 功能.....	6-1-9
6.1.5.1 FUNCTION 功能(TM1).....	6-1-9
6.1.5.2 FUNCTION 功能(TM2)	6-1-9
6.1.6 MODE 模式	6-1-10-1
6.1.6.1 MODE 模式(TM1).....	6-1-10-1
6.1.6.2 MODE 模式(TM2)	6-1-10-1
6.1.7 FEEDRATE OVERRIDE 進給率百分比	6-1-10-2
6.1.8 EDIT LOCK 編輯鎖	6-1-11-1
6.1.8.1 EDIT LOCK 編輯鎖	6-1-11-1
6.1.9 LIGHT 工作燈	6-1-11-1
6.1.9.1 SINGLE LIGHT 單工作燈(TM1).....	6-1-11-1
6.1.9.2 PAIR OF LIGHTS 雙工作燈(TM2).....	6-1-11-1
6.1.9.3 SINGLE DAYLIGHT LAMP 日光燈(TM1).....	6-1-11-2
6.1.9.4 PAIR OF DAYLIGHT LAMPS 雙日光燈(TM1).....	6-1-11-2
6.1.9.5 PAIR OF DAYLIGHT LAMPS 雙日光燈(TM2)	6-1-11-2
6.1.10 CYCLE 循環.....	6-1-11-3
6.1.10.1 CYCLE 循環(TM1).....	6-1-11-3
6.1.10.2 CYCLE 循環(TM2)	6-1-11-3
6.1.11 INDICATE 指示(TM1).....	6-1-12

6.1.12 CUTTING AIR BLAST 切削吹屑	6-1-15
6.1.12.1 PB 按鍵	6-1-15
6.1.12.1.1 PB 按鍵(TM1)	6-1-15
6.1.12.1.2 PB 按鍵(TM2)	6-1-15
6.1.12.2 COIL 線圈	6-1-15
6.1.12.3 SOLENOID 電磁閥	6-1-15
6.1.13 COOLANT 切削液	6-1-16
6.1.13.1 PB 按鍵	6-1-16
6.1.13.1.1 PB 按鍵(TM1)	6-1-16
6.1.13.1.2 PB 按鍵(TM2)	6-1-16
6.1.13.2 COIL 線圈	6-1-16
6.1.13.3 MCC 電磁閥接觸器	6-1-16
6.1.13.4 MOTOR 馬達	6-1-16
6.1.14 CHIP CONVEYOR 螺旋捲屑機	6-1-17
6.1.14.1 PB 按鍵	6-1-17
6.1.14.1.1 PB 按鍵(TM1)	6-1-17
6.1.14.1.2 PB 按鍵(TM2)	6-1-17
6.1.14.2 COIL 線圈	6-1-17
6.1.14.3 MCC 電磁接觸器	6-1-18
6.1.14.4 MOTOR 馬達	6-1-18
6.1.15 SHIP CONVEYOR 船型捲屑機	6-1-19
6.1.15.1 PB 按鍵	6-1-19
6.1.15.1.1 PB 按鍵(TM1)	6-1-19
6.1.15.1.2 PB 按鍵(TM2)	6-1-19
6.1.15.2 COIL 線圈	6-1-19
6.1.15.3 MCC 電磁接觸器	6-1-20
6.1.15.4 MOTOR 馬達	6-1-20
6.1.16 SIGNAL TOWER 警示燈	6-1-21
6.1.16.1 COIL 線圈	6-1-21
6.1.16.2 LAMP 指示燈	6-1-21
6.1.17 MOTOR OVERLOAD&AIR PRESSURE 馬達過載和空壓	6-1-22
6.2 AXIS FUNCTION 軸向功能	6-2-1
6.2.1 AXIS LUBE 軸向潤滑	6-2-1
6.2.1.1 AXIS LUBE DETECTION 軸向潤滑檢出	6-2-1
6.2.1.1.1 DETECTION 檢出	6-2-1
6.2.1.1.2 COIL 線圈	6-2-1
6.2.1.1.3 MOTOR 馬達	6-2-2
6.2.2 AXIS BRAKE 軸向剎車	6-2-3
6.2.2.1 COIL 線圈	6-2-3

6.2.2.2 CONTACT 接點.....	6-2-3
6.2.2.3 WIRING AND SET 配線及設定.....	6-2-3
6.2.2.4 AXIS BRAKE COIL (CE) 軸向剎車線圈(CE).....	6-2-3-1
6.2.2.5 AXIS BRAKE CONTACT (CE) 軸向剎車接點(CE).....	5-2-3-1
6.2.3 JOG AND AXIS STROKE LIMIT SWITCH UNIT	
寸動與軸向極限單元.....	6-2-4-1
6.2.3.1 PB 按鍵.....	6-2-4-1
6.2.3.1.1 PB 按鍵(TM1).....	6-2-4-1
6.2.3.1.2 PB 按鍵(TM2).....	5-2-5-1
6.2.3.2 DETECTION 檢出.....	6-2-5-3
6.2.3.3 COIL 線圈.....	6-2-6
6.2.3.4 SOLENOID 電磁閥.....	6-2-6
6.2.4 MPG OPERATOR'S PANEL 手輪操作面板.....	6-2-7
6.2.4.1 1` -MPG 單手輪.....	6-2-7
6.2.4.2 2` -MPG 雙手輪(OPTION).....	6-2-8
6.2.4.3 3` -MPG 三手輪(POTION).....	6-2-9
6.3 MAGAZINE FUNCTION 刀庫功能.....	6-3-1
6.3.1 MAGAZINE#1,#3 刀庫機種#1,#3.....	6-3-1
6.3.1.1 PB 按鍵.....	6-3-1
6.3.1.2 DETECTION 檢出.....	6-3-1
6.3.1.3 COIL 線圈.....	6-3-2
6.3.1.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-2
6.3.1.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-3
6.3.2 MAGAZINE#2 刀庫#2.....	6-3-4
6.3.2.1 PB 按鍵.....	6-3-4
6.3.2.2 DETECTION 檢出.....	6-3-4
6.3.2.3 COIL 線圈.....	6-3-5
6.3.2.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-5
6.3.2.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-6
6.3.2.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-6
6.3.3 MAGAZINE#4 刀庫#4.....	6-3-7
6.3.3.1 PB 按鍵.....	6-3-7
6.3.3.2 DETECTION 檢出.....	6-3-7
6.3.3.3 COIL 線圈.....	6-3-8
6.3.3.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-9
6.3.3.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-10
6.3.3.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-10
6.3.4 MAGAZINE#5 刀庫#5.....	6-3-11
6.3.4.1 PB 按鍵.....	6-3-11

6.3.4.2 DETECTION 檢出.....	6-3-11
6.3.4.3 COIL 線圈.....	6-3-12
6.3.4.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-13
6.3.4.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-14
6.3.4.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-15
6.3.5 MAGAZINE#6 刀庫#6.....	6-3-16
6.3.5.1 PB 按鍵.....	6-3-16
6.3.5.2 DETECTION 檢出.....	6-3-16
6.3.5.3 COIL 線圈.....	6-3-17
6.3.5.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-18
6.3.5.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-20
6.3.5.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-20
6.3.6 MAGAZINE AND ARM MOTOR TYPE (快速打刀機構) MAG D51=0 ARM D52=7 刀庫類型 D51=0 刀臂類型 D52=7.....	6-3-21
6.3.6.1 PB 按鍵.....	6-3-21
6.3.6.2 DETECTION 檢出.....	6-3-21
6.3.6.3 COIL 線圈.....	6-3-22-1
6.3.6.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-22-2
6.3.6.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-23-1
6.3.6.6 VARIABLE SPEED DRIVES CONTRCL 變頻器控制迴路接線圖.....	6-3-23-2
6.3.6.7 VARIABLE DRIVES AND MOTOR 變頻器 AND 刀臂馬達.....	6-3-23-4
6.3.6.8 MCC 電磁接觸器.....	6-3-23-4
6.3.7 ATC TYPE#9 ATC 型式#9.....	6-3-24
6.3.7.1 PB 按鍵.....	6-3-24
6.3.7.2 DETECTION 檢出.....	6-3-24
6.3.7.3 COIL 線圈.....	6-3-26
6.3.7.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-27
6.3.7.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-28
6.3.7.6 ARM MOTOR 刀臂馬達.....	6-3-28
6.3.8 ATC TYPE#10 ATC 型#10(12CT).....	6-3-29
6.3.8.1 PB 按鍵.....	6-3-29
6.3.8.2 ATC Unload TOOL Pedal Switch ATC 卸刀腳踏開關.....	6-3-30
6.3.8.3 DETECTION 檢出.....	6-3-30
6.3.8.4 COIL 線圈.....	6-3-33
6.3.8.5 SOLENOID AND RELAY 電磁閥與繼電器.....	6-3-35
6.3.8.6 ARM MOTOR 刀臂馬達.....	6-3-36
6.3.8.7 MAGAZINE OPERATION PANEL 刀庫操作面板.....	6-3-37
6.4 SPINDLE FUNCTION 主軸功能.....	6-4-1
6.4.1 SPINDLE 主軸.....	6-4-1

5.4.1.1 PB 按鍵.....	6-4-1
5.4.1.2 DETECTION 檢出.....	6-4-2
5.4.1.3 COIL 線圈.....	6-4-3
5.4.1.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-4-4
6.4.2 SPINDLE TO START BY Y-Δ CONNECTION(OPTION)	
使用 Y-Δ 起動之主軸(選擇)	6-4-5
6.4.2.1 DETECTION 檢出.....	6-4-5
6.4.2.2 COIL 線圈.....	6-4-5
6.4.2.3 SPINDLE Y-Δ MOTOR 主軸為 Y-Δ 馬達.....	6-4-6
6.4.2.4 SPINDLE Y-Y MOTOR 主軸為 Y-Y 馬達.....	6-4-6
6.4.3 OIL AIR UNIT 油氣潤滑單元.....	6-4-7
6.4.3.1 DETECTION 檢出.....	6-4-7
6.4.3.2 COIL 線圈.....	6-4-7
6.4.3.3 MCC 電磁接觸器.....	6-4-7
6.4.3.4 MOTOR 馬達.....	6-4-7
6.5 OPTION FUNCTION 選擇功能.....	6-5-1
6.5.1 SPARE M CODE 預備 M CODE.....	6-5-1
6.5.1.1 DETECTION 檢出.....	6-5-1
6.5.1.2 COIL 線圈.....	6-5-1
6.5.1.3 CONTACT 接點.....	6-5-1
6.5.2 JIG 治具.....	6-5-2
6.5.2.1.1PB 按鍵.....	6-5-2
6.5.2.1.1PB 按鍵(TM1).....	6-5-2
6.5.2.1.2 PB 按鍵(TM2).....	6-5-2
6.5.2.2 DETECTION 檢出.....	6-5-2
6.5.2.3 COIL 線圈.....	6-5-3
6.5.2.4 SOLENOID 電磁閥.....	6-5-3
6.5.3 TANSHING SIMPLE ROTARY AXIS 潭興簡易旋轉軸.....	6-5-4
6.5.3.1 DETECTION 檢出.....	6-5-4
6.5.3.2 COIL 線圈.....	6-5-4
6.5.3.3 SOLENOID 電磁閥.....	6-5-5
6.5.4 POWER OFF FUNCTION 自動斷電功能.....	6-5-6-1
6.5.4.1HARDWARE CONNECTION 硬體接線方式.....	6-5-6-1
6.5.4.1.1 RETAINED PB 自保持按鍵.....	6-5-6-1
6.5.4.1.2 CONTACT 接點.....	6-5-6-1
6.5.4.1.3 TIMER 計時器.....	6-5-6-1
6.5.4.1.4 RELAY 繼電器.....	6-5-6-2
6.5.4.2 SOFTWARE CONTROL TYPE 軟體控制方式.....	6-5-7

6.5.4.2.1	SPRING RETURN PB 瞬間型按鍵	6-5-7
6.5.4.2.2	COIL 線圈	6-5-7
6.5.5	AUTO DOOR 自動門	6-5-8
6.5.5.1	PB 按鍵	6-5-8
6.5.5.2	DETECTION 檢出	6-5-8
6.5.5.3	COIL 線圈	6-5-8
6.5.5.4	SOLENOID 電磁閥	6-5-8
6.5.6	CIL MATIC 油溫控制器	6-5-9-1
6.5.6.1	SPINDLE OIL MATIC 主軸油溫控制器	6-5-9-1
6.5.6.1.1	DETECTION 檢出	6-5-9-1
6.5.6.1.2	MCC 電磁接觸器	6-5-9-1
6.5.6.1.3	MOTOR 馬達	6-5-9-1
6.5.6.2	AXIS OIL MATIC 軸向油溫控制器(DCV4025B)	6-5-9-2
6.5.6.2.1	DETECTION 檢出	6-5-9-2
6.5.6.2.2	COIL 線圈	6-5-9-2
6.5.6.2.3	MOTOR 馬達	6-5-9-2
6.5.7	HYDRAULIC UNIT 油壓單元	6-5-10
6.5.7.1	MCC 電磁接觸器	6-5-10
6.5.7.2	MOTOR 馬達	6-5-10
6.5.8	AUTO TOOL LENGTH MEASUREMENT 自動刀長量測	6-5-11
6.5.8.1	DETECTION 檢出	6-5-11
6.5.8.2	COIL 線圈	6-5-11
6.5.8.3	SOLENOID 電磁閥	6-5-11
6.5.9	WORKPIECE MEASUREMENT 工件量測	6-5-12
6.5.9.1	WORKPIECE MEASUREMENT(MP10/12) 工件量測(MP10/12)	6-5-12
6.5.9.2	WORKPIECE MEASUREMENT(MP11) 工件量測(MP11)	6-5-12
6.5.10	AWPM AND ATLM INSTALLED 工件量測(MP10/12)與刀長量測	6-5-13
6.5.10.1	DETECTION 檢出	6-5-13
6.5.10.2	COIL 線圈	6-5-13
6.5.10.3	SOLENOID 電磁閥	6-5-13
6.5.10.A	AWPM (MP11) AND ATLM INSTALLED 工件量測(MP11)與 刀長量測	6-5-13-1
6.5.10.A.1	DETECTION 檢出	6-5-13-1
6.5.10.A.2	COIL 線圈	6-5-13-1
6.5.10.A.3	SOLENOID 電磁閥	6-5-13-1
6.5.11	OIL HOLE 油路刀桿	6-5-14
6.5.11.1.1	PB 按鍵	6-5-14
6.5.11.1.1	PB 按鍵(TM1)	6-5-14
6.5.11.1.2	PB 按鍵(TM2)	6-5-14

6.5.11.2	COIL 線圈	6-5-14
6.5.11.3	MCC 電磁接觸器	6-5-14
6.5.11.4	MOTOR 馬達	6-5-14
6.5.12	RUSH CHIP 底座汙屑	6-5-15
6.5.12.1	PB 按鍵	6-5-15
6.5.12.1.1	PB 按鍵(TM1)	6-5-15
6.5.12.1.2	PB 按鍵(TM2)	6-5-15
6.5.12.2	COIL 線圈	6-5-15
6.5.12.3	MCC 電磁接觸	6-5-15
6.5.12.4	MOTOR 馬達	6-5-15
6.5.13.1	COOLANT THROUGH SPINDLE (OPTION UNIT) 主軸出油 (選擇單元)	6-5-16-1
6.5.13.1.1	PB 按鍵(TM1)	6-5-16-1
6.5.13.1.2	PB 按鍵(TM2)	6-5-16-1
6.5.13.1.3	DETECTION 檢出	6-5-16-1
6.5.13.1.4	COIL 線圈	6-5-16-1
6.5.13.1.5	MCC 電磁接觸器	6-5-16-2
6.5.13.1.6	MOTOR 馬達	6-5-16-2
6.5.13.2	COOLANT THROUGH SPINDLE(OPTION UNIT) 主軸出油 70BAR (選擇單元)	6-5-16-3
6.5.13.2.1	PB 按鍵(TM1)	6-5-16-3
6.5.13.2.2	PB 按鍵(TM2)	6-5-16-3
6.5.13.2.3	DETECTION 檢出	6-5-16-3
6.5.13.2.4	COIL 線圈	6-5-16-3
6.5.13.2.5	MCC 電磁接觸器	6-5-16-4
6.5.13.2.6	MOTOR 馬達	6-5-16-4
6.5.14	COOLANT,OIL HOLE AND COOLANT GUN 切削液,油路刀桿及清洗噴槍	6-5-17
6.5.14.1	PB 按鍵	6-5-17
6.5.14.2	COIL 線圈	6-5-17
6.5.14.3	SOLENOID AND MCC 電磁閥與電磁接觸器	6-5-18
6.5.14.4	MOTOR 馬達	6-5-18
6.5.14.5	COOLANT GUN 水槍	6-5-18-1
6.5.15	OIL SKIMMER 油水分離機	6-5-19
6.5.15.1	MCC 電磁接觸器	6-5-19
6.5.15.2	MOTOR 馬達	6-5-19
6.5.16	SAFETY DOOR (This is a standard function only in CE machine) 安全門 (在 CE 規格之機台,此為標準功能)	6-5-20-1
6.5.16.1	OPERATOR SIDE 操作側	6-5-20-1

6.5.16.1.1 SAFETY COMPONENT CIRCUIT 安全元件迴路	6-5-20-1
6.5.16.1.2 PB 按鍵(TM1)	6-5-20-2
6.5.16.1.3 PB 按鍵(TM2)	6-5-20-2
6.5.16.1.4 COIL (線圈)	6-5-20-2
6.5.16.1.5 SOLENOID 電磁閥	6-5-20-2
6.5.16.2 MAGAZINE SIDE 刀庫側	6-5-20-3
6.5.16.2.1 SAFETY COMPONENT CIRCUIT 安全元件迴路	6-5-20-3
6.5.17 PROGRAM COOLANT NOZZLE 可程式噴嘴	6-5-21
6.5.17.1 DETECTION 檢出	6-5-21
6.5.17.2 COIL 線圈	6-5-21
6.5.17.3 MOTOR 馬達	6-5-21
6.5.18 SPRAY MIST(OPTION) 噴霧吹屑(選擇)	6-5-22
6.5.18.1 PB 按鍵	6-5-22
6.5.18.2 COIL 線圈	6-5-22
6.5.18.3 SOLENOID 電磁閥	6-5-22
6.5.19 FUNCTION KEY 功能鍵	6-5-24
6.5.20 CENTRIFUGAL COOLANT CLEANER 遠心分離機	6-5-25
6.5.20.1 DETECTION 檢出	6-5-25
6.5.20.2 COIL 線圈	6-5-25
6.5.20.3 MCC 電磁接觸器	6-5-25
6.5.20.4 LEVEL DETECTION RELAY 液位檢出繼電器	6-5-26
6.5.20.5 HIGH LEVEL ELECTRODE TYPE FLUVIOGRAPH 高水位電極 式水位計	6-5-26
6.5.20.6 MOTOR 馬達	6-5-26-1
6.5.21 BLUM TOOL LENGTH MEASUREMENT BLUM 雷射刀長量測	6-5-27
6.5.21.1 CONNECTION DIAGRAM	6-5-27
6.5.21.2 WIRE DEFINITION	6-5-28
6.5.22 SPECIAL BUTTON FUNCTION 特殊按鍵功能設定	6-5-29
6.5.22.1 PB 按鍵	6-5-29
6.5.22.2 DESCRIPTION 功能說明	6-5-29
6.5.22.3 DATA SETTING 資料設定	6-5-29
6.5.23 4/5 AXIS FUNCTION 4/5 軸功能(OPTION)	6-5-30
6.5.23.1 PB 按鍵	6-5-30
6.5.23.2 DETECTION 檢出	6-5-30
6.5.23.3 COIL 線圈	6-5-31
6.5.23.4 SOLENOID 電磁閥	6-5-31
6.5.24 SPINDLE THERMAL COMPENSATION UNIT 主軸溫升補償單元	6-5-32
6.5.24.1 CONNECTION 連接圖	6-5-32
6.5.25 COOLANT THROUGH SPINDLE CTS 主軸出油 CTS 副水箱	6-5-33
6.5.25.1 DETECTION 檢出	6-5-33

6.5.25.2	COIL 線圈.....	6-5-33
6.5.25.3	OVERFLOW RELAY 高水位繼電器.....	6-5-34
6.5.25.4	MCC 電磁接觸器.....	6-5-34
6.5.25.5	MOTOR 馬達.....	6-5-35
6.5.25.6	CTS ORGANIZATION CHART CTS 系統圖.....	6-5-35
6.5.26	COOLANT GUN 水槍.....	6-5-36
6.5.26.1	PB 按鍵(TM1).....	6-5-36
6.5.26.2	PB 按鍵(TM2).....	6-5-36
6.5.26.3	COIL 線圈.....	6-5-36
6.5.26.4	SOLENOID 電磁閥.....	6-5-36
6.5.26.5	RELAY 繼電器.....	6-5-37
6.5.26.6	MOTOR 馬達.....	6-5-37
6.6.	APC UNIT FOR SHUTTLE TYPE 直進式 APC 單元.....	6-6-1
6.6.1	RACK TYPE(TP1) 排齒式(TP1).....	6-6-1
6.6.1.1	APC OPERATOR'S PANEL APC 操作面板.....	6-6-1
6.6.1.2	APC PB APC 按鍵.....	6-6-1
6.6.1.3	APC DETECTION APC 檢出.....	6-6-2
6.6.1.4	APC COIL APC 線圈.....	6-6-3
6.6.1.5	APC INDICATE APC 指示.....	6-6-4
6.6.1.6	APC SOLENOID APC 電磁閥.....	6-6-5
6.6.2	ARM TYPE(TP3) 擺臂式.....	6-6-6
6.6.2.1	APC OPERATOR'S PANEL APC 操作面板.....	6-6-6
6.6.2.2	APC PB APC 按鍵.....	6-6-6
6.6.2.3	APC DETECTION APC 檢出.....	6-6-7
6.6.2.4	APC COIL APC 線圈.....	6-6-8
6.6.2.5	APC INDICATE APC 指示.....	6-6-9
6.6.2.6	APC SOLENOID&MCC APC 電磁閥及電磁接觸器.....	6-6-10
6.6.2.7	APC RUSH CHIP MOTOR APC 沖屑馬達.....	6-6-11
6.7.	APC UNIT FOR ROTARY TYPE APC 旋轉式單元.....	6-7-1
6.7.1	β6 SERVO MOTOR TYPE(TP4) β6 馬達式.....	6-7-1
6.7.1.1	APC PB APC 按鍵.....	6-7-1
6.7.1.2	APC DETECTION APC 檢出.....	6-7-2
6.7.1.3	APC COIL APC 線圈.....	6-7-3
6.7.1.4	APC INDICATE APC 指示.....	6-7-4
6.7.1.5	APC SOLENOID APC 電磁閥.....	6-7-5
6.7.1.6	APC RUSH CHIP MOTOR APC 沖屑馬達.....	6-7-6
6.7.1.6.1	MCC 電磁接觸器.....	6-7-6
6.7.1.6.2	MOTOR 馬達.....	6-7-6

6.7.2 PMM β 6 SERVO MOTOR TYPE (TP5) β 6 馬達(TP5)	6-7-7
6.7.2.1 APC PB APC 按鍵	6-7-7
6.7.2.2 APC DETECTION APC 檢出	6-7-8
6.7.2.3 APC COIL APC 線圈	6-7-9
6.7.2.4 APC INDICATE APC 指示	6-7-10
6.7.2.5 APC SOLENOID APC 電磁閥	6-7-11
6.7.2.6 PMM β 6 SERVO MOTOR PMM β 6 伺服馬達(TP5)	6-7-12
6.7.2.6.1 COIL 線圈	6-7-12
6.7.2.6.2 MCC 電磁接觸器	6-7-12
6.7.2.6.3 PMM EMERGENCY BUTTON 緊急按鈕	6-7-12
6.7.2.6.4 PMM APC SERVO UNIT (β 6 SERIES) 床台交換伺服單元 (β 系列)	6-7-13
6.7.3 PMM β 6 SERVO MOTOR TYPE FOR FV56A/T (TP7) PMM β 6 馬達式	6-7-14
6.7.3.1 APC PB APC 按鍵	6-7-14
6.7.3.2 APC DETECTION APC 檢出	6-7-15
6.7.3.3 APC COIL APC 線圈	6-7-16
6.7.3.4 APC INDICATE APC 指示	6-7-17
6.7.3.5 APC SOLENOID APC 電磁閥	6-7-18
6.7.3.6 APC RUSH CHIP MOTOR APC 沖屑馬達	6-7-19
6.7.3.6.1 MCC 電磁接觸器	6-7-19
6.7.3.6.2 MOTOR 馬達	6-7-19
6.7.3.7 PMM β 6 SERVO MOTOR PMM β 6 伺服馬達(TP7)	6-7-20
6.7.3.7.1 COIL 線圈	6-7-20
6.7.3.7.2 MCC 電磁接觸器	6-7-20
6.7.3.7.3 PMM EMERGENCY BUTTON 緊急按鈕	6-7-20
6.7.3.7.4 PMM APC SERVO UNIT (β 6 SERIES) 床台交換伺服單元 (β 系列)	6-7-21
6.7.4 TURN TABLE CAM-TYRE FOR TCV41A/TCV51T(TP8) 凸輪式(TP8)	6-7-22
6.7.4.1 APC PB APC 按鍵	6-7-22
6.7.4.2 APC DETECTION APC 檢出	6-7-22
6.7.4.3 APC COIL APC 線圈	6-7-23
6.7.4.4 APC INDICATE APC 指示	6-7-24
6.7.4.5 APC SOLENOID APC 電磁閥	6-7-24
6.7.4.6 APC MOTOR APC 馬達(TP8)	6-7-25

7.CONNECTION PIN ASSIGNMENT 腳位連接分配

7.1 SIGNAL I/O 信號之輸入/輸出.....	7-1-1
7.1.1 MAIN OPERATOR'S PANEL PIN ASSIGNMENT 主操作面板腳位之 分配.....	7-1-1
7.1.1.1 MAGAZINE PANEL LAYOUT 刀庫操作面板配線.....	7-1-2
7.1.2 I/O MOUDLE <-> OPERATOR PANEL I/O PCB (CE53) I/O 模組到操作面盤電路(CE53).....	7-1-3
7.1.3 I/O MOUDLE <-> OPERATOR PANEL I/O PCB (CE54) I/O 模組到操作面盤電路(CE54).....	7-1-4
7.1.4 I/O MOUDLE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD (JA3) I/O 模組到操作面盤轉播站(JA3).....	7-1-5
7.1.5 OPERATOR PANEL I/O DISTRIBUTION BOARD <->MPG (P17) 操作面盤電路到手輪(P17).....	7-1-5
7.1.6 CNC I/O BOARD(JA3) <-> I/O DISTRIBUTION BOARD (JA3-P)	7-1-5
7.1.7 I/O MOUDLE <-> I/O DISTRIBUTION BOARD (P21) I/O 模組到操作面盤轉播站(P21).....	7-1-6
7.1.8 I/O DISTRIBUTION BOARD (POWER) 操作面盤轉播站(POWER).....	7-1-6
7.1.9 I/O DISTRIBUTION BOARD (LIGHT) 操作面盤轉播站(LIGHT).....	7-1-6
7.2 MS I/O DISTRIBUTION BOARD MS 盤轉播站.....	7-2-1
7.2.1 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS1) I/O 模組到 MS 盤轉播站(MS1).....	7-2-1
7.2.2 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS2) I/O 模組到 MS 盤轉播站(MS2).....	7-2-3
7.2.3 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS3) I/O 模組到 MS 盤轉播站(MS3).....	7-2-5
7.2.4 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS4) I/O 模組到 MS 盤轉播站(MS4).....	7-2-7
7.2.5 MS I/O MCUDLE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD (HE2) MS 板 I/O 模組到操作面盤轉播站.....	7-2-9
7.3 TERMINAL I/O PCB CONNECTOR PIN ASSIGNMENT 輸入/輸出 PCB 板接頭端子腳位分配	7-3-1
7.3.1 CONNECTOR I1 I1 接頭	7-3-1
7.3.2 CONNECTOR I2 I2 接頭	7-3-1
7.3.3 CONNECTOR O1 O1 接頭.....	7-3-2
7.3.4 CONNECTOR O2 O2 接頭.....	7-3-2
7.3.5 CONNECTOR O3 O3 接頭.....	7-3-3
7.3.6 CONNECTOR O4(#2 POT ROTATION MOTOR) O4 接頭(#2 刀庫旋 轉馬達).....	7-3-4

7.3.7 CONNECTOR O4(#6 MAGZINE MOTOR) O4 接頭(#6 刀庫馬達).....	7-3-5
7.3.8 CONNECTOR EMG EMG 接頭.....	7-3-6
7.3.9 CONNECTOR Z-BRAKE Z-BRAKE 接頭.....	7-3-7
7.3.10 CONNECTOR POWER POWER 接頭.....	7-3-7
7.3.11 CONNECTOR LUBE LUBE 接頭.....	7-3-8
7.3.12 CONNECTOR ATC ATC 接頭.....	7-3-8
7.3.13 CONNECTOR CHE3 CHE3 接頭.....	7-3-8
7.3.14 CONNECTOR CHE4 CHE4 接頭.....	7-3-8
7.3.15 CONNECTOR SPARE O SPARE O 接頭.....	7-3-9
7.3.16 CONNECTOR SPARE I SPARE I 接頭.....	7-3-9
7.3.17 MS PLATE<->EXTERNAL I/O PCB(APC1)	
MS 板<->外部 I/O 板(APC1).....	7-3-10
7.3.18 MS PLATE<->EXTERNAL I/O PCB(APC2)	
MS 板<->外部 I/O 板(APC2).....	7-3-10
7.3.19 MS PLATE<->EXTERNAL I/O PCB(APC3)	
MS 板<->外部 I/O 板(APC3).....	7-3-11
7.3.20 AXIS LIMIT SWITCH 軸向極限開關.....	7-3-12
7.3.20.1 MS PLATE<->AXIS LIMIT SWITCH(P13X)	
MS 板<->軸向極限開關(P13X).....	7-3-12
7.3.20.2 MS PLATE<->AXIS LIMIT SWITCH(P13X)	
MS 板<->軸向極限開關(P13X) Note:This page is used for	
fp100A/B machine. 這頁適用於 fp100A/B 機種.....	7-3-13
7.3.20.3 MS PLATE<->AXIS LIMIT SWITCH(P13X)	
MS 板<->軸向極限開關(P13X) Note:This page is used for	
fp120A/B machine. 這頁適用於 fp120A/B 機種.....	7-3-14
7.3.21 HEAD LIMIT 頭部檢出.....	7-3-15
7.3.22 MAGAZINE LIMIT 刀庫檢出.....	7-3-15
7.4 AXIS SERVO MOTOR 軸向伺服馬達.....	7-4-1
7.4.1 FEEDBACK CONTROL(JF1,JF2,JF3<->MOTOR) 回授控制.....	7-4-1
7.4.2 VELOCITY CONTROL(JS1A,JS2A,JS3A,JS4A<->AMP) 速度控制 ...	7-4-2
7.4.3 A AXIS POWER CONTROL CONNECTOR A 軸電樞控制接頭.....	7-4-3
7.4.4 A AXIS FEEDBACK CONTROL CONNECTOR A 軸回授控制接頭.....	7-4-4
7.4.5 β6 SERVO MOTOR FEEDBACK CONTROL(JF4<->MOTOR)	
β6 伺服馬達回授控制 (JF4<->MOTOR).....	7-4-5
7.4.6 SPINDLE 主軸.....	7-4-6
7.4.6.1 SPEED CONTROL(JY2)速度控制.....	7-4-6
7.4.6.2 EXTERNAL POSITION CODER(JY4)分離式位置檢出器.....	7-4-6
7.4.6.3 MAGNETIC SENSOR(JY3)磁性感測器.....	7-4-6
7.4.7 CNC JA41<->SPM JA7B CNC JA41<->主軸驅動器 JA7B.....	7-4-7

7.4.8	DATA INPUT/OUTPUT 資料之輸入/輸出.....	7-4-8
7.4.9	SERVO MAGAZINE β (SERIES) 伺服刀庫(β 系列)	7-4-9
7.4.9.1	JD1B \leftrightarrow JD1A	7-4-9
7.4.9.2	TYPE A/B	7-4-9
7.4.9.3	JA35	7-4-9
7.4.10	CONNECTING THE HIGH-SPEED SKIP (HDI).....	7-4-10
7.4.10.1	JA40	7-4-10

A.APENDIX 附錄

A.1	THE FLOW CHART OF SAFETY DOOR FUNCTION 安全門功能使用流程圖.....	A-1
A.2	THE SERVICE M-CODE OF ATC STEP BY STEP (#6)供服務人員使用之 M-CODE 換刀步驟.....	A-4
A.3	HOW TO USE PROGARE COOLANT NOZZLE FUNCTION..... 如何使用可程式噴嘴功能.....	A-5 A-7
A.4	β 6 SERVO MOTOR PARAMETER SETTING(TP4) β 6 伺服馬達參數設定(TP4)	A-9
A.5	ATC TYPE 7 SETTING (FOR FP100A/20T) ATC 7 設定用於 FP100A20 把刀	A-13
A.6	ALARM DISPLAY AND CORRESPONDING COUNTERMEASURES (WITH PMM SERVO UNIT) PMM 伺服器警報表.....	A-17
A.7	PMM APC SERVO MOTOR (β SERIES) OPERATION 床台交換伺服馬達(β 系列)操作	A-29
A.8	N2 SERIES INVERTER DRIVE PARAMETER SETTING N2 系列變頻器參數設定	A-33
A.9	DIGITAL PRESSURE SWITCH SETTING 壓力檢出器設定	A-34
A.10	SPINDLE WARM UP SETTING 主軸暖機設定	A-36
A.11	SKF OIL AIR UNIT (SKF TOS-EX2 CONTROLLER DC24V-TYPE) SKF 油氣潤滑單元(SKf TOS-EX2 控制盒 DC24V-型式).....	A-37
A.12	ATC TYPE 9 SETTING (FOR FP66/100A 24T) ATC 9 設定用於 FP66/100A 24T	A-38
A.13	SPINDLE TOOL DISPLAY MACRO FUNCTION 主軸刀號和預備刀號顯示彙集功能.....	A-41