

MITSUBISHI CNC MELDAS 520AM

INSTRUCTION MANUAL
(9.4"EL/9"CRT)

ADVANCED AND EVER ADVANCING
MITSUBISHI ELECTRIC

CONTENTS

	Page
I OPERATION MANUAL	
1. SETTING AND DISPLAY UNIT OPERATION	1-1
1-1 Appearance of 9-inch CRT Setting and Display Unit	1-1
1-2 Functions of Display Areas	1-2
1-3 Screen Transition Diagram	1-4
1-3-1 Screen Transition When Power Is Turned On	1-4
1-3-2 Screen Transition Diagram	1-5
1-4 Screen Selection Procedure	1-6
1-5 Data Setting Method	1-9
1-6 Data Unit	1-14
1-6-1 Parameter (user)	1-14
1-6-2 Machine Parameter	1-14
1-7 NC Coordinates	1-15
1-8 Multi-Window Screen	1-16
1-9 Window Operation Keys	1-16
1-10 Window Screen	1-17
1-10-1 Display/Clear	1-17
1-10-2 Contents of Window Screen	1-17
1-11 Help Window	1-18
1-11-1 Display/Clear	1-18
1-11-2 Contents of the Help Window	1-19
1-12 Key Input to the Screen	1-19
1-12-1 Selecting A key Input Enabled Window	1-19
(Called An Active Window)	
1-12-2 Identifying the Key-Input Enabled Window	1-20
1-13 Command Key	1-21
1-13-1 Menu Functions	1-21
1-13-2 Screen Print	1-21
1-13-3 Selecting the Window Screen	1-21

 
 
	Page
1-13-4 Changing the Number of Axes Displayed	1-27
1-13-5 Moving the Window	1-30
2. POSITION DISPLAY MONITOR	2-1
2-1 POSITION	2-2
2-1-1 Total Clear of CRT Screen	2-3
2-1-2 Position Display Counter Zero and Origin Zero	2-3
2-1-3 Manual Numerical Value Command (M, S, T)	2-4
2-1-4 Displaying Automatic Operation Program	2-9
2-2 COORDI	2-10
2-2-1 Buffer Modification	2-12
2-3 COMMAND	2-17
2-3-1 Execution Program Monitor	2-17
2-3-2 Execution Modal Monitor	2-18
2-3-3 Total Integrating Time Display	2-20
2-3-4 Program Tree Display	2-22
2-4 SEARCH	2-23
2-4-1 Memory Search	2-25
2-4-2 Tape Search, Computer Link Search	2-26
2-4-3 Collation Stop	2-29
2-5 RESEARCH	2-35
2-5-1 Program Restart Sequence	2-38
2-5-2 RESEARCH Operation	2-40
2-5-3 Restart Position Return Method	2-45
2-5-4 Manual Numeric Command in the Program Restart	2-46
2-5-5 Notes	2-48
2-5-6 Program Restart when TOOL LIFE Management is Active	2-48
2-6 COMMON VARIABLES	2-49
2-6-1 Common Variable Display	2-51
2-6-2 Common Variable Setting	2-52

	Page
2-6-3 Deleting Common Variables	2-54
2-7 LOCAL VARIABLES	2-55
2-7-1 Local Variable Data Display	2-57
2-8 Machining Time Calculation	2-58
2-8-1 Machining Time Calculation Setting	2-59
2-8-2 Operation for Machining Time Calculation	2-60
2-8-3 CRT Display Data during Machining Time Calculation	2-65
2-8-4 Notes on Oepration for Machining Time Calculation	2-66
2-8-5 Operation for Machining Time Calculation on Graphic Screen	2-68
2-8-6 Machining Time Calculation for Individual CNC Functions	2-69
2-8-7 Command Valid for Machining Time Calculation	2-71
3. TOOL OFFSET	3-1
3-1 TOOL OFFSET	3-2
3-1-1 Tool Offset Data Setting	3-4
3-1-2 Tool Offset Data Deletion	3-6
3-1-3 Tool Offset Data Setting Modes (Absolute Value Setting, Incremental Setting, and Repeated Incremental Setting)	3-7
3-1-4 Manual Tool Length Measurement	3-11
3-2 TOOL REGISTRATION	3-15
3-2-1 Function Outline	3-15
3-2-2 Tool Registration in Magazine Pot	3-16
3-2-3 Tool Registration in HEAD, NEXT, and INDEX	3-17
3-2-4 Tool Registration Data Clear	3-17
3-2-5 Manual Numeric Command Operation on the TOOL REGISTRATION Screen (M, T)	3-18
3-3 TOOL LIFE	3-19
3-3-1 Function Outline	3-19
3-3-2 TOOL LIFE Screen Data Display	3-21
3-3-3 TOOL LIFE Data Display and Setting (TOOL LIFE Data Screen) ...	3-25
3-3-4 Clear of ALL TOOL LIFE Data (HEAD, NEXT, GROUP LIST Screen)	3-27

	Page
3-4 WORK	3-28
3-4-1 Work Coordinate System Offset Data Setting	3-29
3-4-2 External Work Coordinate System Offset Data Setting	3-30
3-4-3 Machine Position Data Display	3-30
3-4-4 Manual Numeric Commands (M, T) on the Work Coordinate System Offset Screen	3-30
3-4-5 Work Coordinate System Offset Data Setting Modes	3-30 (Absolute and Incremental)
4. PARAMETERS (USER)	4-1
4-1 PLC-SW	4-2
4-1-1 PLC Switch On and Off Operation	4-2
4-2 CONTROL PARAMETER	4-3
4-3 AXIS PARAMETER	4-11
4-4 SETUP PARAMETER	4-15
4-5 PROCESS PARAMETER	4-18
4-5-1 Process Parameter Setting	4-20
4-6 Coordinate Rotation Measurement	4-24
4-7 Measurement Parameter	4-26
5. EDIT/MDI	5-1
5-1 Function Outline	5-1
5-2 Menu Function	5-2
5-2-1 Menu Function of MDI Screen	5-2
5-2-2 Menu Function of EDIT Screen	5-5
5-3 Program Edit Operation	5-8
5-3-1 Data Display Update (One Screen Scroll)	5-8
5-3-2 Data Display Update (One Line Scroll)	5-8
5-3-3 Data Change	5-9
5-3-4 Data Insertion ()	5-11
5-3-5 Deletion of One Character ()	5-13
5-3-6 Deletion of One Block ()	5-14

	Page
5-3-7 Deletion of Data on One Screen ( )	5-15
5-4 MDI Screen Extension Operation	5-16
5-4-1 MDI Data Registration in Memory ()	5-16
5-5 Edit Screen Extension Operation	5-18
5-5-1 Edit Data Call ()	5-18
5-5-2 New Program Registration and Preparation ()	5-24
5-6 Graphic Address Menu	5-26
5-7 Sequence Number Auto Addition	5-34
5-7-1 Parameter Setting	5-34
5-7-2 Edit Operation	5-35
6. DIAGNOSIS	6-1
6-1 ALARM MESSAGE	6-3
6-2 SERVO MONITOR	6-6
6-2-1 Servo Monitor	6-6
6-2-2 Absolute Position Monitor	6-9
6-2-3 Servo Diagnosis	6-11
6-2-4 Spindle Monitor	6-13
6-2-5 Power Supply Diagnosis	6-14
6-2-6 PLC Axis Monitor	6-20
6-2-7 PLC Axis Absolute Position Monitor	6-22
6-2-8 PLC Axis Diagnosis	6-24
6-3 PLC Interface Diagnosis	6-25
6-3-1 PLC-I/F Setting and Display	6-25
6-3-2 PLC Device Data Display	6-29
6-3-3 PLC Interface Signal Forcible Definition (Single-shot Type)	6-31
6-3-4 PLC Interface Signal Forcible Definition (Modal-Type)	6-32
6-3-5 Diagnosis Executed When an Emergency Stop Status Occurs	6-33
6-4 NC SPECIFICATION	6-36
6-4-1 Software Files	6-36

	Page
6-4-2 Hardware Configuration	6-37
6-4-3 NC Specification Listing	6-38
6-4-4 NC Monitor	6-39
6-4-5 (Pager)	6-40
6-4-6 Memory Read/Write	6-40
7. DATA IN/OUT	7-1
7-1 DATA INPUT	7-3
7-1-1 Change of Input and Comparison	7-4
7-1-2 Work Program Input	7-5
7-1-3 Inputting Tool Offset Data	7-7
7-1-4 Inputting Parameter Tape	7-8
7-2 DATA OUTPUT	7-9
7-2-1 Work Program Output	7-12
7-2-2 Outputting Tool Offset Data	7-15
7-2-3 Outputting Parameter Tape	7-16
7-3 PROGRAM ERASE	7-18
7-4 PROGRAM FILE	7-24
7-5 PROGRAM COPY	7-26
7-5-1 Work Program Copy	7-26
7-5-2 Work Program Condense	7-27
7-5-3 Work Program Merge	7-28
7-5-4 Changing the Machining Program Number	7-30
7-6 INPUT/OUTPUT PARAMETER	7-31
7-6-1 I/O BASE PARAMETER	7-31
7-6-2 I/O DEVICE PARAM	7-34
7-6-3 Computer Link Parameters	7-39
7-7 RS-232C I/O Device Connection and Parameters	7-44
7-7-1 Connection of Tape Reader, Tape Puncher, Printer	7-44
7-7-2 Parallel Puncher Connection for Tape Data Output	7-47

	Page
7-8 Data Protection	7-48
7-8-1 Data Protection Key	7-48
7-8-2 Edit Lock B, C	7-51
8. GRAPHICS	8-1
8-1 Function Outline	8-1
8-2 Menu Function	8-2
8-3 Use of TRACE Mode ()	8-4
8-4 Use of Check Modes	8-6
8-5 GRF MODE ()	8-16
8-6 SCALE ()	8-18
8-6-1 Scale Change	8-18
8-6-2 Display Position Change	8-19
8-7 STANDARD ()	8-25
8-8 ROTATION ()	8-26
8-9 ERASE ()	8-27
8-10 PROGRAM ()	8-28
9. LADDER CIRCUIT MONITOR [For the PLC Built-in Specification]	9-1
9-1 Parameter Setting	9-1
9-2 Menu Functions	9-2
9-3 Circuit Read Functions	9-4
9-4 Displaying the Monitor Screen	9-5
9-5 Circuit Monitor	9-6
9-6 Various Monitor Operations	9-8
9-7 Monitor Stop at the Monitor Stop Trigger Point	9-9
9-8 Registration Monitor	9-12
9-9 DEC ↔ HEX Current Value Monitor	9-14
10. VISUAL ANALIZER (WAVEFORM DISPLAY)	10-1
10-1 Menu Function	10-3

	Page
11. OTHER INFORMATION ON RUNNING AND OPERATION	11-1
11-1 On-conditions of Stored Stroke Limit	11-1
11-2 Deceleration Check	11-3
11-2-1 Functions	11-3
11-2-2 Deceleration Check Method	11-4
11-3 Absolute Position Detection System	11-6
11-3-1 Set Up of the Absolute Position Detection System	11-6
11-3-2 Dog Type Reference Point Return in Absolute Position Detection Mode	11-7
11-3-3 Dog-less Zero Point Initialization	11-7
11-3-4 Resetting of the Basic Machine Coordinate System	11-12
11-3-5 Resetting of the Reference Point	11-13
11-3-6 Check Functions for Dog-less Absolute Position Detection	11-14

APPENDIX 1. MACHINE PARAMETERS (M3)	App. 1-1
1-1 Selecting Machine Parameters	App. 1-2
1-2 Basic Specification Parameters	App. 1-4
1-3 Axis Specification Parameters	App. 1-33
1-4 Zero Return Parameters (Reference Point Return)	App. 1-42
1-5 Servo Parameters	App. 1-45
1-5-1 Servo Specification Parameter	App. 1-45
1-5-2 Servo Adjustment Parameter	App. 1-51
1-5-3 Servo Parameter	App. 1-54
1-5-4 Supplementary Explanation	App. 1-67
1-6 Machine Error Compensation	App. 1-72
1-6-1 Function Outline	App. 1-73
1-6-2 Setting Compensation Data	App. 1-76
1-6-3 Example of Using a Linear Axis as the Base Axis	App. 1-78
1-6-4 Example of Using a Rotation Axis as the Base Axis	App. 1-80
1-7 Macro File	App. 1-81
1-8 Spindle Parameters	App. 1-84
1-8-1 Spindle NC Parameter	App. 1-84
1-8-2 Spindle Specification Parameters	App. 1-88
1-8-3 Spindle Adjustment Parameters	App. 1-96
1-8-4 Spindle Parameters	App. 1-100
1-8-5 Supplementary Explanation (D/A Output Function)	App. 1-131
1-9 PLC Parameters	App. 1-134
1-10 PLC Axis Parameters	App. 1-139
1-11 Position Switches	App. 1-147
1-11-1 Outline of Functions	App. 1-147
1-11-2 Operation	App. 1-147
1-11-3 Position Switch Setting	App. 1-148
1-11-4 Position Switch Cancelling	App. 1-149

	Page
1-11-5 Signal Output of Position Switch	App. 1-150
APPENDIX 2. REGISTERING/EDITING THE FIXED CYCLE PROGRAM	App. 2-1
2-1 Fixed Cycle Operation Parameters	App. 2-1
2-2 Inputting the Fixed-cycle Program	App. 2-3
2-3 Outputting the Fixed-cycle Program	App. 2-4
2-4 Erasing the Fixed-cycle Program	App. 2-5
2-5 Standard Fixed Cycle Subprogram	App. 2-7
APPENDIX 3. RS-232C I/O DEVICE PARAMETER SETTING EXAMPLES AND CABLE CONNECTION	App. 3-1
APPENDIX 4. OPERATION MESSAGES ON CRT SETTING DISPLAY UNIT	App. 4-1
APPENDIX 5. LIST OF ALARMS	App. 5-1
5-1 Operation Alarms	App. 5-1
5-2 Stop Codes	App. 5-7
5-3 Servo Alarms	App. 5-11
5-4 Spindle Alarms	App. 5-18
5-5 MCP Alarms	App. 5-23
5-6 System Alarms	App. 5-27
5-7 Program Error Appendix	App. 5-36
5-8 Messages at Emergency Stop	App. 5-55
5-9 Computer Link Errors	App. 5-56
APPENDIX 6. PLAYBACK	App. 6-1
6-1 Playback Operation	App. 6-2
6-1-1 Playback Screen	App. 6-2
6-1-2 Playback Editing	App. 6-4
6-1-3 Notes on Playback Operation	App. 6-6
6-1-4 Playback Counter Display	App. 6-6
6-1-5 Coordinates to Be Stored	App. 6-7
6-2 Edit Operation	App. 6-8
6-2-1 Moving the Cursor	App. 6-8
6-2-2 Insertion of Block	App. 6-9

	Page
6-2-3 Deletion of Block	App. 6-9
6-2-4 [ADD] Program Deletion ()	App. 6-9
6-2-5 Automatic Addition of Sequence Numbers in Playback Mode ...	App. 6-10
6-3 Limitations	App. 6-14
APPENDIX 7. KEYING HISTORY DISPLAY CODES	App. 7-1
APPENDIX 8. LIQUID CRYSTAL DISPLAY (LCD)	App. 8-1
8-1 Picture Element Defects	App. 8-1