

**VERTICAL MACHINING CENTER  
VS40**

**INSTRUCTION MANUAL  
OPERATION**

**SEIKI-SEICOS Σ10M/16M/18M**

**(Edition 1. 4-2000)**

**HITACHI SEIKI**

## TABLE OF CONTENTS

<b>OPERATION OF MACHINE .....</b>	1-1
1. Daily Maintenance and Inspection .....	1-1
2. Operation by Using the Main Operation Panel and Sub-operation Panel .....	1-1
2-1 NC Operation Keys .....	1-15
3. Operational Procedures .....	1-18
3-1 When Starting the Machine .....	1-18
3-2 Warming-up Operation of Spindle .....	1-19
3-2-1 Warming-up at the Time of Starting Daily Operation .....	1-19
3-2-2 Warming-up When the Machine Was Not Operated for More Then One Week or Longer .....	1-19
3-3 Zero Return Procedures .....	1-20
3-4 When Completing the Daily Operation .....	1-21
4. Manual Operation .....	1-22
4-1 Each Axial Feed .....	1-22
4-2 Rapid Traverse .....	1-22
4-3 Mounting and Dismounting the Tool .....	1-23
5. Manual Data Input (MDI) Operation .....	1-24
5-1 Each Axial Feed .....	1-24
5-2 Coolant .....	1-24
5-3 Spindle Speed Change and Spindle Revolution .....	1-24
5-4 Spindle Positioning .....	1-25
6. Registration of Program .....	1-26
7. Program No. Search .....	1-29
7-1 Search by Key in a Program No. ....	1-29
7-2 Search to Utilize the Program List. ....	1-30

<b>8. Edition of Program .....</b>	<b>1-31</b>
8-1 Preparation in Advance at the Time of the Edition of Program. ....	1-31
8-2 Search of Word .....	1-32
8-3 Edition of Program .....	1-33
8-4 Back Ground Editing .....	1-39
8-5 Copy of Program .....	1-41
8-6 Editing Procedure of Range Designation (Expanded Tape Editing/Option) .....	1-42
8-7 Alteration of Word (Expanded Tape Editing) .....	1-43
8-8 Deletion of Program .....	1-45
8-9 Arrangement of Program .....	1-46
8-10 Process After Edition .....	1-47
<b>9. Output of Program .....</b>	<b>1-48</b>
<b>10. Automatic Operation .....</b>	<b>1-50</b>
10-1 When Machining the First Workpiece, Checking the Newly Created Program .....	1-50
10-2 Program Memory Operation .....	1-50
10-3 When Inserting Manual Operation in Automatic Operation .....	1-51
10-4 When Performing MDI Operation in Automatic Operation .....	1-51
<b>11. Operation of Automatic Tool Changer (ATC) .....</b>	<b>1-53</b>
11-1 Names of ATC Each Section .....	1-53
11-1-1 20/30 Tool ATC .....	1-53
11-2-1 16 Tool ATC .....	1-54
11-2 Explanation of Actions .....	1-55
11-2-1 20/30 Tool ATC .....	1-55
11-2-2 16 Tool ATC .....	1-58
11-3 Rotation of Tool Storage Magazine (at Single Mode) .....	1-59
11-4 Attachment and Detachment of Tools .....	1-60
11-5 Relation Between Spindle Nose Key and ATC .....	1-61
11-6 Attention When Using Oil Hole Tool (Optional) .....	1-62
11-7 ATC Program Operation .....	1-62
11-8 Condition Check During ATC Execution .....	1-63

<b>12. Setting (Data) .....</b>	<b>1-66</b>
12-1 Outline .....	1-66
<b>13. Time Measuring, Data .....</b>	<b>1-68</b>
13-1 Time Measuring .....	1-68
13-2 Date and Time .....	1-69
<b>14. Animated Drawing .....</b>	<b>1-70</b>
14-1 Outline .....	1-70
14-2 Drawing Parameter .....	1-71
<b>15. Parameter Setting .....</b>	<b>1-74</b>
<b>16. Operations Concerning W-Setter .....</b>	<b>1-78</b>
16-1 Outline .....	1-78
16-2 Input Signal and Various Operations .....	1-78
16-3 Operation for Setting of Work Setter Reference Surface .....	1-79
16-4 Operation for Setting of Work Setter Reference Hole .....	1-80
16-5 Operation for Setting of Work Setter Coordinate Modification .....	1-81
16-6 Manual Overwriting of Work Zero Point Offset Amount. ....	1-82
16-7 Setting Operation of Tool Setter .....	1-82
16-8 Tool Length Measuring Mode, Tool Diameter Measuring Mode .....	1-84
16-9 Parameter .....	1-85
16-10 Others .....	1-86
<b>17. Safety Guard .....</b>	<b>1-88</b>
17-1 Safety Guard (Tool Length) .....	1-88
17-2 Safety Guard (Comparison) .....	1-92
<b>18. Tool Life Management .....</b>	<b>1-96</b>
18-1 Tool Life Management .....	1-96
18-2 Spare Tool Management .....	1-98
18-3 Premachining Tool Check .....	1-99
18-4 Tool Skip and Tool Reset (Option) .....	1-100
18-5 Tool Life Management Program .....	1-100
18-6 Tool Life Management Operation .....	1-104

18-7	Tool Life Screen .....	1-105
18-8	Spare Tool Screen .....	1-109
18-9	Tool Status List Screen .....	1-112
18-10	Tool Life Management Parameters and Their Setting .....	1-113
18-11	Alarms .....	1-114
<b>19.</b>	<b>Cutting Monitoring Unit .....</b>	<b>1-115</b>
19-1	Outline .....	1-115
19-2	Monitoring Method .....	1-115
19-3	Monitoring Functions .....	1-116
19-4	Cutting Monitoring Program .....	1-119
19-5	Data Setting .....	1-122
19-6	Cutting Monitoring Operation .....	1-124
19-7	Set Load Screen .....	1-128
19-8	Load Graph Screen .....	1-131
19-9	Life Graph Screen .....	1-132
19-10	Display and Setting of Parameters .....	1-133
19-11	Alarms .....	1-137