

Cincom B12
(1F1)
(1F5)
Maintenance Manual

CITIZEN WATCH CO., LTD.
Precision Machinery Division

MAINTENANCE MANUAL

Table of Contents

1. OUTLINE..... 1-1

2. SAFETY PRECAUTION 2-1

2.1 Warning Indications..... 2-1

2.2 Emergency Stop Button 2-6

2.3 Safety Devices 2-7

2.4 General Notes 2-14

2.5 Notes on Starting Machine 2-16

2.6 Notes on Operation Preparation 2-17

2.7 Notes on Automatic Operation 2-18

2.8 Notes on Maintenance/Check 2-19

2.9 Notes on Completion of Work 2-19

2.10 Notes on Fire Prevention..... 2-20

2.11 Response to Emergency 2-22

 2.11.1 Evacuation-required emergency 2-22

 2.11.2 Power failure 2-22

 2.11.3 Restarting operation 2-22

This contents does not go into details. Please refer to the table of contents for detailed headline listed on the top of each chapter.

Code No.	C-B012IV-320 3E1-0002	Serial No.	M0076~ Z3377~	Date	1997.7
----------	--------------------------	------------	------------------	------	--------

3. MACHINE STRUCTURE	3-1
3.1 Names of Machine Components	3-2
3.2 Spindle Unit.....	3-6
3.3 Guide Bushing.....	3-7
3.4 Tool Post.....	3-8
3.5 One-Point Back Machining	3-9
3.6 Z Axis Feed Structure.....	3-10
3.7 X Axis Feed Structure	3-11
3.8 One-Point Back Machining Feed Structure.....	3-12
3.9 Lubricant Device	3-13
3.10 Coolant Device.....	3-17
3.11 Electrical Device.....	3-19
4. PERIODICAL CHECK	4-1
4.1 Periodical Check	4-1
4.1.1 Daily check.....	4-2
4.1.2 Monthly check.....	4-6
4.1.3 Semi-annual check.....	4-10
4.1.4 Removing chips.....	4-14
4.2 Oil and Grease Supply	4-18
4.2.1 Lubricant table.....	4-18
4.2.2 Precautions upon lubrication and replacement of the lubricant.....	4-19
4.2.3 Cross reference table of lubricant.....	4-23
4.3 Consumable Parts.....	4-24
4.4 Mounting and Adjusting Chuck.....	4-25
4.4.1 Mounting and replacing chuck.....	4-25
4.4.2 Adjusting chucking force	4-26
4.4.3 Mounting and replacing of back spindle chuck (type V).....	4-32
4.4.4 Position adjustment of chuck close cam (type V)	4-33
4.4.5 Adjusting chucking force (type V)	4-35
4.5 Mounting Guide Bushing Device	4-37
4.5.1 Replacing guide bushing device (fixed type).....	4-37
4.5.2 Replacing guide bushing device (rotary type)	4-39
4.6 Replacing and Adjusting Guide Bushing.....	4-42
4.6.1 Replacing and adjusting guide bushing (fixed type).....	4-42
4.6.2 Replacing and adjusting guide bushing (fixed, longitudinal adjustment type).....	4-44
4.6.3 Replacing and adjusting guide bushing (synchronous rotary type).....	4-46
4.7 Mounting Materials (U10J)	4-49

5. TROUBLESHOOTING	5-1
5.1 Procedure for Detecting Trouble	5-1
5.1.1 Overview	5-1
5.1.2 Procedure for detecting trouble	5-1
5.2 Status Screen	5-3
5.2.1 Operation in the status screen	5-3
5.2.2 Reading addresses and data on status screen	5-4
5.3 Alarms	5-5
5.3.1 Alarms and messages	5-5
5.3.2 Messages with alarm lamp on	5-6
5.3.3 Messages with alarm lamp blinking	5-7
5.3.4 Operator messages	5-14
5.4 WARNING MESSAGES	5-15
5.4.1 Warnings and Messages	5-15
5.4.2 List of Warning Messages	5-15
5.5 Troubleshooting	5-18
5.5.1 Resetting emergency stop button	5-18
5.5.2 Recovering power circuit shut down due to overcurrent	5-19
5.5.3 Resetting thermal relay for coolant motor	5-21
5.5.4 Resetting external unit alarms	5-23
5.5.5 Resetting the Interference Area Alarm	5-24
5.5.6 Resetting other alarms	5-27
5.6 Machine Part Faults	5-34
5.6.1 Machine start failure	5-34
5.6.2 Main spindle rotation failure	5-35
5.6.3 Failure of differential tapping tool spindle rotation	5-35
5.6.4 Guide bushing faults	5-36
5.7 Appendix	5-38
5.7.1 Timer setup	5-38
5.7.2 Specifying keep relay	5-41
5.7.3 Setting the Data Table	5-44
5.7.4 Setting the P-CODE Variables	5-47
5.7.5 Returning to zero point	5-51
5.7.6 Mechanical adjustment	5-55
5.7.7 Software version	5-56
5.7.8 Dedicated NC Parameter	5-57
5.7.9 Electrical device layout	5-71
5.7.10 Relay board parts layout	5-75
5.7.11 Terminal layout	5-76
5.7.12 Control box parts layout (type I)	5-77
5.7.12 Control box parts layout (type V)	5-78

B12 Maintenance Manual

6. PARTS LIST6-1

7. WIRING DIAGRAMS7-1

8. LADDER DIAGRAMS8-1

APP. RELOCATING THE NC MACHINEAPP-1