

AJAX

AJT 4 Turret Milling Machine

Installation, Operating, Maintenance
and Spare Parts Manual

AJAX MACHINE TOOL CO. LIMITED
Stockport Road, Bredbury, Cheshire SK6 2AT
Telephone: 061-430 5231
Telex: 668396

A member of the  group of companies

INDEX

	<i>page</i>
Specification	4
Overall Dimensions	5
Foundation Details	6
Installation of Machine	7-8
Electrical Wiring Diagram	9
Lubrication	10
Lubrication Chart	11
Key to Controls Fig. 4	12
Fig. 4	13
Key to Controls Fig. 5	14
Fig. 5	15
Key to Controls Fig. 6	16
Fig. 6	17
Operating Instructions	18-25
Maintenance	26-28
Index to Plates	29
Front View of Standard Milling Head	30
Sectional Side View of Milling Head	31
Front View of Variable Speed Milling Head	32
Sectional Side View of Variable Speed Milling Head	33
Sectional Views of Quill Feed (Standard and Variable)	34
View in Direction K	35
Sectional Views of Column, Overarm and Angular Adjustment to Turret Head	36
Section Through Table Traverse Mechanism	37
Arrangement of Rapid, Normal and Cross Traverse Control	38
Controls for Vertical Traverse of Knee	39
Section Through Vertical and Cross Traverse Mechanisms	40
Section Through Feed Gear Box and Drive from Feed Motor	41
General and Sectional Views of Dial Controlling all Feeds	42
Arrangement of Centralised Lubrication System	43
Arrangement Slideway Wipers	44
Flexible Cover Protecting Vertical and Cross Slideways	45
Key to Part Numbers 1-ISO-40 Right Angle Attachment	46
ISO-40 Right Angle Attachment	47
Key to Part Numbers - Quillmaster Attachment	48
Quillmaster Attachment	49
Procedure for Ordering Spare Parts	50

Although the information given in this manual was correct at the time of printing, we are constantly working to improve the performance of the machines we produce and consequently reserve the right to make alterations to design and specification without notice.