


Fadal[®] ENGINEERING

A SUBSIDIARY OF GIDDINGS & LEWIS, INC.

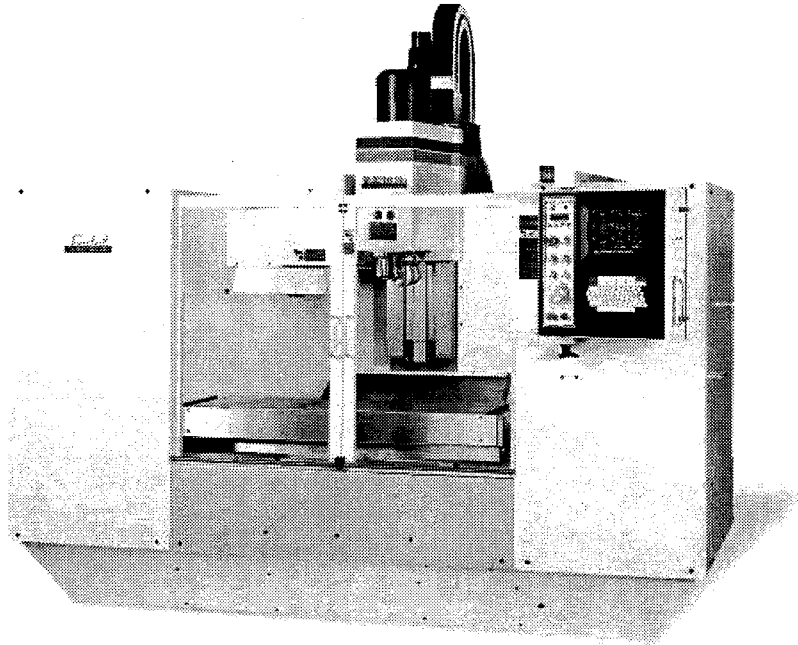

VMC OPERATOR MANUAL

APRIL 1998

CE

Corporate Offices.....voice (818) 407-1400.....fax (818) 407-0020
Service / Parts.....voice (818) 727-2100.....fax (818) 407-1004
Programming Support.....voice (818) 727-2100.....fax (818) 407-0061
support@fadaleng.com

20701 Plummer Street • Chatsworth • California • 91311 • U.S.A.

VMC OPERATOR MANUAL

APRIL 1998

This reference covers the following Vertical Machining Centers

VMC-15

VMC-15XT

VMC-2016L

VMC-3016L

VMC-2216

VMC-2216HT

VMC-3016

VMC-3016HT

VMC-4020

VMC-4020HT

VMC-4020A

VMC-5020A

VMC-6030

VMC-8030

CE

© Copyright 1998 Fadal Engineering Company

All Rights Reserved

Operator Manual

Table of Contents

POWER ON

Prestart Up Checks	1
Power On for System'97	2
Automatic Cold Start.	2
Wrong Power Off Procedure.	5
Auto Startup Program	6
Power Off Procedure.	7

PENDANT

Video ON/OFF Switch.	9
Optional Stop Switch.	9
Block Skip Switch	9
Keylock	10
Alternate NOEDIT Feature	10
Positioning Read Out Display	11
How to Display the Position Read-out:.	11
Axis Load Display	12
Manual Data Input Display	13
Large Format Display.	13
Modes.	14
Command Prompting Menus	14
Quick Keys Menu.	14
Edit Menu.	14
Functions Menu.	15
Using the Command Mode	15
Cursor in the Command Mode	16
Using the Delete Key	17
Using the Menu Mode	18

JOG MODES

Jog Using the Manual Pulse Generator	19
Jog Using the Keyboard	19
Jog Using the Remote Manual Pulse Generator	20
Jog Using the Vector Jog for 5 Axis Head	21
Single Step, Jog Away From	21
Slide Hold, Jog Away From	22
Waiting Stage, Jog Away From.	24

Operator Manual

RUN MODES

Auto, Running a Program	27
Waiting	28
Changing Modes	29
Manual Pulse Dry Run	30
Dry Run	31
Single Step	32
Slide Hold.	33
Mid-Tape (Program) Start	34

EMERGENCY STOP

Emergency Stop.	37
-------------------------	----

FORMATS

Formats	39
Changing Parameters	39
Saving Parameters	40
FORMAT 1 Parameter settings	41
FORMAT 2 Parameter settings	42
FORMAT 1 Program Example #1	44
FORMAT 1 Program Example #2	45
Notes on FORMAT 1 style programming:	46
FORMAT 2 Program Example	47
Notes on FORMAT 2 style programming:	48
Viewing the Software ID Number	50

SPINDLE

Manual Operations	51
Spindle, RPM Established from MDI	51
Spindle On	52
Spindle Off	52
Spindle, Loading a Holder from the ATC	52
Spindle, Unorient to Turn by Hand	53
Spindle, Orient	53
Spindle Reversed While Using Jog	54

TOOL CHANGER

Turret (ATC), Open for Loading; Using the TC,1 Command	55
Tool Changer Crash.	55
Turret Loading, Putting Tools in the Tool Changer	56
Turret (ATC), Establish Tool Order; Using the SETTO Command	57

Operator Manual

COOLANT	59
Using the Coolant 1 and Coolant 2 Buttons	59
Coolant-Through Spindle	59
COMMANDS	
Command Use Summary	63
Viewing Error Messages	64
Auto, Using the AU Command	65
Backlash, Using the BL Command	66
Setting Baud Rate Using the CD (Change Device) Command	67
Change Program Lines, Using the CH Command	68
Copy Program Blocks, Using the CO Command	70
Cold Start	71
Delete Program Lines, Using the DE Command	71
Direct Numerical Control, Using the DNC Command	72
Direct Numeric Control, Using a Server Program	72
Fixture Offsets, Using the FO Command	74
To view the fixture offset table:	76
To change fixture offset information:.	76
Insert Program Lines, Using the IN Command	77
Learn Mode (digitizing), Using the LE Command	79
List Program	81
MDI, Manual Data Input	82
Memory Free, Using the ME Command	83
Memory Clear, Using the NE Command	83
Number Program Lines, Using the NU Command	83
Program Library, Using the PR Command	89
Memory Clear, Using the RI Command	91
Turret (ATC), Establish Tool Order; Using the SETTO Command	92
Using the SETP Command	93
Position (PART), Establish; Using the SET(AXIS) Command	94
Establishing part home using an edge finder:.	94
Establishing part home using an indicator:.	95
Home Position (Part), Correction Using SETH	96
Tool Length Offset, Setting	96
Tool Length Offsets, Purpose and Use in Program.	98
Save Parameters, Using the SP command	99
Sum Program, Using the SU Command.	100
Input, From a Tape Punch or Computer.	104
Adding a Program to the End of the Program in Memory	105

Operator Manual

Output, to Tape Punch or Computer.	106
Turret (ATC), Open for Loading	107
Tool Changer Crash	107
Turret Loading, Putting Tools in the Tool Changer.	108
Tool Diameter Input, Using the TO Command	108
Utility Option - UT - Setting Tool Length Offsets	109
Verify Punched Tape, Using the VT Command	112
CNC 88HS GRAPHICS MENU	113
Menu.	113
Plotting options	113