

NC LATHE

NEX-108

OPERATION MANUAL

TAKISAWA

TAIWAN

CONTENTS

A. SAFETY GUID	A1-1~A13-3
B. MACHINE INSTRUCTION MANUAL	B1-1~B4-17
C. FUNCTION OF OPERATION PANEL	C1-1~C3-10
D. MANUAL OPERATION	D1-1~D7-17
E. AUTOMATIC OPERATION	E1-1~E7-2
F. TOOLING MANUAL	F1-1~F6-1