

GE Fanuc Series 15/150

Operator's Manual
(Appendixes)

COMPUTER NUMERICAL CONTROL PRODUCTS

B-61220E/04/1988

No part of this manual may be
reproduced in any form.

All specifications and designs
are subject to change without notice

Copyright by FANUC LTD, Japan 1988
Authorized reprint by GE Fanuc Automation

GE Fanuc Automation

This manual explains the following models:

Products name	Abbreviation		
FANUC Series 15-TA	15-TA	15-T	Series 15
FANUC Series 15-TF	15-TF		
FANUC Series 15-TTA	15-TTA	15-TT	
FANUC Series 15-TTF	15-TTF		
FANUC Series 15-MA	15-MA	15-M	
FANUC Series 15-MF	15-MF		
FANUC Series 150-TA	150-TA	150-T	Series 150
FANUC Series 150-MA	150-MA	150-M	

CONTENTS

APPENDIX 1	FUNCTION AND TAPE FORMAT LIST	1
APPENDIX 2	RANGE OF COMMAND VALUE	8
APPENDIX 3	NOMOGRAPHS	13
3.1	Incorrect Threaded Length	13
3.2	Simple Calculation of Incorrect Thread Length	14
3.3	Tool Path at Corner	16
3.4	Radius Direction Error at Circular Cutting	18
APPENDIX 4	TAPE JOINING	19
APPENDIX 5	STATUS WHEN TURNING THE POWER ON, WHEN RESET	20
APPENDIX 6	RS-232-C/RS-422 INTERFACE	22
1.	GENERAL	22
2.	CONNECTOR POSITION AND PIN ARRANGEMENT OF INTERFACES	23
3.	SPECIFICATIONS OF RS-232-C INTERFACE	29
3.1	Signal Name of RS-232-C Interface	29
3.2	Signal Description of RS-232-C Interface	30
3.3	Transmission Method of RS-232-C Interface	31
3.4	Connection between RS-232-C Interface and I/O Device	37
4.	SPECIFICATION OF RS-422 INTERFACE	39
4.1	Signal Name of RS-422 Interface	39
4.2	Signal Description of RS-422 Interface	40
4.3	Transmission Method of RS-422 Interface	41
4.4	Connection between RS-422 Interface and I/O Device	41
APPENDIX 7	PARAMETERS	43
1.	PARAMETER DISPLAY	43
1.1	Display Parameters Other than Pitch Compensation Data	43
1.2	Displaying Pitch Error Compensation Data	43
2.	PARAMETER SETTING	43
2.1	Parameter Tape Format	43
2.1.1	Format of parameter tape except pitch error compensation data	43
2.1.2	Pitch error compensation data tape format	45
2.2	Setting Parameters Using Parameter Tape	45
2.3	Setting from MD1	46
2.4	Setting Procedure for Digital Servo Parameters	46
2.4.1	General setting procedure	46
2.4.2	Setting procedure using high-resolution pulse coder	48
2.4.3	Setting procedure using full-closed feedback (separate detector)	48
3.	PARAMETER TAPE PUNCH	48
3.1	Punching All Parameters	48
3.2	Punching the Parameters Except Pitch Error Compensation Data	48
3.3	Punching Pitch Error Compensation Data	49
4.	DESCRIPTION OF PARAMETERS	49
4.1	Parameters Related to Setting (Data number 0000-)	50
4.2	Timer (Data number 0100-)	57
4.3	Parameters Related to Axis Control (Data number 1000-)	61
4.4	Parameters Related to Chopping (Data number 1191-)	72
4.5	Parameters Related to the Coordinate System (Data number 1200-)	74
4.6	Parameters Related to Feedrate (Data number 1400-)	77
4.7	Parameters Related to Acceleration/Deceleration Control (Data number 1600-)	91
4.8	Parameters Related to Servo (Data number 1800-)	97
4.9	Tandem Control	123
4.9.1	Axial configuration of system which includes tandem control ..	124
4.9.2	Preload function	125

4.9.3	Setting data (parameters)	126
4.9.4	Axis related signal connection	129
4.10	Parameters Related to DI/DO (Data number 2000-)	129
4.11	Parameters Related to CRT/MDI and EDIT (Data number 2200-)	140
4.12	Parameters Related to Programs (Data number 2400-)	157
4.13	Parameters Related to Serial Spindle Output and Cs Contouring Control Function	164
4.13.1	Automatic setting method of serial interface spindle parameters (upload from spindle amplifier to CNC)	164
4.13.2	Transfer method of serial interface spindle parameters (download from CNC spindle amplifier)	164
4.13.3	Other parameters	164
4.13.4	Warning	164
4.13.5	Details of parameters (Data number 3000-)	165
4.14	Parameters Related to Graphic Display (Data number 4821-)	200
4.15	Parameters Related to Reader/Puncher Interface (Data number 5000-)	203
4.16	Parameters Related to Stroke Limit (Data number 5200-)	210
4.17	Parameters Related to Pitch Error Compensation (Data number 5420-)	218
4.18	Parameters Related to Inclination Compensation (15-M/15-T only) (Data number 5461-)	222
4.19	Parameters Related to Straightness Compensation (15-M/15-T only) (Data number 5481-)	224
4.20	Parameters Related to Spindle Control (Data number 5600-)	227
4.21	Parameters Related to Tool Offset (Data number 6000-)	259
4.22	Parameters Related to Canned Cycle (Data number 6200-)	269
4.23	Parameters Related to Scaling and Coordinate Rotation (Data number 6400-)	277
4.24	Parameters Related to Automatic Corner Override (Data number 6610-)	278
4.25	Parameters Related to Involute Interpolation Automatic Speed Control (Data number 6620-)	281
4.26	Parameters Related to Uni-Directional Positioning (Data number 6820-)	282
4.27	Parameters Related to Custom Macro (Data number 7000-)	283
4.28	Parameters Related to Program Restart (Data number 7110-)	288
4.29	Parameters Related to Skip Functions (Data number 7200-)	289
4.30	Parameters Related to Automatic Tool Offset (15-T only) and Automatic Tool Length Measurement (15-M only) (Data number 7300-)	292
4.31	Parameters Related to Tool Life Management (Data No. 7400-)	294
4.32	Parameters Related to Turret Axis Control (Data No. 7500-)	296
4.33	Other Parameters (Data No. 7600-7794)	302
4.34	Parameters Related to Service (Data number 8000-)	318
APPENDIX 8	CODE USED IN PROGRAM	319
APPENDIX 9	LIST OF INTERNAL CODES OF KANJI AND HIRAGANA	321
APPENDIX 10	G CODE TABLE	329
APPENDIX 11	ERROR CODE TABLE	337
APPENDIX 12	WARNING MESSAGE LIST	372
APPENDIX 13	LIST OF OPERATIONS	375
APPENDIX 14	LIST OF SPECIFICATIONS	377