

# **FANUC Series 20-FA**

## **PARAMETER MANUAL**

**B-62180E/01**

©FANUC LTD., 1993



# CONTENTS

1. DISPLAYING PARAMETERS .....	1
2. SETTING PARAMETERS FROM MDI .....	2
3. INPUTTING AND OUTPUTTING PARAMETERS THROUGH THE READER/PUNCHER INTERFACE .....	4
3.1 Outputting Parameters through the Reader/Puncher Interface .....	5
3.2 Inputting Parameters through the Reader/Puncher Interface .....	6
4. DESCRIPTION OF PARAMETERS .....	7
4.1 Parameters of Setting .....	9
4.2 Parameters of Reader/Punch Interface .....	11
4.3 Parameters of Axis Control/Increment System .....	14
4.4 Parameters of Coordinates .....	17
4.5 Parameters of Stroke Limit .....	20
4.6 Parameters of Feedrate .....	22
4.7 Parameters of Acceleration/Deceleration Control .....	26
4.8 Parameters of Servo .....	29
4.9 Parameters of DI/DO .....	39
4.10 Parameters of CRT/MDI, Display, and EDIT .....	42
4.11 Parameters of Programs .....	49
4.12 Parameters of Pitch Error Compensation .....	52
4.13 Parameters of Spindle Control .....	55
4.14 Parameters of Tool Compensation .....	72
4.15 Parameters of Canned Cycles .....	74
4.16 Parameters of Rigid Tapping .....	76
4.17 Parameters of Scaling/Coordinate Rotation .....	84
4.18 Parameters of Uni-Directional Positioning .....	86
4.19 Parameters of Custom Macros .....	87
4.20 Parameter of Skip Function .....	91
4.21 Parameter of External Data Input/Output .....	92
4.22 Parameters of Displaying Operation Time and Number of Parts .....	93
4.23 Parameters Related to Handle Feed and Handle Interrupt .....	96
4.24 Parameters of Software Operator's Panel .....	99
4.25 Parameters for Maintenance .....	103