

# **INSTRUCTION MANUAL**

# **YAMARA**

## **V-1100**

## **(FANUC 0iMC)**

# CONTENTS

---

<b>PREFACE</b> .....	I
<b>BRIEF INTRODUCTION</b> .....	II
<b>1 SAFETY PRECAUTIONS</b>	
1-1 SAFETY PRECAUTIONS .....	1-1
1-2 GENERAL SAFETY INSTRUCTIONS .....	1-2
<b>2 MACHINE VIEWING</b>	
2-1 BASIC INTRODUCTION .....	2-1
2-2 MACHINE OUTLINE DRAWING .....	2-2
<b>3 SPECIFICATION OF MACHINE</b>	
3-1 MACHINE SPECIFICATION .....	3-1
3-2 MAIN COMPONENTS SPECIFICATION .....	3-2
3-3 TOOL SPECIFICATION .....	3-5
3-4 CHIP CONVEYOR .....	3-6
<b>4 PREPARATION AND TRANSPORTATION</b>	
4-1 ENVIRONMENTAL REQUIREMENT .....	4-1
4-2 POWER SUPPLY .....	4-1
4-3 TRANSPORTATION .....	4-2
4-4 INSTALLATION AND POWER ON .....	4-7
4-5 LEVELING .....	4-13
<b>5 PNEUMATIC SYSTEM</b>	
5-1 FEATURE OF OUTLINE .....	5-1
5-2 TECHNICAL DATA .....	5-2
5-3 THE PRESSURE SETTING METHOD OF F.R.L. UNIT .....	5-2
5-4 SKETCH OF PNEUMATIC SYSTEM .....	5-3
5-4 SKETCH OF PNEUMATIC SYSTEM (CE) .....	5-4
<b>6 LUBRICATION SYSTEM</b>	
6-1 TECHNICAL DATA .....	6-1
6-2 OUTLINE DIMENSION .....	6-1
6-3 FILL UP LUBRICATION OIL .....	6-2

---

6-4 THE LOOP SKETCH OF LUBRICATION SYSTEM .....	6-3
<b>7 COOLANT SYSTEM</b>	
7-1 OUTLINE DIMENSION OF COOLANT PUMP .....	7-1
7-2 TECHNICAL DATA .....	7-1
7-3 INSTALLATION AND PIPING NOTES .....	7-1
7-4 TROUBLESHOOTING .....	7-3
7-5 COMPONENTS OF PUMP .....	7-3
7-6 THE SKETCH OF COOLANT SYSTEM .....	7-4
<b>8 HEAT EXCHANGER</b>	
8-1 GENERAL CAUTIONS .....	8-1
8-2 TECHNICAL DATA .....	8-1
8-3 OUTLINE DRAWING .....	8-1
<b>9 MAINTENANCE</b>	
9-1 DAILY MAINTENANCE .....	9-1
9-2 WEEKLY MAINTENANCE .....	9-2
9-3 SEMIANNUAL MAINTENANCE .....	9-2
9-4 ANNUAL MAINTENANCE .....	9-3
9-5 MAINTENANCE OF ATC UNIT .....	9-3
9-6 ATC TROUBLESHOOTING .....	9-6
<b>10 OPERATION</b>	
10-1 CRT AND INPUT PANEL .....	10-1
10-2 OPERATION PANEL .....	10-2
10-3 DESCRIPTION OF FUNCTIONAL BUTTONS .....	10-3