

CRUISE CONTROL

# PRESS BRAKE(ZII)

RG-150 — RG-400L

## OPERATOR'S MANUAL

**OMADA<sup>®</sup>**

1643a  
012 (a)

1643a

# CONTENTS

## SECTION 1 — INSTALLATION

Foundation .....	1-1
Installation .....	1-1
Cleaning .....	1-1
Leveling .....	1-2
Hydraulic oil supply .....	1-3
Electrical connection .....	1-3

## SECTION 2 — CONTROLS

Control panel (RG-150, 150L, 200, 200L and 200LL) .....	2-1
Control panel (RG-250, 300, 300L, 400 and 400L) .....	2-2
Controls .....	2-3

## SECTION 3 — OPERATION

Installation of punches and dies .....	3-1
Bending operation .....	3-4
Punch and die removal .....	3-6
Installation of 3U-die and 1V-die .....	3-6
Punching operation .....	3-8

## SECTION 4 — MAINTENANCE

Periodic maintenance .....	4-1
Care of punches and dies .....	4-1
Distance piece adjustment .....	4-1

## ACCESSORY GUIDE

Emergency stop bar .....	5-1
Foot switch .....	5-1

SAFETY PRECAUTIONS .....	6-1
--------------------------	-----

SPECIFICATIONS .....	7-1
----------------------	-----