

## Air bearing protection lock

The Air bearing protection lock must be fitted before turning the air supply off. Do not try to remove the lock until the air has been turned back on. We recommend that the lock is fitted whenever a user finishes using the instrument.




**Caution!** Only remove or fit the Air bearing protection lock while air is applied to the bearing (**minimum 3 bar**).

---

Fitting the protection lock:


Align the lock as shown below and then gently push up until it clicks into place.

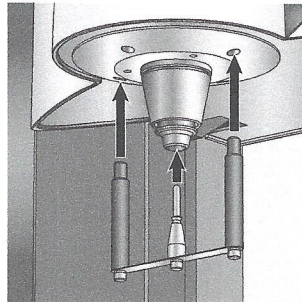

Removing the protection lock:

Push up the chuck ring to disengage the bearing protection lock.

The protection lock will drop once disengaged.

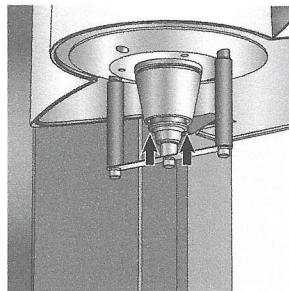

## Moving the system

See also the Health and Safety in this manual for more information: Health & Safety on page 15.