

# TC-31A

## INSTALLATION MANUAL

Please read this manual carefully before starting operation.

**brother**

# INSTALLATION CONTENTS

|           |   |      |
|-----------|---|------|
| CHAPTER 1 | GENERAL PRECAUTIONS                             | 1-1  |
| 1-1       | Precautions of First Importance                 | 1-2  |
| 1-1-1     | When making an access to machine motion area    | 1-4  |
| 1-1-2     | In case of machine trouble or danger            | 1-5  |
| 1-1-3     | When operating                                  | 1-5  |
| 1-1-4     | During an operation                             | 1-5  |
| 1-1-5     | Air piping                                      | 1-6  |
| 1-2       | Precautions on Safety                           | 1-6  |
| 1-2-1     | Before starting operation                       | 1-7  |
| 1-2-2     | During operation                                | 1-7  |
| 1-2-3     | If a machine trouble occurs during an operation | 1-7  |
| 1-2-4     | Other precautions                               | 1-7  |
| 1-3       | Person Allowed for Operation                    | 1-8  |
| 1-3-1     | Operation Qualifications                        | 1-8  |
| 1-3-2     | Working area                                    | 1-9  |
| CHAPTER 2 | GENERAL SYSTEM DESCRIPTION                      | 2-1  |
| 2-1       | Main Features                                   | 2-2  |
| 2-1-1     | Spindle head                                    | 2-2  |
| 2-1-2     | X-, Y- and Z-axis feeding mechanisms            | 2-2  |
| 2-2       | Basic Configuration                             | 2-3  |
| 2-2-1     | Basic configuration                             | 2-3  |
| 2-2-2     | Machine rear                                    | 2-4  |
| 2-3       | Overall View and Major Dimensions               | 2-5  |
| 2-4       | Machine Specifications                          | 2-7  |
| 2-5       | Accessories                                     | 2-11 |
| 2-5-1     | Standard accessories                            | 2-11 |
| 2-5-2     | Optional Parts                                  | 2-12 |
| CHAPTER 3 | TRANSPORT, KEEPING                              | 3-1  |
| 3-1       | Relocating the Machine                          | 3-2  |
| 3-1-1     | Preparation for relocation                      | 3-2  |
| 3-1-2     | Unloading the machine from the fork lift        | 3-5  |
| 3-1-3     | Levelling                                       | 3-7  |

|           |  |      |
|-----------|--|------|
| CHAPTER 4 | INSTALLATION                                   | 4-1  |
| 4-1       | Environmental Standards for Installation       | 4-2  |
| 4-1-1     | Environmental conditions                       | 4-2  |
| 4-1-2     | Notes for installation                         | 4-3  |
| 4-2       | Installing the Machine                         | 4-4  |
| 4-3       | Wiring between Primary Power and Machine Power | 4-5  |
| 4-3-1     | Opening and closing the door of the CNC unit   | 4-5  |
| 4-3-2     | Grounding                                      | 4-7  |
| 4-3-3     | Power specifications for wiring                | 4-8  |
| 4-3-4     | Transformer connection terminal change.        | 4-11 |
| 4-3-5     | Power supply cable connection                  | 4-16 |
| 4-4       | Piping   | 4-18 |
| 4-5       | Quick Table                                    | 4-19 |
| 4-5-1     | Overview                                       | 4-19 |
| 4-5-2     | Setting  | 4-21 |

|   |   |      |
|---|---|------|
| → | CHAPTER 5 External Input and Output Signals -----   | 5-1  |
|   | 5-1 Location of external input/output signal boards -----                                       | 5-3  |
|   | 5-2 IO board -----  | 5-4  |
|   | 5-2-1 Connection of external input/output terminal on the IO board -----                        | 5-5  |
|   | 5-2-2 Connection of free-mapping external input/output<br>terminal on the IO board. -----       | 5-10 |
|   | 5-2-3 Precautions When Using External Input and Output signals -----                            | 5-12 |
|   | 5-2-4 Power output terminal on IO the board -----   | 5-15 |
|   | 5-3 Extend IO board -----   | 5-17 |
|   | 5-3-1 Connection of free-mapping external input/output<br>terminal on the Extend IO board ----- | 5-18 |
|   | 5-3-2 Power for free-mapping external input/output<br>terminal on the Extended IO board -----   | 5-21 |
|   | 5-4 External output signals statuses<br>during memory operation -----                           | 5-22 |

|           |                    |     |
|-----------|--------------------|-----|
| CHAPTER 6 | INPUT OUTPUT       | 6-1 |
| 6-1       | I/O Status Display | 6-2 |



|           |  |      |
|-----------|--|------|
| 6-2       | Other Screens  | 6-9  |
|           |  |      |
| CHAPTER 7 | MACHINE PARAMETER  | 7-1  |
| 7-1       | MACHINE PARAMETER  | 7-2  |
| CHAPTER 8 | ADJUSTMENT   | 8-1  |
| 8-1       | Spindle, X-, Y-, Z- axis and Magazine positionning<br>check in case of servo error | 8-2  |
|           |  |      |
| CHAPTER 9 | INSPECTIONS  | 9-1  |
| 9-1       | Regular Inspections  | 9-2  |
| 9-1-1     | Check before operation   | 9-3  |
| 9-2       | Inspection of Machine Lubricants   | 9-5  |
| 9-2-1     | Greasing interval  | 9-5  |
| 9-2-2     | Recommended grease   | 9-5  |
| 9-2-3     | Lubricating points   | 9-7  |
| 9-2-4     | Gear-oil supply and exchange replacement   | 9-9  |
| 9-2-5     | Supplying booster hydraulic fluid  | 9-10 |
| 9-3       | Key Check  | 9-11 |
| 9-4       | Periodic Machine Cleaning  | 9-13 |
| 9-4-1     | Cleaning inside X-axis carriage cover and X-axis apron cover                       | 9-14 |
| 9-4-2     | Cleaning inside Y-axis apron cover   | 9-16 |
| 9-5       | Consumable Parts Replacement   | 9-17 |
| 9-5-1     | Door roller replacement  | 9-18 |
| 9-5-2     | X-Axis Apron Cover Replacement   | 9-20 |
| 9-5-3     | Replacement of Y-axis Apron Cover  | 9-21 |
| 9-5-4     | Replacement Z-Axis take-up Cover Assembly  | 9-22 |
| 9-5-5     | Replacement Z-Axis take-up Cover Sheet   | 9-23 |
| 9-5-6     | Replacement Z-Axis take-up Cover Drum  | 9-25 |
| 9-5-7     | Replacement Z-Axis Take-up Cover Wiper   | 9-27 |
| 9-5-8     | Replacement of Machine Light Fluorescent Bulb                                      | 9-28 |
| 9-5-9     | Replacement of Indication Lamp Bulb  | 9-29 |
| 9-5-10    | Battery Fault Alarm  | 9-30 |

|                           |   |       |
|---------------------------|---|-------|
| 9-6                       | Replacement Parts List of Consumption ----- | 9-31  |
| CHAPTER 10 DISPOSAL ----- |   | 10-1  |
| 10-1                      | Disposal Precautions -----                  | 10-2  |
| CHAPTER 11 OPTION -----   |   | 11-1  |
| 11-1                      | COOLANT UNIT -----                          | 11-1  |
| 1                         | Cautions for Handling -----                 | 11-2  |
| 2                         | Sketch Drawing -----                        | 11-3  |
| 3                         | Specifications -----                        | 11-4  |
| 4                         | Cable Connection -----                      | 11-4  |
| 5                         | Thermal Relay -----                         | 11-6  |
| 6                         | Coolant Unit Installation Check -----       | 11-7  |
| 6-1                       | NC language -----                           | 11-7  |
| 6-2                       | Conversation -----                          | 11-8  |
| 11-2                      | SPINDLE TAPER AIR BLAST UNIT -----          | 11-9  |
| 1                         | Cautions -----                              | 11-10 |
| 2                         | Overall view -----                          | 11-10 |
| 3                         | Mouting position and piping -----           | 11-11 |
| 4                         | Wiring -----                                | 11-12 |
| 5                         | Motion check -----                          | 11-12 |
| 11-3                      | MANUAL PULSE GENERATOR -----                | 11-13 |
| 1                         | Cautions -----                              | 11-14 |
| 2                         | Overall view -----                          | 11-14 |
| 3                         | Mounting -----                              | 11-15 |
| 4                         | Motion check -----                          | 11-16 |
| 11-4                      | MACHINE LIGHT -----                         | 11-18 |
| 1                         | Cautions -----                              | 11-19 |
| 2                         | External View -----                         | 11-19 |
| 3                         | Mounting Method -----                       | 11-20 |
| 4                         | Motion Check -----                          | 11-21 |
| 11-5                      | INDICATION LAMP -----                       | 11-22 |
| 1                         | Cautions -----                              | 11-23 |
| 2                         | External View -----                         | 11-24 |
| 3                         | Mouting the indication lamp -----           | 11-25 |
| 11-6                      | AUTOMATIC CENTERING UNIT -----              | 11-27 |
| 1                         | Cautions -----                              | 11-28 |
| 2                         | Mouting and Dismounting -----               | 11-28 |
| 2-1                       | Mouting the automatic centering box -----   | 11-28 |

|       |   |       |
|-------|---|-------|
| 2-2   | Mouting and dismounting a center alignment tool ----- | 11-29 |
| 3     | Motion check -----                                    | 11-30 |
| 11-7  | TOOL BREAKAGE DETECTION UNIT -----                    | 11-32 |
| 1     | Cautions for Handling -----                           | 11-33 |
| 2     | Sketch Drawing -----                                  | 11-33 |
| 3     | Installation -----                                    | 11-34 |
| 4     | Adjustment -----                                      | 11-35 |
| 11-8  | SIMPLIFIED ROTARY JOINT -----                         | 11-36 |
| 1     | Mounting -----  | 11-37 |
| 11-9  | AUTOMATIC INTERMITTENT LUBRICATING UNIT -----         | 11-40 |
| 1     | Cautions -----  | 11-41 |
| 2     | General View -----                                    | 11-41 |
| 3     | Specifications -----                                  | 11-42 |
| 4     | Wiring -----  | 11-46 |
| 11-10 | AUTOMATIC DOOR -----                                  | 11-48 |
| 1     | Sketch Drawing -----                                  | 11-49 |
| 2     | Automatic door connection -----                       | 11-49 |
| 3     | Control box nomenclature -----                        | 11-51 |
| 4     | Signal input check -----                              | 11-51 |
| 5     | Operation Check -----                                 | 11-52 |
| 6     | Area sensor -----                                     | 11-52 |
| 11-11 | CEILING COVER -----                                   | 11-57 |
| 1     | Handling Preautions -----                             | 11-58 |
| 2     | Appearance and Installation -----                     | 11-58 |