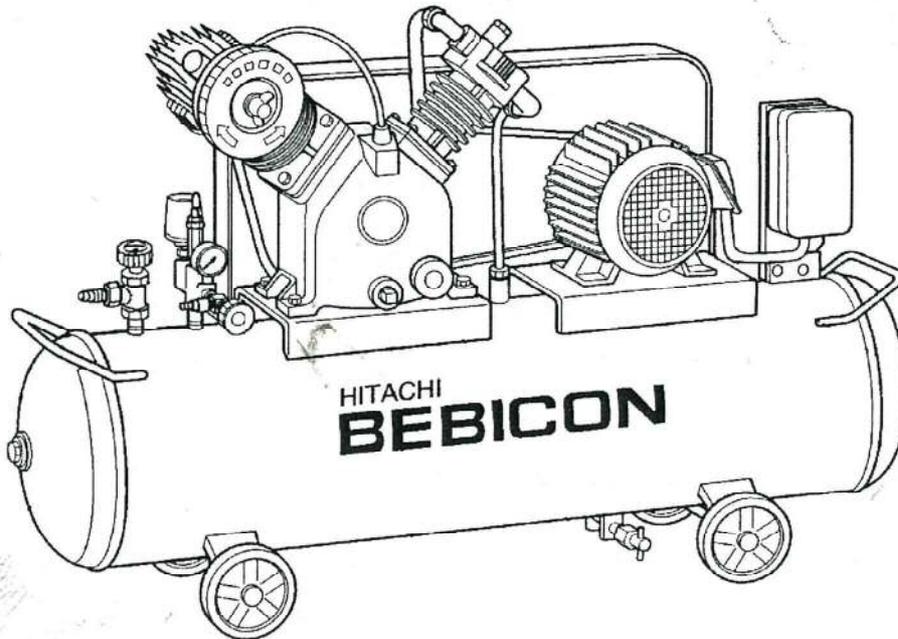


INSTRUCTION MANUAL

Compact Air Compressor

HITACHI BEBICON

--- MODEL ---

Automatic Unloader type	Pressure switch Type
0.75U-9.5VS(L)5/6 A	0.75P-9.5VS(L)5/6 A
0.75U-9.5V(L)5/6 A	0.75P-9.5V(L)5/6 A
1.5U-9.5V(L)5/6 A	1.5P-9.5V(L)5/6 A
1.5U-9.5VS(L)5/6 A	1.5P-9.5VS(L)5/6 A
2.2U-9.5 V(L)5/6 A	2.2P-9.5V(L)5/6 A
2.2U-9.5 VS(L)5/6 A	2.2P-9.5VS(L)5/6 A
3.7U-9.5V(L)5/6 A	3.7P-9.5V(L)5/6 A
5.5U-9.5V5/6 A	5.5P-9.5V5/6 A
7.5U-9.5V5/6 A	7.5P-9.5V5/6 A
11U-9.5V5/6 A	11P-9.5V5/6 A
15U-9.5V5/6A	3.7P-14VH5/6A
	5.5P-14VH5/6A
	7.5P-14VH5/6A

Thank you for recent purchase of a HITACHI BEBICON.

Please read this instruction manual carefully for installation, maintenance and inspection guidelines. This manual should be retained for future reference.

Contents

• Safety instruction	S1
• Denomination and function of components	2
• Installation precautions	3
1. Compressor verification	3
2. Carrying precautions	3
3. Installing precautions	4
4. Piping precautions	5
5. Wiring precautions	6
• Operation method	8
1. Pre-operation work	8
2. Trial run	8
3. Daily (Regular) operation	9
4. For a low air consumption (1).....	9
5. For a low air consumption (2).....	9
• Maintenance and Inspection	10
• Functional check	15
• Trouble shooting and measures	16
• Effective use of peripheral equipment	17
• Standard specifications	18
• After service and Warranty	19
• Check and shakedown record from	19