

MESSRS. MARIS  
COIL FEEDER LINE

---

INSTRUCTION MANUAL

---

**AIDA ENGINEERING, LTD.**

TABLE OF CONTENTS

---

A. SPECIFICATIONS

1. GENERAL ..... A1-1  
    1.1 CONSTRUCTION ..... 1  
2. SPECIFICATIONS ..... A2-1

B. OPERATION

1. SAFETY PRECAUTIONS ..... B1-1  
2. WORK CAPABILITY ..... B2-1  
    2.1 FEED LENGTH AND PRESS SPEED..... 1  
    2.2 RELATIONSHIP BETWEEN COIL THICKNESS, COIL WIDTH,  
        AND COIL WEIGHT..... 1  
3. ROUTINE CHECK ..... B3-1  
    3.1 DAILY CHECK ..... 1  
    3.2 WEEKLY CHECK ..... 3  
4. LUBRICATION ..... B4-1  
    4.1 LUBRICATION POINTS AND SERVICING PORTS ..... 2  
    4.2 COMPARISON TABLE OF LUBRICANTS..... 3  
5. AIR SUPPLY ..... B5-1  
    5.1 AIR INLET PRESSURE..... 1  
    5.2 PROCEDURE FOR SUPPLYING AIR..... 1  
    5.3 AIR PRESSURE REGULATOR..... 1  
    5.4 PRESSURE GAGE..... 2  
    5.5 AIR PRESSURE SETTING..... 2  
    5.6 DISASSEMBLY AND CLEANING..... 2  
    5.7 CONNECTION TO AIR SOURCE..... 2  
    5.8 DRAINING..... 2  
    5.9 PRESSURE ADJUSTMENT BY REGULATOR..... 3  
    5.10 PIPING DIAGRAM..... 4  
6. OPERATION ..... B6-1  
    6.1 OPERATION PANEL ..... 1  
    6.2 POWER SOURCE ..... 2  
    6.3 STRAIGHTENER OPERATION..... 4  
    6.4 LOOP CONTROL..... 5  
    6.5 UNCOILER OPERATION ..... 6

TABLE OF CONTENTS

---

7.	ADJUSTMENT .....	B7-1
7.1	UNCOILER.....	1
7.2	STRAIGHTENER.....	4
7.3	LOOP CONTROL SYSTEM UNIT.....	7
7.4	BRAKE UNIT FOR STRAIGHTENER MOTOR.....	12

C. MAINTENANCE

1.	INSTALLATION .....	C1-1
1.1	PREPARATION FOR INSTALLATION .....	1
1.2	GROUNDING .....	2
2.	CHECK POINTS AT TRIAL RUN .....	C2-1
3.	PERIODIC INSPECTION .....	C3-1
3.1	MONTHLY INSPECTION AND MAINTENANCE.....	1
3.2	SEMIANNUAL INSPECTION AND MAINTENANCE.....	1
3.3	ANNUAL INSPECTION AND MAINTENANCE.....	2
4.	MAINTENANCE OF UNCOILER & STRAIGHTEN.....	C4-1
4.1	STRAIGHTENER .....	1
4.2	UNCOILER.....	3
5.	SPARE PARTS LIST.....	C5-1

DRAWINGS

1.	LINE LAYOUT.....	1-1
2.	FOUNDATION.....	2-1
3.	ELECTRIC DIAGRAM .....	3-1

INSTRUCTION MANUALS FOR ACCESSORIES AND UNITS

VS MOTOR ( FOR CRADLE)..... (420-113303e)

AIR SPRING ISOLATOR

SERVICE CHANNEL..... LAST PAGE