


FUJI
ELECTRIC

INSTRUCTION MANUAL

FSD/D SERIES

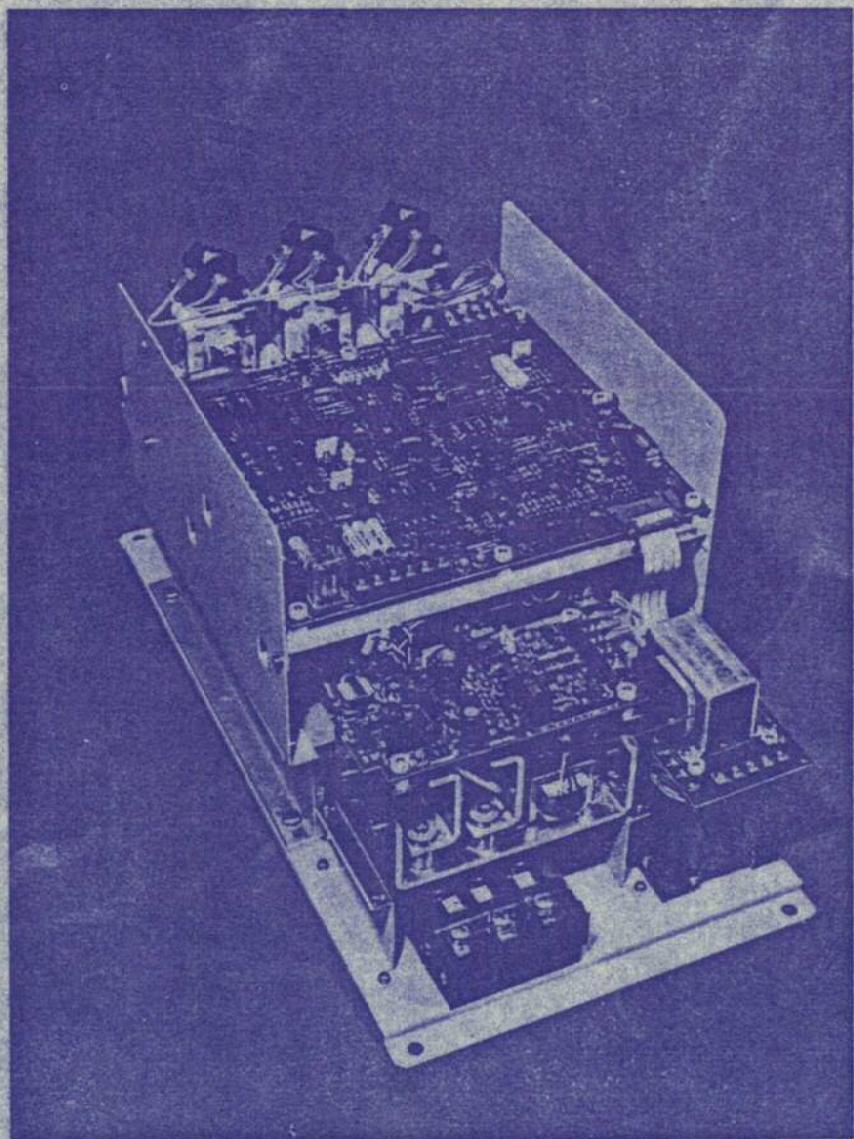

C O N T E N T S

	Page
1. SPEED CONTROL OF D.C. MOTOR	1
2. THYRISTOR CONVERTOR	4
2.1 Main circuit	4
2.2 Regenerative braking	8
3. CONTROL CIRCUIT	9
3.1 General	9
3.2 Driving command and releasing of zero hold	12
3.3 Mode after closing of "FOR" or "REV" contact	13
3.4 ASR regulator	14
3.5 ASR output - polarity equalizing circuit	15
3.6 ASR control	16
3.7 Phase shifter	17
3.8 Pulse amplifier	19
3.9 Logic	20
3.9.1 Basic operation on charge mode	21
3.9.2 Forward driving	21
3.9.3 Speed down	21
3.9.4 Stop	22
3.10 Main circuit	22
3.11 Auxiliary power source	26
3.12 Protection (failure) circuit	27
3.13 Field regulator (FREG-10C)	31
4. STRUCTURE	37
4.1 Thyristor stuck	37
4.2 SREG. printed circuit board	37
4.3 Field regulator	37
4.4 Pulse trans. printed circuit board	37
4.5 Auxiliary transformer for control power source and AVR	38
4.6 Current transformer	38
4.7 Fuse	39

	Page
5. PHOTOGRAPH	40
6. ADJUSTING RHEOSTAT	49
6.1 SREG. P.C.B.	49
6.2 FREG. P.C.B.	49
7. VOLTAGE WAVE FORM OF EACH POINT	50
7.1 Wave form	50
7.2 Voltage of check terminal (at stop)	60
7.3 Voltage of check terminal (in motion)	62
7.4 Voltage of check terminal of SREG. FREG.	64
8. FINDING OUT TROUBLES	66
9. OPTION P.C.B.	69
9.1 Torque limiter	69
9.2 Current limit	73
9.3 HLR	75
9.4 D/A Convertor	77