


SEAVIEW///

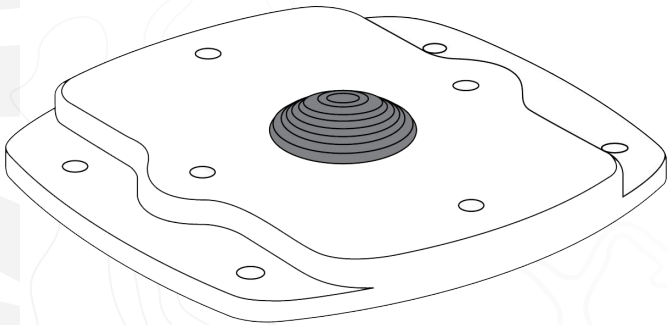


INSTALLATION INSTRUCTIONS

For Seaview Radar Adapter Plate:


ADA-HALO-2

Refer to website for most up to
date instructions and videos.




WWW.SEAVIEWGLOBAL.COM

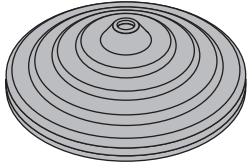


x1

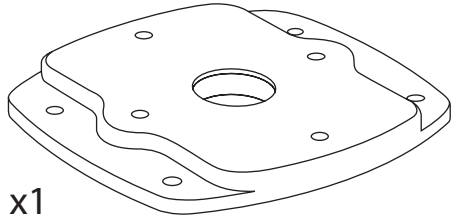

x1

 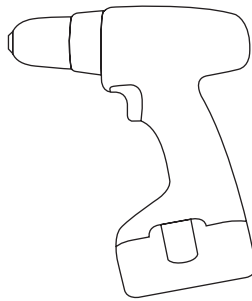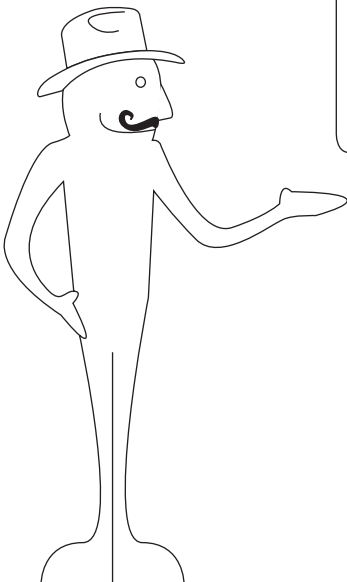


3/8" or 10mm

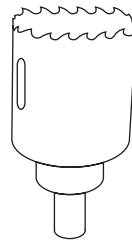


2" = 50mm

1

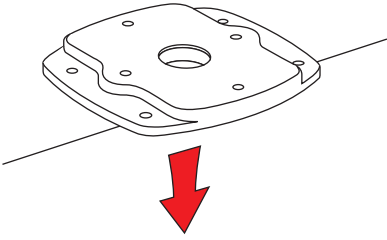



2

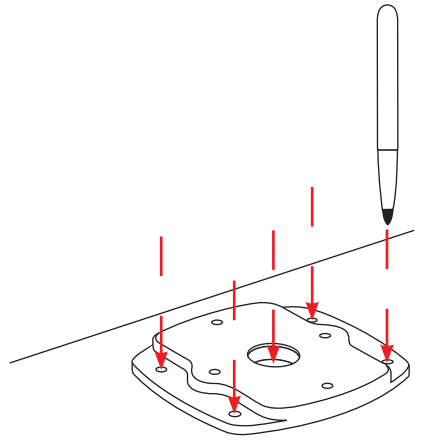



3






4

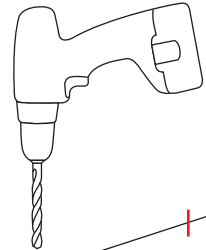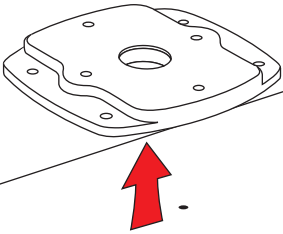


5

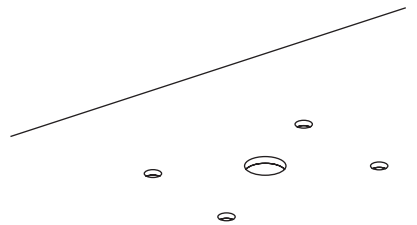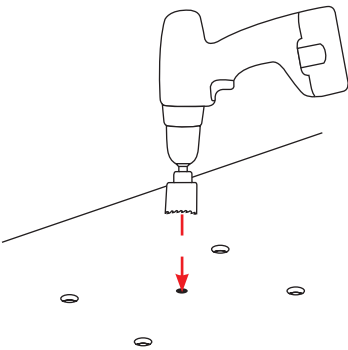


6

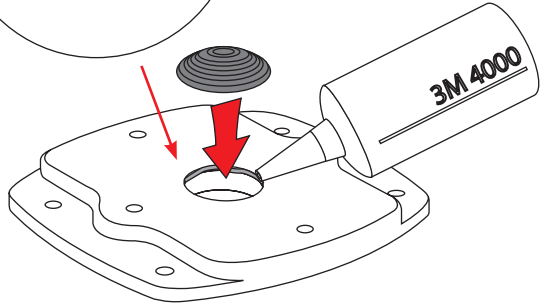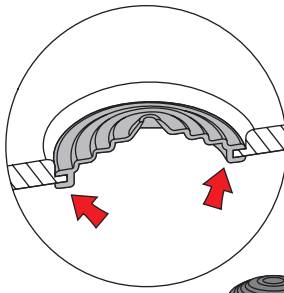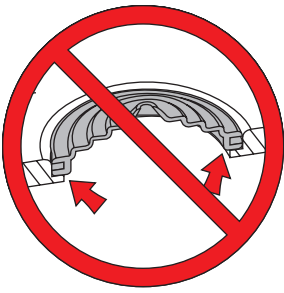


7

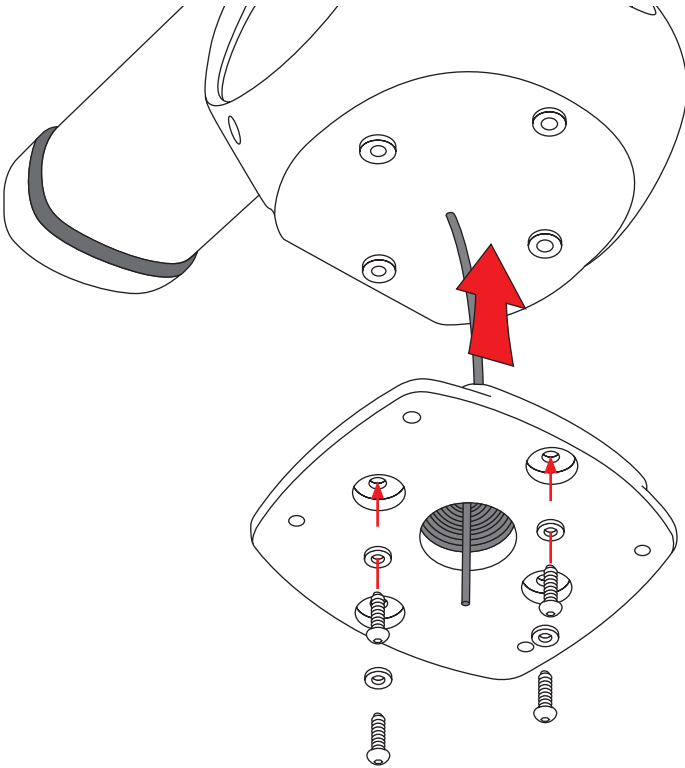


8

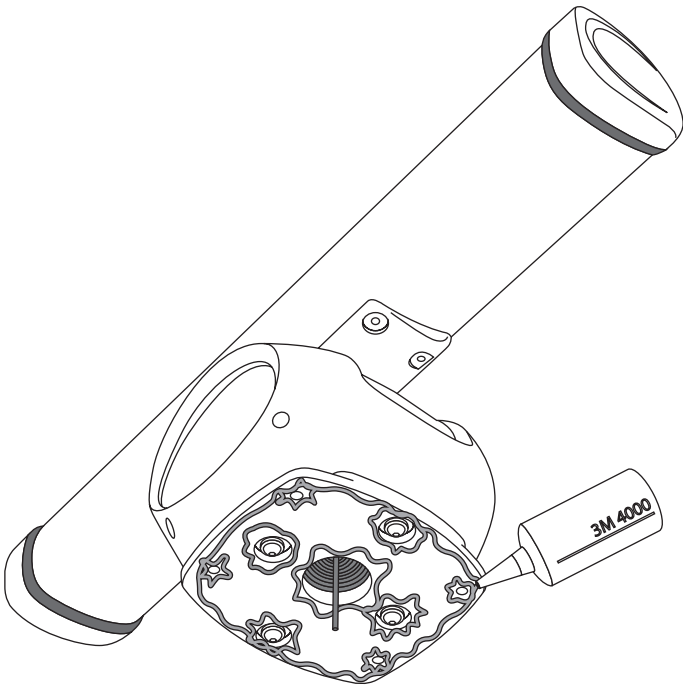

9

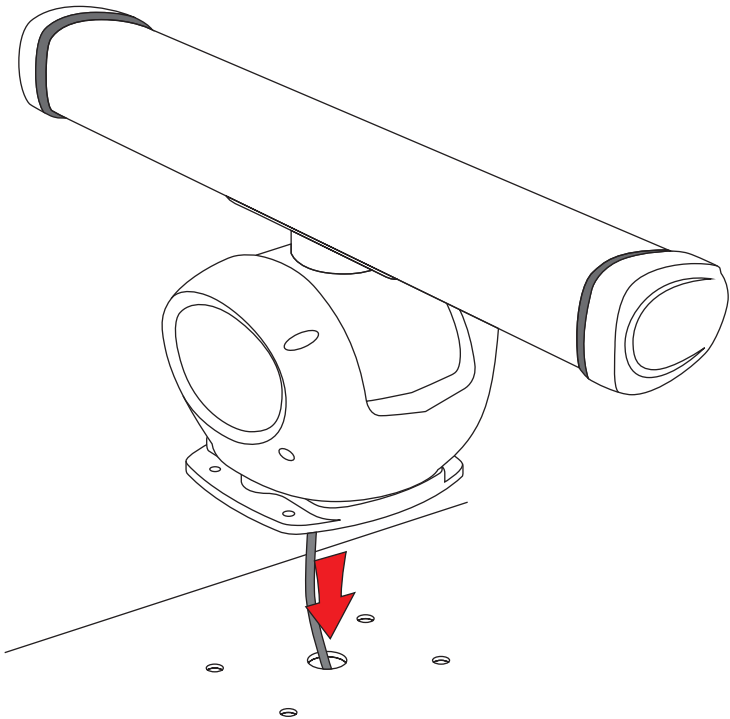

10

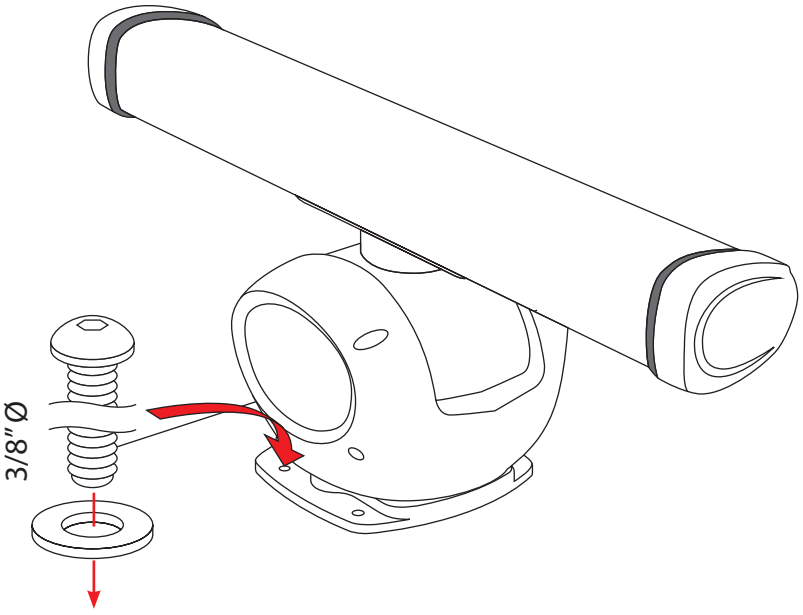

The background of the entire page is a light gray topographic map with white contour lines. The lines are irregular and wavy, representing elevation changes across a landscape. The map is centered and covers the entire area.

SEAVIEW///
ELEVATE YOUR ELECTRONICS

SEAVIEW///

Tel: 800-655-7922
www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70
www.seaviewprogress.com