

# Anchor Light

With Motorized Base



## Installation Instructions

1. Mounting surfaces should be flat, clean, dry, and free of any existing hardware or holes. Before mounting ensure that the light will not interfere with surrounding structures when collapsed or extended.
2. Drill holes for the mounting screws and wire exit using the provided template below (apply sealant to holes for additional protection).
3. Connect all wires to appropriate power source (10v-30v). Refer to wiring diagram on reverse side.
4. There are two sets of wires exiting the base of the light. A sheathed cable (black) and four loose wires. The loose wires operate the motor mechanism and the sheathed wires (black) operate the light.
5. **Motor Wires** (loose): There are four wires, Red (positive +), Black (negative -), the Orange and Green are signal wires that will run to the powered switches. The Red (positive +) needs to be fused appropriately and the Black (negative -) can run to a common ground source.
6. **Light Wires** (sheathed black) - There are two wires running to the light head. Black (negative -), Red (positive +), 360 Degree Anchor Light. Black (negative -) will run to a common ground and red (positive +) will run to a powered switch.
7. **Anchor Light:** The Red (positive +) wire can go to a separate powered switch, or connected with the signal wire on the motor (orange or green) and run to a switch to make the light turn on as the mast goes up.

### Mounting Template



Ø 1.0"  
25mm  
Power Wire  
Exit Hole

Pre-drill using  
the appropriate  
bit for #10  
Self-Tapping  
Screws (X4)

Ensure bedding sealant fully  
surrounds the wire exit hole and  
mounting screws

BOW →

Mount supplied protective Bump Pad to  
the hardtop within 12" of the top of the light head  
to eliminate mast bounce.

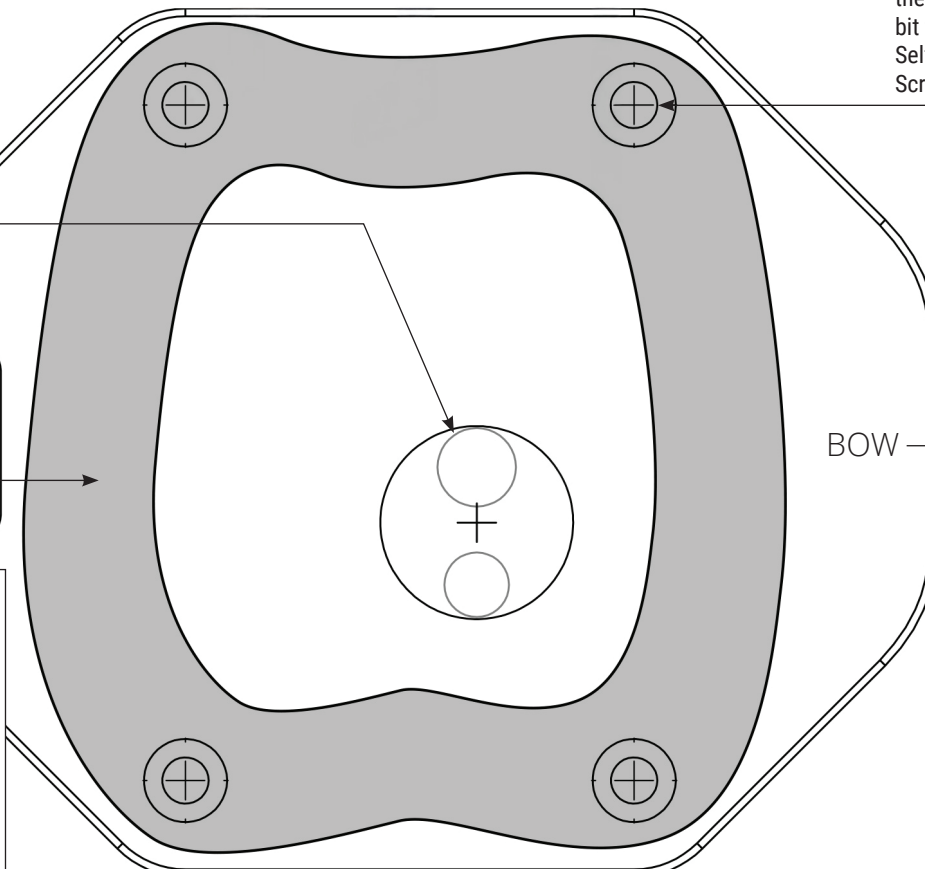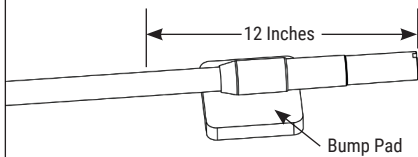

600894-B

#### Lumitec Limited Warranty:


The product is warranted to be free from defects in workmanship and materials for a period of three (3) years from the date of original purchase.

Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which it was designed, intended, and marketed. Lumitec, Inc. assumes no responsibility whatsoever for any damage, loss, or injury that may result from the incorrect installation of this product, including but not limited to structural damage due to water intrusion, electrical malfunction or vessel sinking when used in marine applications.

Should your Lumitec product prove defective during the warranty period, promptly notify Lumitec for a return authorization number and return product with freight prepaid. Lumitec will, at its option, repair or replace the product or defective portion without charge for parts or labor, or, at Lumitec's option, refund purchase price. Products repaired or replaced under this warranty shall be warranted for the unexpired portion of the warranty applying to the original product(s). No warranty or affirmation of fact, express or implied, other than as set forth in the limited warranty statement above is made or authorized by Lumitec, Inc. Any liability for consequential and incidental damages is expressly disclaimed. Lumitec liability in all events is limited to, and shall not exceed, the purchase price paid.

#### Register Your Product

To register your Lumitec product please scan the QR code or visit the website link below.

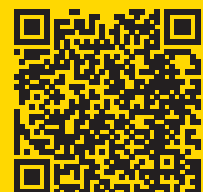

[lumiteclighting.com/product-registration](http://lumiteclighting.com/product-registration)


# Anchor Light

With Motorized Base



## ANCHOR LIGHT WIRING DIAGRAM

### LIGHT & MOTOR - SINGLE SWITCH

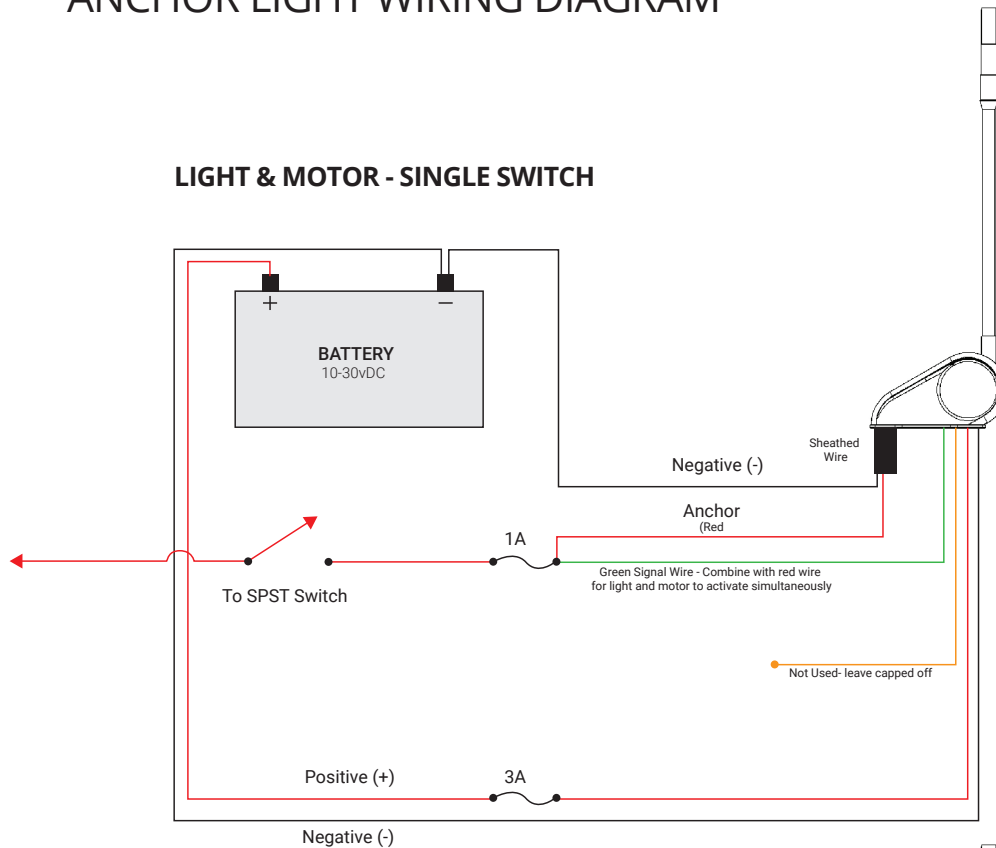

#### Angler Motorized Base

**Black:** Common (V-)


**Red:** Power (V+) constant voltage

**Green:** Signal (V+) Connect to independent switch to raise mast only. Splice with Anchor wire (red) to operate both mast and light together.

**Orange\*:** Signal (V+) : Not in use for this application.

\*\* Not in use for this application. Do not connect orange wire to any other wires. Leave unconnected and capped.

### LIGHT & MOTOR - SEPARATE SWITCHES

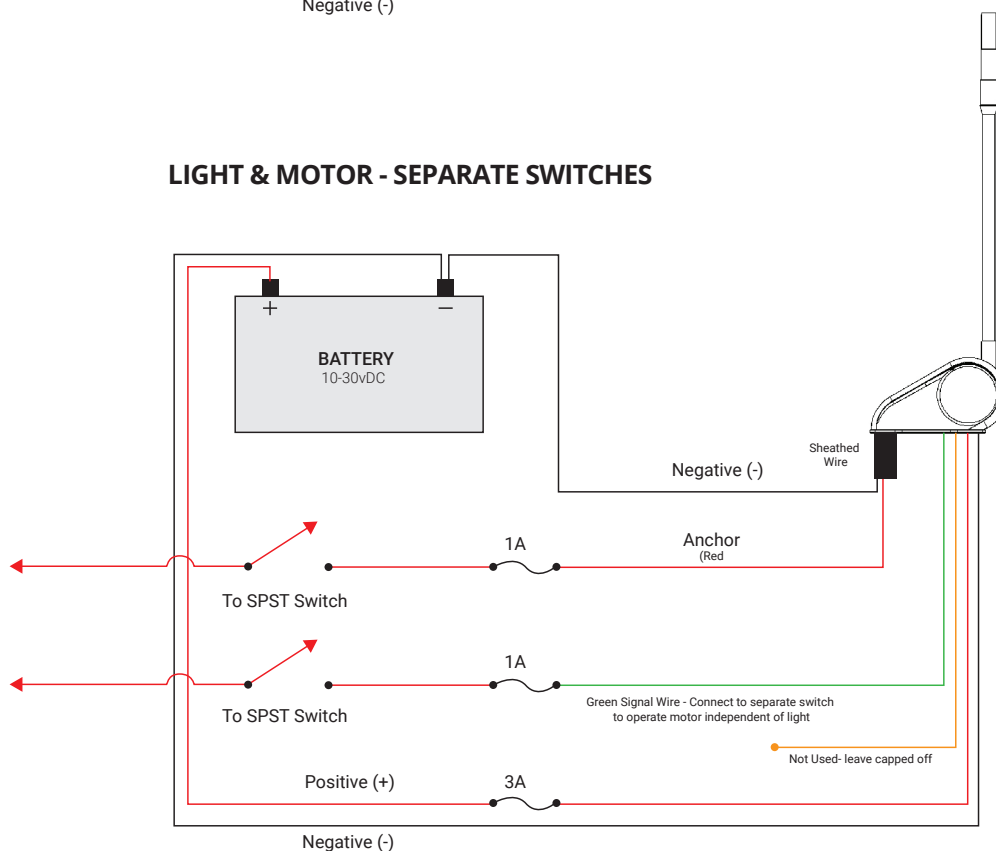

#### IMPORTANT

The proper installation of any light is critical to it being U.S. Coast Guard and ABYC approved. Check all installation requirements prior to installation. In accordance with the 72 COLREGS and Inland Rules, all-around lights may not be obscured by masts, topmasts, or structures with angular sectors of more than 6deg.

This Anchor Light meets requirements for: 2nm.

**Note:** Lumen output will gradually decrease over the life-cycle on the light. After 30,000 hours the light may no longer meet the intensity required by 72 COLREGS.

When cleaning, avoid chemical cleaners and solvents that can damage plastic components. Rinse thoroughly with water.

| Specs:       | Light    | Motor    |
|--------------|----------|----------|
| Voltage:     | 10-30vDC | 10-30vDC |
| 12v DC Amps: | 80mA     | 1.3A     |
| 24v DC Amps: | 45mA     | 0.8A     |
| Rated Watts: | 0.96W    | 15.6w    |