

HOLONICAL CELL SYSTEM
(PL 400 / 500)
INSTRUCTION MANUAL
(OPERATION VOLUME)

(The First Ed. / 08-1993)

HITACHI SEIKI

CONTENTS

PREFACE	1
REGARDING SAFETY	2
HOW TO USE THE INSTRUCTION MANUAL	3
1. OUTLINE OF PL400/PL500 (HOLONICAL CELL)	4
1.1 Outline of System	4
1.2 Outline of System Operation	5
2. EXPLANATION OF OPERATION (OPERATION PANEL AND RELATIVES)	7
2.1 Main Operation Panel	7
(1) Power source indication lamp (Green)	8
(2) PL power source indication lamp (Green)	8
(3) Air pressure indication lamp (Green)	8
(4) Safety fence indication lamp (Red)	8
(5) Main control alarm indication lamp (Red)	8
(6) PL alarm indication lamp (Red)	8
(7) Machine alarm indication lamp (Red)	8
(8) APC for protrusion alarm indication lamp (Red)	9
(9) PL original position indication lamp (Green)	9
(10) PL remote operation indication lamp (Green)	9
(11) Lock of set up completed pallet indication lamp (Green)	9
(12) Automatic power cut-off ON/OFF select switch (Toggle switch)	10
(13) ON/OFF select switch (Toggle switch) for stop after carried in to the machine No.1	10
(14) ON/OFF select switch (Toggle switch) for stop after carried in to the machine No.2	10
(15) ON/OFF select switch (Toggle switch) for stop after carried in to the machine No.3	11
(16) ON/OFF select switch (Toggle switch) for stop after carried in to the machine No.4	11
(17) Operation mode select switch, individual/operation on the carrier/system operation (Key switch)	11
(18) Individual setting switch for pallet destination (3 digits digital switch)	12
(19) Illuminating push button switch for individual running of a carrier (Green)	12
(20) Selecter push button switch for individual pallet carry in-out (Green)	12
(21) Illuminating push button switch for individual zero return (Green)	13
(22) Illuminating push button switch for start of system operation (Green)	13
(23) Illuminating push button switch for stop of system operation (Red)	13
(24) Illuminating push button switch for unintended mode (Green)	14
(25) Illuminating push button switch for priority of set up (Green)	15
(26) Illuminating push button switch for pallet call (Green)	15
(27) ON/OFF select switch for PL power source (Key switch)	16
(28) Push button switch for alarm reset (Yellow)	16
(29) Illuminating push button switch for preparation of operation (Green)	16
(30) Mushroom type push button switch for emergency stop (With reset mechanism) (Red)	16

2.2 Operation Panel of Set Up Stand	17
(1) Original position indication lamp (Green)	17
(2) Fault workpiece indication lamp (Red)	17
(3) Reach to schedule quantity indication lamp (Green)	17
(4) Illuminating push button for machining face #1 (0°) setting (Green)	18
(5) Illuminating push button for machining face #2 (90°) setting (Green)	18
(6) Illuminating push button for machining face #3 (180°) setting (Green)	18
(7) Illuminating push button for machining face #4 (270°) setting (Green)	18
(8) Gun coolant ON/OFF select switch (Toggle switch)	18
(9) Select switch for order of machining priority, urgency/normal/reserve/removal (Rotary switch)	19
(10) Indication lamp of set up completion (Green)	20
(11) Push button switch of set up completion (Green)	20
(12) Indication lamp of prohibition of receiving a pallet (Red)	21
(13) ON/OFF select switch of prohibition of receiving a pallet (Toggle switch)	21
(14) Mushroom type push button switch for emergency stop (With reset mechanism) (Red)	21
2.3 System Operation Panel on the Machine Tool	22
(1) Indication lamp of system OK (Green)	22
(2) Standby (Green)	22
(3) Select switch of self/system syncro	23
(4) Illuminating push button of start of system syncro (Green)	23
(5) Illuminating push button of stop of system syncro (Red)	23
2.4 Pallet Loader Operation Panel on the Carrier	24
(1) Indication lamp of operation effective (Green)	25
(2) Original position (Green)	25
(3) ON/OFF select switch of operation on the carrier	25
(4) Select switch of axis operation mode on the carrier, i.e. zero return, feed and step (Rotary switch)	25
(5) Select switch of axis selection X, Y, Z, B (Rotary switch)	26
(6) Select switch of feed speed selection, low/medium/high (Rotary switch)	26
(7) Push button of - feed (Green)	27
(8) Push button of + feed (Green)	27
(9) Mushroom type push button switch for emergency stop (With reset mechanism) (Red)	27
(10) Effective/ineffective of operation panel on the carrier (Toggle switch) (Connecting terminal of operation panel on the carrier)	27
2.5 Maintenance Operation Panel	28
(1) Select switch of operation mode, off/memory/edit/MDI	29
(2) ON/OFF select switch of write	29
(3) Illuminating push button switch of program start (Green) ...	29
(4) Illuminating push button switch of program stop (Red)	29
(5) ON/OFF select switch of single block (Toggle switch)	29
(6) ON/OFF select switch of maintenance (Toggle switch)	30
(7) Select switch of shutter open/close of set up stand #1 (Toggle switch)	30
(8) Select switch of shutter open/close of set up stand #2 (Toggle switch)	30
(9) Mushroom type push button switch for emergency stop (With rest mechanism) (Red)	31