

Precision Machine Tools

Cincom L₃16/L₃20

PRECISION MACHINERY DIVISION

OPERATING PROCEDURES

TYPE V (3M5)

TYPE VI (3M6)

TYPE VII (3M7)

OPERATION MANUAL FOR CINCOM

L₃16/20 TYPES V, VI, VII

CONTENTS

1. Flows of Setup Operation	2
2. Procedures for Power On through Automatic Operation	3
3. Procedures for Continuous Operation through Power Off	3
4. How to Enter and Cancel Tool Offsets	4
5. Operating Procedures for MDI (manual data input)	5
6. Procedures for Storing Program Tape	5
7. Punch Out Procedures of Memory Content	6
8. Program Registration with MDI	7
9. Program Edit Procedures	7
10. Program Deletion Procedures	8
11. Displaying All Program Numbers	9
12. Program Selection Procedures	9
13. Procedures for Machining Data Registration	9
14. Outer Diameter Tool Set Procedures (T11 to T16)	10
15. Inner Diameter Tool Set Procedures (T22 to T24)	12
16. Setting the Boring Tool	13
17. Back Machining Tool Set Procedures (T31 to T33)	14
18. Product Counter Setting Procedures	16
19. Stored Stroke Limit	16
20. How to Exit from an Overtravel	17
21. Home Position Return Procedures	17
22. List of G Codes	18
23. List of M Codes	20
[Example]	22



First publishment: 1992.10