

SECURITY REGULATIONS

CORE LINK CORE STRIPPER WITH SLITTER



CAUTION

Before any kind of maintenance job or repair work is done at the core stripper, ***switch off current with the main switch and lock with a padlock in zero-position***. The switch is located on the side of the electric cabinet. Turn the shut-off valve for compressed air into shut position.



CAUTION

Always use protective gloves when replacing knives or working with the slitter unit in any other way.



CAUTION

Operators must be trained thoroughly for running the machine and be informed of the security regulations of the equipment. Persons without training for this machine are not allowed to use the equipment.



CAUTION

Do not touch the paper web or the paper roll when the machine is running.



CAUTION

The operator has to make sure that there are no persons inside the working area of the machine.

**CAUTION**

The operator has to make sure that the machine has been shut off before leaving it.

**CAUTION**

The machine must only be used for unrolling paper from cardboard cores.

**CAUTION**

Make sure all safety covers and security devices are in their places and in working order.

**CAUTION**

When running the machine, the outfeed opening has to be connected to a pulper or similar. The opening has to be protected to prevent from making it possible to reach it.

GENERAL SECURITY DESCRIPTION

CORE LINK CORE STRIPPER

1. The protection hood and the feed-out roll are equipped with interlocking switches connected to emergency stops.
2. The machine is furnished with warning signs.
3. Make sure the main lighting is good enough to give the operator a good general view of the equipment.