

# **Operator's manual**

**ENWIN**

*Quality & Productivity Specialist*



## **DURGA-15E/25E OPERATOR MANUAL**

**FAR EAST MACHINERY CO., LTD.**

# CONTENTS

1. PREFACE .....	1
2. CAUTION .....	5
3. PREPARATION .....	9
4. MACHINE.....	13
4-1 STANDARD ACCESSORIES FOR DURGA-15E/25E.....	16
4-2 OPTIONAL ACCESSORIES FOR DURGA-15E/25E.....	16
4-3 MACHINE SPECIFICATION OF DURGA-15E.....	17
4-4 MACHINE STRUCTURE DRAWING.....	
4-4 MACHINE LAYOUT.....	19
4-4 FRONT VIEW OF THE MACHINE.....	20
4-4 RIGHT VIEW OF THE MACHINE.....	21
4-4 REAR VIEW OF THE MACHINE.....	22
5. INSTALLATION.....	25
5-1 HOISTING.....	27
5-2 INSTALLATION FOR THE MACHINE.....	28
6. SPINDLE.....	29
SPINDLE SIZE.....	31
SPINDLE DRAWING.....	32
SPINDLE SPEED/OUTPUT CHARACTERISTICS CHART.....	33
7. TOOL UNIT.....	35
TOOL POST MOVABLE RANGE.....	37
TOOL INTERFERENCE DIAGRAN.....	38
TOOLING SYSTEM.....	39
8. HOLDER.....	41
8-1 HOLDER A (ID $\varnothing$ 32.....	43
8-1-1 DIRECT INSERTING (472-065-01).....	43
8-1-2 SOCKET FOR BORING AND "U" DRILLING TOOL (472-065-12, 472-065-13).....	43
8-2 $\varnothing$ 25 U BORING OR DILL TOLL.....	43
8-3 FACING TOOL HOLDER (472-065-30).....	44
8-4 TOOL HOLDER (472-065-40).....	44

8-5 FRONT DISC.....	44
8-6 PROBE .....	44
9. COOLANT .....	49
9-1 COOLANT LOOP.....	51
10. LUBRICATION .....	55
REFERENCE FOR LUBRICATION.....	57
LUBRICATION PIPE DRAWING.....	58
11. OIL PRESSURE.....	59
11-1 OIL PRESSURE UNIT.....	61
11-2 ADJUSTMENT OF OIL PRESSURE.....	61
11-2-1 THE MAIN STRESS OF PRESSURE SYSTEM.....	61
11-2-2 ADJUSTMENT OF CHUCK'S PRESSURE.....	61
11-2-3 QUILL.....	61
11-3 OIL REPLACEMENT.....	61
12. AIR PRESSURE.....	67
13. ADJUSTMENT OF THE MACHINE.....	73
13-1 TAILSTOCK .....	75
13-2 THE ADJUSTMENT OF SPINDLE TRANSMISSION.....	75
13-2-1 THE ADJUSTMENT OF SPINDLE TRANSMISSION..	75
13-2-2 THE ADJUSTMENT OF X-AXIS TIMING FELT.....	75
14. OPERATION AND FUNCTION INSTRUCTION FOR OPERATING	79
PANEL OPERATION PANEL (FIG.14-1).....	81
14-1 POWER ON/OFF.....	82
14-1-1 TURNING ON THE POWER.....	82
14-1-2 TURNING OFF THE POWER.....	82
14-2 MANUAL OPERATION.....	82
14-2-1 HANDLE.....	82
14-2-2 JOG .....	83
14-2-3 RAPID.....	83
14-2-4 ZERO RETURN.....	83
14-2-5 T. IN HANDLE.....	83
T. IN JOB.....	83

14-3 AUTOMATIC OPERATION.....	84
14-3-1 AUTO.....	84
14-3-1-1 TAPE.....	84
14-3-1-2 MEMORY OPERATION.....	84
14-3-2 MDI OPERATION.....	84
14-4 EDIT .....	84
14-5 OPERATION OF CONTROL PANEL.....	84
14-5-1 SINGLE BLOCK.....	84
14-5-2 DRY RUN.....	85
14-5-3 OPTIONAL STOP.....	85
14-5-4 BLOCK DELETE.....	85
14-5-5 MACHINE LOCK.....	85
14-5-6 CHUCK CLAMP.....	85
14-5-7 QUILL INTERLOCK.....	85
14-5-8 EDIT.....	85
14-5-9 SPINDLE SPEED.....	86
14-5-10 FEEDRATE.....	86
14-5-11 MODE SELECT.....	86
14-5-12 RAPID TRAVERSE.....	86
14-5-13 TURRET INDEX.....	87
14-5-14 CYCLE START.....	87
14-5-15 FEED HOLD.....	87
14-5-16 EMERGENCY STOP.....	87
14-5-17 QUILL IN/OUT.....	87
14-5-18 CONVEYOR FORWARD/REVERSE.....	87
14-5-19 WORKING LIGHT.....	87
14-5-20 COOLANT.....	88
14-5-21 FOOTSWITCH.....	88
14-5-22 SPINDLE R.P.M. METER.....	88
14-5-23 SPINDLE LOAD METER.....	88

15. TOOL PRESETTER USAGE.....	89
15-1-1 WORK COORDINATE SYSTEM SHIFT (OPTION)....	94
15-1-2 ALARM LAMP.....	94
15-1-3 PARTS COUNTER.....	94
15-1-4 PROGRAM NUMBER SEARCH DEVICE (OPTION)..	94
16. ELECTRIC COMPONENT.....	95