

MITSUBISHI CNC

MELDAS 64/65/66

OPERATION MANUAL

ADVANCED AND EVER ADVANCING
MITSUBISHI ELECTRIC

Contents

I. OPERATION SECTION

1. Setting and Display Unit Operation.....	1
1.1 Appearance of 9-inch CRT Setting and Display Unit.....	1
1.2 Functions of Display Areas	2
1.3 Screen Transition Diagram	4
1.3.1 Screen Transition when Power Is Turned On	4
1.3.2 Screen Transition Diagram (L system).....	5
1.3.3 Screen Transition Diagram (M system).....	7
1.4 Screen Selection Procedure	9
1.5 Data Setting Method	12
2. Monitor.....	16
2.1 POSITION.....	17
2.1.1 Total Clear of CRT Screen.....	18
2.1.2 Position Display Counter Zero and Origin Zero.....	18
2.1.3 Manual Numerical Value Command (S, T, M)	19
2.1.4 Displaying Automatic Operation Program	22
2.2 COORDINATE	23
2.3 COMMAND	25
2.3.1 Execution Program Monitor.....	25
2.3.2 Execution Modal Monitor.....	26
2.3.3 Total Integrating Time Display	27
2.4 PROGRAM SEARCH	29
2.4.1 Memory Search.....	30
2.4.2 Tape Search	31
2.5 PLC SWITCH	33
2.5.1 PLC Switch On and Off Operation	33
2.6 COMMON VARIABLE.....	34
2.6.1 Common Variable Display.....	35
2.6.2 Common Variable Setting	36
2.6.3 Common Variable Data Deleting.....	36
2.7 LOCAL VARIABLE	37
2.7.1 Local Variable Data Display	38
3 (I). Tool Offset (L system).....	40
3.1 Wear Data	41
3.1.1 Setting Tool Offset Data.....	42
3.1.2 Erasing the Tool Offset Data.....	42
3.1.3 Tool Wear and Tool Length Data Setting Mode (incremental/absolute)	43
3.2 Tool Length Data	44
3.2.1 Manual Tool Length Measurement I	45
3.2.2 Manual Numerical Command Operation on the TOOL DATA Screen (M, T)	51
3.2.3 TOOL PRESETTER.....	52

3.3	Tool Nose Data	57
3.4	Tool Life Management I (#1096 T_L type is 1)	58
3.4.1	Tool Life Management Method	59
3.4.2	Conditions for Counting (incrementing).....	59
3.4.3	Setting Tool Life Management Data.....	60
3.4.4	Erasing Tool Life Management Data in Display Screen Units.....	60
3.4.5	Precautions	60
3.5	Tool Life Management II (#1096 T_Ltype is 2)	61
3.5.1	Group Registration	61
3.5.2	Tool Life Incrementation Methods.....	63
3.5.3	Parameters	65
3.6	Tool Registration.....	66
3.6.1	Outline of Functions	66
3.6.2	Tool Registration in the Magazine Pot	66
3.6.3	Tool Registration in the Spindle, Standby and Indexing Areas.....	67
3.6.4	Deleting Tool Registration Data	68
3.6.5	Manual Numerical Command Operation (M, T) on the TOOL REGISTRATION Screen.....	68
3 (II).	Tool Offset (M system)	70
3.1	Tool Offset	71
3.1.1	Tool Offset Data Setting.....	72
3.1.2	Tool Offset Data Clear	72
3.1.3	Tool Offset Data Setting Modes (Absolute and Incremental).....	72
3.1.4	Manual Tool Length Measurement	74
3.1.5	Manual Numeric Command Operation on the TOOL OFFSET Screen (M, T).....	77
3.2	Tool Registration.....	78
3.2.1	Function Outline	78
3.2.2	Tool Registration in Magazine Pot	78
3.2.3	Tool Registration in HEAD, NEXT, and INDEX.....	79
3.2.4	Tool Registration Data Clear	80
3.2.5	Manual Numeric Command Operation on the TOOL REGISTRATION Screen (M, T)	80
3.3	Tool Life	81
3.3.1	Function Outline	81
3.3.2	TOOL LIFE Screen Data Display	82
3.3.3	TOOL LIFE Data Display and Setting (TOOL LIFE Data Screen Page 2)	86
3.3.4	Clear of All TOOL LIFE Data (HEAD, NEXT, GROUP LIST Screen Page 1)	87
4.	Parameters (User)	88
4.1	Work Coordinate	89
4.1.1	Setting Work Coordinate System Offset Data.....	90
4.1.2	Setting External Work Coordinate System Offset Data.....	90
4.1.3	Displaying Machine Position Data.....	90
4.2	Machining Parameters	91
4.2.1	PROCESS PARAMER	91

4.2.2	Control Parameters	95
4.2.3	Axis Parameters	97
4.2.4	Barrier Data	98
4.3	I/O Parameters	99
4.3.1	I/O BASE PARAM	99
4.3.2	I/O DEVICE PARAM	100
4.3.3	COMPUTER LINK PARAMETER	102
4.4	Setup Parameters	105
5.	Program	106
5.1	Function Outline	107
5.2	Menu Function	108
5.2.1	MDI Screen Menu Function	108
5.2.2	EDIT Screen Menu Function	111
5.3	Program Edit Operation	113
5.3.1	Data Display Update (One Screen Scroll)	113
5.3.2	Data Display Update (One Line Scroll)	114
5.3.3	Data Change	115
5.3.4	Data Insertion	116
5.3.5	Deletion of One Character	117
5.3.6	Deletion of One Block	118
5.3.7	Deletion of Data on One Screen	119
5.4	MDI Screen Extension Operation	120
5.4.1	MDI Data Registration in Memory	120
5.5	Edit Screen Extension Operation	121
5.5.1	Edit Data Call	121
5.5.2	New Program Registration and Preparation	125
5.6	PLAYBACK	126
5.6.1	Playback Operation	127
5.6.2	Edit Operation	132
5.6.3	Limitations	133
5.7	Word Editing	134
5.7.1	Handling of the various keys during word editing	137
5.7.2	Searching word units	138
5.7.3	Word search	139
5.7.4	Character string search	140
5.7.5	Deleting words	141
5.7.6	Deleting lines	142
5.7.7	Replacing words	143
5.7.8	Inserting words	144
5.7.9	Copying words	146
5.7.10	Program	147
5.7.11	Deleting programs	148
5.7.12	Newly creating programs	149
5.7.13	Operation search	150
5.7.14	B. G search	151
5.7.15	B. G quit	152
5.7.16	Comments	152
5.7.17	Setting the Program Operation Start Position	153

6. Data In/Out.....	154
6.1 DATA INPUT	155
6.1.1 Change of Input and Comparison	156
6.1.2 Machining Program Input.....	157
6.1.3 Inputting Tool Offset Data.....	159
6.1.4 Inputting Parameter Data	160
6.1.5 Inputting Common Variables	161
6.1.6 Inputting History Data.....	162
6.1.7 Inputting Waveform Data	163
6.1.8 Inputting Auxiliary Axis Parameter Data.....	164
6.2 DATA OUTPUT	165
6.2.1 Machining Program Output	168
6.2.2 Outputting Tool Offset Data	171
6.2.3 Outputting Parameter Data	172
6.2.4 Outputting Common Variable Data	175
6.2.5 Outputting History Data.....	176
6.2.6 Outputting Waveform Data	177
6.2.7 Outputting Auxiliary Axis Parameter Data.....	178
6.3 PROGRAM ERASE	179
6.4 PROGRAM COPY	183
6.4.1 Machining Program Copy.....	183
6.4.2 Machining Program Condense.....	184
6.4.3 Machining Program Merge	185
6.4.4 Changing the Machining Program Number	186
6.5 PROGRAM FILE.....	187
6.6 RS-232-C I/O Device Connection	188
6.6.1 Connection of Tape Reader, Tape Puncher, Printer, FLD	188
6.7 Data Protection	189
6.7.1 Data Protection Key	189
6.7.2 Edit Lock B, C	191
7. Diagnosis.....	193
7.1 ALARM MESSAGE.....	194
7.1.1 Tracing of Alarm and Stop Codes	194
7.2 SERVO MONITOR	196
7.2.1 Servo Monitor	196
7.2.2 Servo Monitor (2)	197
7.2.3 Servo Diagnosis	198
7.2.4 Servo Diagnosis (2).....	199
7.2.5 PW Diagnosis	200
7.2.6 Display items for the synchronous error.....	201
7.3 SPINDLE MONITOR.....	202
7.4 PLC Interface Diagnosis	206
7.4.1 PLC-I/F Setting and Display	206
7.4.2 PLC Device Data Display	208
7.4.3 PLC Interface Signal Forcible Definition (Single-shot Type)	209
7.4.4 PLC Interface Signal Forcible Definition (Modal Type)	210
7.4.5 Diagnosis Executed When an Emergency Stop Status Occurs.....	211
7.5 Absolute Position Monitor	212

7.5.1	ABS Servo Monitor.....	212
7.5.2	Absolute Position Initialization.....	213
7.6	Adjustment.....	215
7.6.1	Adjustment Preparation.....	215
7.6.2	Automatic Analog Output Adjustment.....	215
7.6.3	Adjustment Procedure.....	216
7.6.4	Parameter Input/Output	217
7.7	OPERATION HISTORY.....	218
7.8	Configuration	219
7.8.1	S/W MODULE TREE	219
7.8.2	H/W MONITOR	219
7.9	Auxiliary Axis Parameter.....	220
7.9.1	MR-J2-CT parameters and N No. correspondence table.....	229
7.9.2	Backup	231
7.10	Auxiliary Axis Monitor.....	235
7.10.1	Alarm history display	236
7.10.2	Auxiliary axis adjustment function	236
7.10.3	Operation method for the auxiliary axis adjustment function	239
8.	Program Server	242
8.1	Host Setting	243
8.1.1	Setting the user name.....	244
8.1.2	Setting the password.....	244
8.1.3	Designating the directory	245
8.1.4	Setting the host address	245
8.2	Host	246
8.2.1	Displaying the file list.....	247
8.2.2	Downloading (IC to host).....	248
8.2.3	Uploading (Host to IC).....	249
8.3	IC card	250
8.3.1	Inputting a machining program from the IC card (IC to NC).....	251
8.3.2	Outputting a machining program from the IC card (NC to IC)....	252
8.3.3	Erasing a machining program from the IC card.....	253
8.3.4	Formatting the IC card	254
8.3.5	Searching for a machining program in the IC card.....	255
8.3.6	Listing the machining programs in the IC card	256
9.	Graphics	257
9.1	Outline of Functions.....	257
9.2	Menu Function	258
9.3	Use of the Trace Mode	260
9.4	Use of the Check Modes	261
9.5	GRF MODE	270
9.6	SCALE	272
9.6.1	Changing the Scale.....	272
9.6.2	Changing the Display Position	273
9.7	Standard Range.....	277
9.8	Rotate (M system).....	278

9.9	Delete	279
9.10	Program	280
10.	Ladder Circuit Monitor [for PLC built-in specification only]	281
10.1	Parameter Setting	281
11.	Visual Analyzer (Waveform display).....	282
11.1	Menu function	284
11.2	Synchronous tap error display	285

II. MACHINE OPERATION MANUAL

1.	Operation State	2
1.1	Operation State Transition Diagram	2
1.2	Power off.....	2
1.3	Run Not Ready	3
1.4	Ready	3
1.4.1	Reset.....	3
1.4.2	Automatic Operation Start.....	3
1.4.3	Automatic Operation Pause	4
1.4.4	Automatic Operation Stop	4
2.	Indicator Lamps	4
2.1	Control Unit Ready.....	4
2.2	Automatic Operation Busy	4
2.3	Automatic Operation Start Busy.....	4
2.4	Automatic Operation Pause Busy	4
2.5	Return to Reference Position.....	5
2.6	Alarm	5
2.7	M00.....	5
2.8	M02/M30.....	5
3.	Reset Switch and Emergency Stop Button	6
3.1	Reset Switch.....	6
3.2	Emergency Stop Button.....	6
4.	Operation Mode.....	7
4.1	Mode Selection Switch.....	7
4.2	Jog Feed Mode.....	7
4.3	Rapid Traverse Feed Mode	8
4.4	Return to Reference Position Mode.....	9
4.5	Incremental Feed Mode.....	11
4.6	Handle Feed Mode	12
4.7	Memory Mode	13
4.8	MDI Operation Mode	14

5. Operation Panel Switches in Operation Mode	15
5.1 Rapid Traverse Override.....	15
5.2 Cutting Feed Override.....	15
5.3 Manual Feedrate.....	15
5.4 Handle/Incremental Feed Magnification Factor	16
5.5 Handle Feed Axis Selection.....	16
5.6 Manual Pulse Generator.....	16
5.7 Cycle Start and Feed Hold.....	17
5.8 Feed Axis Selection	17
6. Operation Panel Switch Functions.....	18
6.1 Chamfering	18
6.2 Miscellaneous Function Lock.....	18
6.3 Single Block	18
6.4 Dry Run.....	18
6.5 Manual Override	18
6.6 Override Cancel.....	19
6.7 Optional Stop	19
6.8 Optional Block Skip.....	19
6.9 Manual Absolute	20
6.10 Error Detect	21
6.11 Follow-up Function.....	21
6.12 Axis Removal.....	21
6.13 Manual/Automatic Synchronous Feed	21
6.14 Handle Interruption	22
6.14.1 Outline.....	22
6.14.2 Interruptible Conditions	22
6.14.3 Interruption Effective Axis	22
6.14.4 Axis Movement Speed Resulting from Interruption	23
6.14.5 Path Resulting after Handle Interruption	24
6.14.6 Handle Interruption in Nose Radius Compensation	26
6.14.7 Interrupt Amount Reset.....	28
6.14.8 Operation Sequence	28
6.15 Machine Lock.....	29
6.16 Deceleration Check	30
6.16.1 Functions	30
6.16.2 Deceleration Check Method.....	30

III. SETUP

1. Switches	1
1.1 Layout Diagram of the Control Unit Rotary Switch.....	1
2. Start up and Adjustment Procedure.....	4
2.1 Confirmation of Connections	4
2.2 Setting of Various Switches	4
2.3 Turning Power on, Memory Initialization and Parameter Settings	5

3. Adjustment of Dog-type Reference Point Return.....	7
3.1 Outline	7
3.2 Dog-type Reference Point Return.....	7
3.3 Reference Point Return Parameters.....	9
3.4 Dog-type Reference Point Return Adjustment Procedures	14
4. Absolute Position Detection System.....	15
4.1 Outline	15
4.2 Coordinate System of Absolute Position System.....	15
4.3 Starting up Absolute Position Detection System.....	16
5. Stored Stroke Limit.....	27
5.1 Stored stroke limit I	29
5.2 Stored stroke limit II	30
5.3 Stored stroke limit IB.....	32
5.4 Stored stroke limit IC	32
5.5 Precautions.....	33
6. Daily Maintenance.....	34
6.1 Checking the External View	34
6.2 Checking the Inside of the Control Unit	34
7. Fault Diagnosis and Action.....	35
7.1 Checking the Fault Occurrence Status	35
7.2 Fault Examples	36
8. Maintenance Functions	37
8.1 Data Input/Output Function.....	37
8.1.1 Data Format	38
8.1.2 Data Output.....	41
8.1.3 Data Input and Compare.....	45

IV. APPENDIXES

Appendix 1 List of Function Codes.....	1
Appendix 2 List of Command Values and Setting Ranges	2
Appendix 3 G Type Sub-micron Specifications	3
3.1 Sub-micron specification setting	3
3.2 Parameters set in sub-micron units	3
Appendix 4 Circular Cutting Radius Error.....	5
Appendix 5 Registering/Editing the Fixed Cycle Program.....	6
5.1 Fixed Cycle Operation Parameters.....	6
5.2 Inputting the Fixed-cycle Program	6

5.3	Outputting the Fixed-cycle Program	6
5.4	Erasing the Fixed-cycle Program	6
5.5	Standard Fixed Cycle Subprogram (For L)	7
5.6	Standard Fixed Cycle Subprogram (For M)	17
Appendix 6	RS-232-C I/O Device Parameter Setting Examples and Cable Connection	22
Appendix 7	Operation Messages on CRT Setting Display Unit.....	23