

# **INSTALLATION MANUAL**

for  
**CINCINNATI MILACRON®**  
**HAWK 150 (ERD)**  
**TURNING CENTER**  
with  
**CNC CONTROL**

**PUBLICATION NO. 91203393A**

**CINCINNATI**  
**MILACRON**

# **INSTALLATION MANUAL**

for  
**CINCINNATI MILACRON®**  
**HAWK 150 (ERD)**  
**TURNING CENTER**  
with  
**CNC CONTROL**

**PUBLICATION NO. 91203393A**

**ACRAMATIC is a trademark of Vickers E.S.D., Inc.**

## **IMPORTANT**

**Carefully read the instructions and safety precautions given in this manual. Do not attempt to install this machine until you have thoroughly read and understood the material contained in this manual and all other applicable manuals.**

**At the time of writing, the book was completely up-to-date. However, due to continual improvements in design, it is possible that descriptions contained herein may vary to a slight extent from the system delivered to you. This merely implies that the system has been improved to better fulfill your requirements. You are encouraged to contact the nearest Cincinnati Milacron representative for clarification.**

## **Patents Notice**

The machine and attachments and parts thereof illustrated and described in this book are manufactured under and protected by issued and pending British and Foreign Patents and copyright is reserved in any original design feature thereof and in the contents of this book and every part thereof.



*We Build Productivity*

Cincinnati Milacron Limited  
P.O. Box 505, Kingsbury Road,  
Birmingham, B24 0QU

© 1995 Cincinnati Milacron Company  
Printed in England - EDITION 1 - October 1997

# Table of Contents

---

<b>Chapter 1</b>	
<b>Safety Precautions .....</b>	<b>1-1</b>
Important .....	1-1
General Safety Instructions And Considerations .....	1-2
Personal Safety .....	1-2
Work Area Safety .....	1-2
Tool Safety .....	1-3
Lifting And Carrying Safety .....	1-3
Installation And Relocation Safety .....	1-4
Setup And Operation Safety .....	1-4
Maintenance Safety .....	1-5
Materials Used With This Product .....	1-6
Lifting Devices .....	1-7
General .....	1-7
Eyebolts .....	1-7
Hoist Rings .....	1-10
Spreader Bars And Lifting Beams .....	1-11
Chain .....	1-11
Cable Slings .....	1-13
Synthetic Material Slings .....	1-14
P Type Hooks .....	1-15
S Hooks .....	1-15
U Type Hooks .....	1-17
General Safety Lifting Information .....	1-18
Printed Circuit Board Handling Instructions .....	1-19
General .....	1-19
Recommended Handling Procedure .....	1-19
Safety Features .....	1-20
Perimeter Guarding .....	1-20
Operator Sliding Door(s) .....	1-20
Feed Hold Push Button .....	1-20
Emergency Stop Push Button .....	1-21
Electrical Isolation Device .....	1-21
Air Supply Isolation Valve .....	1-21
Machine Related Safety And Usage Notes .....	1-22
Axis Overtravel Condition .....	1-22
Cutting Fluid .....	1-22
Safe Operation Of Lathe Chucks .....	1-22
Work Holding Devices .....	1-22
Battery Replacement .....	1-23
Information Plates .....	1-24
Fluids Used With Machine Tools – “USA” Markets .....	1-29
General Considerations .....	1-29
Cutting Fluids .....	1-29
Lubricants .....	1-29
Sources Of Information .....	1-29

# Table of Contents

Fluids Used With This Machine Tool – UK Market .....	1-31
General Considerations .....	1-31
Cutting Fluids .....	1-31
Lubricants .....	1-31
Fluids – Preventative Maintenance .....	1-32
Cutting Fluids .....	1-32
Water Quality .....	1-32
Too Soft .....	1-32
Too Hard .....	1-32
Cleaning The Coolant Reservoir .....	1-33
Lifespan .....	1-33
Tramp Oil .....	1-33
Filtering .....	1-33
Rust Prevention .....	1-33
<b>Chapter 2</b>	
<b>System Information .....</b>	<b>2-1</b>
Introduction .....	2-1
Guard Strength .....	2-2
Noise .....	2-3
Fumes And Coolant Misting .....	2-4
Fire Hazard .....	2-4
Machine Location .....	2-4
EMC Directive Requirements .....	2-4
NC Control .....	2-5
Machine Information .....	2-5
Axis Orientation .....	2-6
Hawk Specification .....	2-7
Machine And Range Drawings .....	2-9
Motor Rating .....	2-19
5500 rpm. Spindle	
Hawk 150 – Standard Speed Range .....	2-19
MACHINE ALIGNMENT AND PROGRAM POINTS .....	2-20
Machine Zero .....	2-20
<b>Chapter 3</b>	
<b>Pre Installation Requirements .....</b>	<b>3-1</b>
General .....	3-1
Location Requirements .....	3-1
Foundation Requirements .....	3-1
Bolting To The Foundation .....	3-1
Method Of Placing Machine Anchor Bolts In The Floor .....	3-2
New Floor Installation .....	3-2
Existing Floor Installation .....	3-3
Electrical Requirements .....	3-5
Equipment Grounding .....	3-5
Hydraulic Requirements .....	3-8

# Table of Contents

---

Air Requirements .....	3-8
Coolant Requirements .....	3-8
Lubrication Requirements .....	3-8
Grease Requirements .....	3-8
Spindle Bearings .....	3-9
Chuck .....	3-9
Oil Requirements .....	3-9
Tailstock .....	3-9
Sliding Covers .....	3-9
Indexing Turret .....	3-9
Lubrication Chart .....	3-10
Lubrication Chart – Symbolic .....	3-11
Oil Specification .....	3-12
Suppliers – European Market .....	3-12
Suppliers – USA Market .....	3-13
Light Hydraulic Oil and Lubricant .....	3-13
Approved Product List .....	3-13
Grease Specification .....	3-15
European – Market .....	3-15
Suppliers – USA Market .....	3-16
Lithium Based Extreme Pressure Grease .....	3-16
Approved Product List .....	3-16

## Chapter 4

### **Receiving And Lifting Information .....** 4-1

Receiving The Machine And Units .....	4-1
TRANSFORMER .....	4-1
Uncrating The Machine .....	4-1
Inspection Of Shipped Parts .....	4-1
Lifting The Machine .....	4-3
By Overhead Crane .....	4-3
By Fork Lift Truck .....	4-3
Lifting The Conveyor .....	4-3

## Chapter 5

### **Final Installation Procedure .....** 5-1

Positioning Machine .....	5-1
Cleaning .....	5-1
Removal Of Shipping Brackets .....	5-1
AIR LINE CONNECTION .....	5-2
Hydraulic Tank – Filling .....	5-2
Electrical .....	5-2
Checking Electrical Cabinet .....	5-2
Connecting Transformer .....	5-2
Connecting Customer's Supply to Isolating Transformer .....	5-2
Voltage Setting .....	5-3

# Table of Contents

---

Connecting Customer's Supply to Auto Transformer .....	5-3
COOLANT RESERVOIR – FITTING .....	5-3
Without Swarf Conveyor .....	5-3
Electrical .....	5-3
With Swarf Conveyor. ....	5-4
Electrical .....	5-4
CONTROL POWER ON – Procedure (A2100E). ....	5-4
CONTROL POWER ON – Procedure (FANUC 21i). ....	5-4
<b>Chapter 6</b>	
<b>Installation Sequence – Summary .....</b>	<b>6-1</b>
<b>Chapter 7</b>	
<b>Information Drawings .....</b>	<b>7-1</b>