

WE6800 Seris DRO

USER'S GUIDE

VER5.01

WE6800M-2 DRO for 2 axes

WE6800M-3 DRO for 3 axes

WE6800E DRO for EDM



Rational Precision Instrument Co.,Ltd

Contents

Chapter 1. INSTRUDITION.....	3
1.1 Front Panel.....	3
1.2 Back Panel.....	4
1.3 Description of Key Function.....	5
1.4 Interface.....	6
1.5 Coordinate System.....	7
Chapter 2. BASIC OPERATION.....	8
2.1 Power on.....	8
2.2 Zeroing.....	8
2.3 Presetting Data to Designated Axis.....	9
2.4 Toggle display unit between mm and inch.....	9
2.5 Mid-point Calculation.....	10
2.6 Setting the Shrinkage Mode.....	11
2.7 Absolute / Incremental / 1000 sets SDM.....	11
2.8 Clearing All SDM Datum.....	13
2.9 Finding the Absolute Reference Point of Scale (RI).....	13
2.10 Clearing the Error message.....	15
2.11 Lathe Function.....	15
2.12 Display value filter.....	16
Chapter 3 1000 group SDM coordinate.....	17
3.1 Zeroing at the Current Point.....	17
3.2 Presetting datum of SDM Coordinate.....	19
Chapter 4 SPECIAL FUNCTION.....	21
4.1 Bolt Hole Circle.....	21
4.2 Bolt Hole Line.....	24
4.3 ARC Processing.....	25
4.4 Slope Processing.....	30
4.5 Auto Edge Detection.....	32
Chapter 5. EDM.....	34
5.1 Setting EDM Parameters.....	35
5.2 EDM machining.....	36
5.2.1 Example for Mode 1 with Plus Depth.....	36
5.2.2 Example for Mode 1 with Minus Depth.....	38
5.2.3 Example for Mode 2.....	39
5.2.4 Example for Mode 3.....	41
5.2.5 Example for Mode 4 with Minus Depth.....	42
5.2.6 Example for Mode 6.....	44
5.3 Combination of BHC,BHL and EDM Function.....	46
Chapter 6 CALCULATING FUNCTION.....	48
6.1 Enter and exit Calculating Function.....	48
6.2 Calculating Example.....	48
6.3 Transferring the Calculated Results to Selected Axis.....	48
6.4 Transferring the Current Display Value in Window to Calculator.....	49
Chapter 7 INITIAL SYSTEM SETTINGS.....	50
7.1 Enter/Exit Initial System Settings.....	50
7.2 Setting the type of DRO.....	51
7.3 Setting Positive Direction for Counter.....	51

7.4	Setting Linear Compensation.....	52
7.5	Toggle Between R/D Display Mode.....	54
7.6	Setting Z axis Pitch.....	55
7.7	Setting the Resolution of Scale.....	56
7.8	Setting Relay Mode.....	57
7.9	Setting the EDM Mode.....	58
7.11	Enable / Disable ERROR Signal.....	60
7.12	Setting Shrinkage Ratio.....	60
7.13	Enable/Disable EDM Depth Compensation.....	61
7.14	Setting the Slope Machining Parameter.....	62
7.15	Setting Lathe Mode.....	63
7.16	Setting RI MODE.....	63
7.17	Enable/Disable Edge Detection.....	64
7.18	Toggle between Linear Scale and Rotary Encoder.....	65
7.19	Load default setup.....	66
Chapter 8	TROUBLESHOOTING.....	68