

# **SAFAN PRESS BRAKE CONTROL**

**type TS1 / TS2 /  
TS3**

Operation manual

All technical and technological information contained in this manual as well as any drawings and technical descriptions put at your disposal, remain our property and are not to be used further (other than for the sake of the operation of this product, photocopied, reproduced, transmitted or brought to the notice of third parties without our prior written consent.

**SAFAN BV**  
**P.O. box 96**  
**7240 AB Lochem**  
**The Netherlands**

**SAFAN BV**  
**Kwinkweerd 11**  
**7241 CW Lochem**  
**The Netherlands**

Tel.	+ 31(0)573 222222
Fax.	+ 31(0)573 252057

©1998 SAFAN BV

# 1. INTRODUCTION

## 1.1. TABLE OF CONTENTS

<b>1. INTRODUCTION</b>	<b>5</b>	<b>4. REGISTRATION OF BENDING PROGRAMS</b>	<b>25</b>
1.1. TABLE OF CONTENTS	5	4.1. WHERE AND HOW ARE BENDING PROGRAMS FILED?	25
1.2. INTRODUCTION	8	4.2. WORKING IN THE BENDING PROGRAM FILE MANAGER	26
1.3. USED SYMBOLS	10	4.3. LOADING AN EXISTING BENDING PROGRAM	29
1.4. DESCRIPTION OF THE BENDING PROCESS	11	4.4. COPYING A BENDING PROGRAM	30
1.5. THE DIFFERENT AXIS OF A PRESS BRAKE	13	4.5. RENAMING A BENDING PROGRAM	31
1.6. USER LICENSE SAFAN SOFTWARE PROGRAMS	14	4.6. DELETING A BENDING PROGRAM	32
<b>2. DESCRIPTION OF THE CONTROL</b>	<b>15</b>	4.7. MOVING A BENDING PROGRAM	33
2.1. CONNECTION BETWEEN THE TOUCH SCREEN CONTROL UNIT AND THE SAFAN PRESS BRAKE CONTROL	15	4.8. SEARCHING BENDING PROGRAMS USING CRITERIA	34
2.2. OPERATION OF THE TOUCH SCREEN PRESS BRAKE CONTROL	17	4.9. LOADING GRAPHICAL BENDING PROGRAMS (only possible in TS2 and TS3 controls)	37
2.3. THE VARIOUS TYPES OF THE TS-PRESS BRAKE CONTROL	18	4.9.1. First time Loading a graphical bending program	37
<b>3. STARTING UP THE CONTROL</b>	<b>19</b>	4.9.2. loading AN EXISTING graphical bending program.	39
3.1. THE VARIOUS OPERATING SITUATIONS	19	<b>5. ENTERING A NEW BENDING PROGRAM</b>	<b>41</b>
3.2. RELEASING THE VARIOUS OPERATING SITUATIONS	20	5.1. PROGRAMMING THE STATUS STEP	42
3.3. STARTING UP THE CONTROL IN OPERATING MODE	21	5.2. PROGRAMMING THE FIRST BENDING STEP	47
3.4. STARTING THE CONTROL IN PROGRAMMING MODE	23	5.2.1. PROGRAMMING THE Y-AXIS PAGE	47
3.5. STARTING UP THE CONTROL IN SERVICE MODE	24	5.2.2. PROGRAMMING THE X-AXIS PAGE	51
		5.2.3. PROGRAMMING THE AUXILIARY FUNCTION AXES PAGE	53
		5.3. COPYING BENDING STEPS	55
		5.4. PROGRAMMING THE SECOND (AND FOLLOWING) BENDING STEP(S).	56
		5.5. PROGRAMMING A RELATIVE BACK GAUGE MOVEMENT.	57
		5.6. PROGRAMMING A BENDING STEP WITHOUT Y-AXIS MOVEMENT.	58
		5.7. LIMITING PROGRAMMED VALUES AND NON-PROGRAMMED SETTINGS.	59
		5.8. PROGRAMMING A GRAPHICAL BENDING PROGRAM.	62
		<b>6. PROGRAMMING THE TOOLS</b>	<b>63</b>



6.1.	PROGRAMMING AND CHANGING THE DRAWING OF THE TOOLS.	64	8.5.1.	SWITCHING OFF A HYDRAULIC PRESSBRAKE.	96
6.1.1.	PROGRAMMING AND CHANGING PUNCH DATA.	66	8.5.2.	SWITCHING OFF A SERVO ELECTRIC PRESSBRAKE.	98
6.1.2.	PROGRAMMING AND CHANGING DIE DATA.	67			
6.1.3.	PROGRAMMING AND CHANGING THE POSITION AND LENGTH OF THE TOOLS.	69	9.	<b>CORRECTING AND ADAPTING A BENDING PROGRAM.</b>	<b>99</b>
6.2.	STORING THE TOOLS ON A FLOPPY DISK.	71	9.1.	CORRECTING ANGLES IN A PRODUCT.	100
6.3.	THE POSITION OF THE TOOLS IN A GRAPHICAL BENDING PROGRAM.	72	9.2.	CORRECTING THE DIMENSIONS OF A PRODUCT.	102
7.	<b>ADAPTING AN EXISTING BENDING PROGRAM.</b>	<b>75</b>	9.3.	ADAPTING ALL BENDING STEPS IN A BENDING PROGRAM.	103
7.1.	REMOVING BENDING STEPS AT THE END OF A BENDING PROGRAM.	78	9.4.	ADAPTING THE GRAPHICAL DISPLAY IN A BENDING PROGRAM.	105
7.2.	REMOVING ONE BENDING STEP FROM A BENDING PROGRAM.	78	9.5.	ADAPTING THE GRAPHICAL PART IN A BENDING PROGRAM.	107
7.3.	INSERTING ONE BENDING STEP IN A BENDING PROGRAM.	79	10.	<b>MACHINE PARAMETER MAINTENANCE.</b>	<b>109</b>
7.4.	7.4 ADDING A BENDING STEP AT THE END OF A BENDING PROGRAM.	79	10.1.	SURVEY OF MACHINE PARAMETERS.	111
7.5.	7.5 COPYING THE BENDING DATA FROM THE STATUS PAGE OF A BENDING PROGRAM.	80	10.2.	STORING THE MACHINE PARAMETERS ON A FLOPPY DISK	116
7.6.	ADAPTING THE NUMBER OF BENDING STEPS IN A GRAPHICAL BENDING PROGRAM	81	11.	<b>EXPLANATION OF THE VARIOUS EXTRA FUNCTIONS.</b>	<b>117</b>
7.7.	PROGRAMMING A PROGRAM STRING	82	11.1.	11.1 BLOCKING CONTROL ACCESS FOR UNAUTHORISED PERSONS.	118
8.	<b>RUNNING A BENDING PROGRAM IN OPERATING MODE.</b>	<b>85</b>	11.2.	CALLING UP THE "HELP" PAGES.	119
8.1.	RUNNING A NUMERICAL BENDING PROGRAM.	86	11.3.	CHANGING TIME AND DATE OF THE CONTROL.	120
8.2.	RUNNING A GRAPHICAL BENDING PROGRAM.	89	11.4.	USING THE CALCULATOR FUNCTION.	122
8.3.	THE VARIOUS WORKING MODES WHEN RUNNING A BENDING PROGRAM.	91	11.5.	TIME REGISTRATION.	123
8.3.1.	THE VARIOUS POINTS OF THE UPPER BEAM MOVEMENTS IN A BENDING CYCLE	91	11.6.	PRINTING PARAMETERS AND BENDING PROGRAMS.	124
8.3.2.	THE VARIOUS POINTS OF THE BACKGAUGE MOVEMENTS IN A BENDING CYCLE.	93	12.	<b>LIST OF TERMS</b>	<b>125</b>
8.4.	MANUAL OPERATION.	94	13.	<b>EXAMPLE PROGRAMMING SHEET</b>	<b>129</b>
8.5.	SWITCHING OFF THE MACHINE.	96	14.	<b>INSTALLING THE OFF-LINE TS-SOFTWARE ON A PC.</b>	<b>133</b>
			14.1.	INSTALLATION PROCEDURE SAFAN TS-SOFTWARE ON A PC.	134

14.2.	SETTING THE PARAMETERS IN THE OFF-LINE VERSION OF THE TS-SOFTWARE	136
15.	MAINTENANCE OF THE SAFAN TS-CONTROLS.	139

\* = only for TS2 and TS3 type

\*\* = only for TS3 type