

OPERATING MANUAL

for

CINCINNATI MILACRON®

SABRE/ARROW SERIES

VERTICAL MACHINING CENTERS

with

ACRAMATIC® 2100E CNC CONTROL

PUBLICATION NO. 91202934

**CINCINNATI
MILACRON**

OPERATING MANUAL

for
CINCINNATI MILACRON®
SABRE/ARROW SERIES
VERTICAL MACHINING CENTERS
with
ACRAMATIC® 2100E CNC CONTROL

PUBLICATION NO. 91202934

160 8175

ACRAMATIC is a trademark of Vickers E.S.D., inc.

IMPORTANT

Carefully read the instructions and safety precautions given in this manual. Do not attempt to operate this machine until you have thoroughly read and understood the material contained in this manual and all other applicable manuals.

At the time of writing, the book was completely up-to-date. However, due to continual improvements in design, it is possible that descriptions contained herein may vary to a slight extent from the system delivered to you. This merely implies that the system has been improved to better fulfill your requirements. You are encouraged to contact the nearest Cincinnati Milacron representative for clarification.

Patents Notice

The machine and attachments and parts thereof illustrated and described in this book are manufactured under and protected by issued and pending British and Foreign Patents and copyright is reserved in any original design feature thereof and in the contents of this book and every part thereof.

CINCINNATI
MILACRON

CINCINNATI MILACRON LIMITED
P.O. Box 505, Kingsbury Road,
Birmingham, B24 0QU.
England.

© 1995 Cincinnati Milacron Company
Printed in England - EDITION 3 - April 1996

Table of Contents

Chapter 1	
Safety Precautions	1-1
Important	1-1
General Safety Instructions And Considerations	1-2
Personal Safety	1-2
Work Area Safety	1-2
Tool Safety	1-3
Lifting And Carrying Safety	1-3
Installation And Relocation Safety	1-4
Setup And Operation Safety	1-4
Maintenance Safety	1-5
Materials Used With This Product	1-6
Lifting Devices	1-7
General	1-7
Eyebolts	1-7
Hoist Rings	1-10
Spreader Bars And Lifting Beams	1-11
Chain	1-11
Cable Slings	1-13
Synthetic Material Slings	1-14
P Type Hooks	1-15
S Hooks	1-15
U Type Hooks	1-17
General Safety Lifting Information	1-18
Printed Circuit (Pc) Board Handling Instructions	1-19
General	1-19
Recommended Handling Procedure	1-19
Safety Features	1-20
Perimeter Guarding	1-20
Operator Sliding Doors	1-20
Swarf Removal Panels	1-20
Feed Hold Push Button	1-21
Emergency Stop Push Button	1-21
Electrical Isolation Device	1-21
Air Supply Isolation Valve	1-21
Machine Related Safety And Usage Notes	1-22
Axis Overtravel Condition	1-22
Through Spindle Coolant Option	1-22
Tooling Taper – Spindle	1-22
Inter-drilled Tooling	1-22
Drive Key Spindle Unit	1-22
Cutting Fluid	1-22
Safe Operation Of Multi-part Tooling	1-23
Information Plates	1-24
Chapter 2	
System Information	2-1
Introduction	2-1

Table of Contents

Guard Strength	2-3
Noise	2-3
Work-piece/Work Holding Device Loading/Unloading	2-4
Fumes And Coolant Misting	2-4
Fire Hazard	2-4
Machine Information	2-5
Axis Orientation	2-6
Arrow Specification	2-7
Sabre Specification	2-9
Machine And Range Drawings	2-13
Arrow 500, 750	2-14
Sabre 500, 750, 1000	2-16
Sabre 1250, 1500, 2000	2-18
Table Dimensions	2-20
Tool Holder And Retention Stud	2-22
JMTBA-BT Tool Holder And Retention Stud	2-23
Chapter 3	3-1
Control Introduction	3-1
Operator Station	3-3
Operator Station Assembly (OSA) Keypad	3-4
Machine On	3-4
Machine Off	3-5
Emergency Stop	3-5
Page And Position keys	3-5
Numeric Keys	3-5
Escape, Help, Control, Alternate	3-6
The Control Screen	3-7
Display Areas	3-7
How Menu Buttons Function	3-8
Production Menu Display	3-9
Current Menu Display	3-9
Status Bar	3-9
General Mode Button Bar	3-9
Machine	3-10
Edit	3-10
RAP (Resident Assistant Programmer)	3-14
SFP (Shop Floor Programming)	3-17
Tools	3-17
Multi-Setup	3-18
More (Additional Mode Selections)	3-19
Diagnostics	3-20
Service	3-21
System Configuration	3-22
Mode Specific Button Bar	3-22
Back	3-22

Table of Contents

Display	3-22
Home	3-22
Touch Screen and Keyboards	3-23
Plotter Display	3-24
Machine Mode	3-27
Display Groups buttons	3-27
Menus	3-27
Axis Displays	3-28
Current	3-28
To Go	3-28
4-View	3-28
Limits	3-28
Servo	3-28
Servo Setup	3-28
Offset Displays	3-29
Pallet Offsets Display	3-29
Multi Setup Offsets	3-29
Fixture Offsets	3-29
Prog. Coord Offsets	3-29
Prog. Tool Offsets	3-29
Machine Offsets	3-29
Other Displays	3-30
Program Display	3-30
Message	3-30
System Registers	3-30
Variables Display	3-30
View Drawing Display	3-30
Tables	3-30
Tool Mode	3-32
Active Tool Set	3-33
Tool File	3-33
Tool Loading and Unloading	3-33
Tool Table Display Fields	3-34
Serial Number	3-34
Physical Attributes 1	3-34
Physical Attributes 2	3-34
Tool Setup and Usage	3-34
Tool History	3-35
Tool Sort By	3-35
Single	3-35
Tool Magazine	3-36
Inch/Metric Selection	3-37
Program Management	3-38
Directory Services (Registry, Import, Export)	3-38
Multiple Setup	3-40
Introduction	3-40
Features of Multiple Setup:	3-40

Table of Contents

Basic Elements of Multiple Setup:	3-40
About The Display Area	3-41
About Icons	3-41
Definition Page	3-42
Probe Cycle Introduction	3-42
About the Probe Cycle display	3-43
Probe Cycle Parameters:	3-44
New Coordinate:	3-44
About The Display Area	3-44
Operation Page	3-45
About The Operation Page	3-45
Machine Position:	3-45
Active Setup #:	3-45
Active Setup Status:	3-45
Multiple Setup:	3-46
Working With Setups	3-46
Activating Setups	3-46
Machine Pendant	3-47
Introduction	3-48
Main Electrical Cabinet	3-55
Optional Operating Devices	3-56
Swarf Conveyor	3-56
Chapter 4	4-1
General Setup Guide	4-1
Setup The Machine	4-1
Configure System	4-1
Align Machine	4-2
Perform Operating Station Functions	4-2
Perform Operating Functions	4-2
Create Manual Data Input	4-2
Set / Load Tooling	4-3
Power Feed / Jog Axes	4-3
Setup Part	4-3
Set Tram Surface	4-4
Set Tool Lengths	4-4
Find A Program	4-4
Load Part Program	4-4
Create Part Program	4-5
Edit Part Program	4-5
Position Set	4-5
Create Multiple Setup	4-6
Copy Program	4-7
Plot Program	4-7
Operating Checks	4-7
Run a Part Program	4-8
How Do I...	4-9
Master Controls	4-9
Switch On Power	4-9

Table of Contents

Switch-Off Power	4-10
Use Emergency Stop Push Button	4-11
Machine Alignment	4-12
Align the Machine	4-12
Axes Alignment Procedure	4-12
Mechanism Alignment Procedure	4-13
Automatic Realignment	4-14
Axes And Mechanism Functions	4-15
Select Axes Display	4-15
Inhibit An Axis	4-15
Jog An Axis	4-16
Power Feed An Axis	4-17
Jog Mechanisms	4-18
Override An Overtravel Limit	4-18
Data Entry	4-19
Keying In Data	4-19
Correct Typing Mistakes	4-21
Select Text	4-21
Perform Operator Station Keypad Operations	4-22
MDI Functions	4-25
Create An Manual Data Input (MDI) Program	4-25
Copy A MDI Program To Edit	4-25
Save MDI Program To Program Directory	4-26
Program Management	4-27
Load A Part Program From Diskette	4-27
Find A Program	4-28
Run A Part Program	4-29
Delete A Program	4-29
Select 'Delete A Program Block' Function	4-29
Deselect A 'Deleted Program Block' Function	4-30
Program Translation	4-30
RAP Functions	4-33
Create A Rap Session	4-33
Saving A Rap Session	4-37
Moving A Rap Session	4-38
Create An NC Program One Block At A Time With RAP	4-39
Create An NC Program With RAP	4-40
Duplicating A RAP Process	4-41
Executing A RAP Process	4-42
Insert X, Y, Z Values in RAP	4-42
Tool Functions	4-43
Display Tool Table Fields	4-43
Display Tool Sort	4-44
Display Single Tool	4-45
Display Tool Magazine	4-46
Activate A Tool From Tool File	4-47
Remove Tool From Magazine Display	4-48

Table of Contents

Find A Tool	4-51
Inch / Metric Tool Selection	4-52
Show Tool	4-52
Create New Tool File Entry	4-53
Create New Tool File	4-55
Move New Tool File to Active Tool Set	4-56
Modify Data In Tool Data Table	4-57
Load Authorized Tool Into Spindle	4-58
Load Unauthorized Tool Into Spindle	4-59
Unload Authorized Tool From Spindle	4-60
Unload Un-authorized Tool From Spindle	4-61
Load /Unload Tool Storage Magazine	4-62
Set Tram Surface	4-63
Display Tool Tram Surface	4-65
Set Tool Length	4-66
Multiple Setup Functions	4-68
Start Multiple Setup	4-68
Understand The Multiple Display Setup Area	4-68
Create And Manipulate Multiple Setup	4-69
Add One Setup To Multiple Setup	4-70
Delete Setup From Multiple Setup	4-71
Repositioning Setups in Multiple Setup	4-71
Definition Page Method	4-71
Multi-Setup Offsets Table Method	4-72
Apply Probe Cycle To A Multiple Setup	4-73
Run A Probe Cycle	4-82
Delete Probe Cycle	4-84
Modify Probe Cycle Code	4-85
Modify Probe Cycle Code	4-86
Apply Programs To A Multiple Setup	4-88
Save Multiple Setups	4-90
Load Multiple Setups	4-90
Delete Multiple Setups	4-91
Start Multiple Setup Operational Page	4-92
Understand The Operation Page	4-93
Change A Multiple Setup Status	4-95
Customize How All Setups Are Activated	4-96
Activate A Multiple Setup	4-98
Clearing The Setups & Order Status List	4-102
Change The Order Of The Setup Order & Status List	4-102
Find What Programs Are Applied To Multiple Setups	4-103
Editor	4-104
Search For/Replace With	4-104
Edit Cut, Copy, And Paste	4-105
Copy Programs To Dual Display	4-105
Copy A Program To Edit	4-107
Resequence A Program	4-107

Table of Contents

Save Program Edits	4-108
Copy Functions	4-110
Copy (Backup) A Program To Diskette	4-110
Copy (Backup) Active Tool Set To Diskette	4-110
Copy (Backup) Tool File To Diskette	4-111
Copy (Backup) Offset Tables To Diskette	4-112
Copy (Backup) A Program To PC	4-113
Plotter	4-116
Plot A Program	4-116
Track Tool Movement With Plot	4-117
Miscellaneous	4-118
Calibrate The Display Screen	4-118
Change Home Menu	4-119
NC Programming Execution (system configuration)	4-122
Activate Security Level	4-125
Connect a PC to the A2100E Control System	4-128
Position Set G92	4-131
Coordinate Reset	4-135
Search Program For Cycle Execution	4-138
Resume Cycle After Losing Synchronization	4-138
Probe Calibration	4-139
G72 Set Stylus and Tip Dimensions	4-139
G72 Set Stylus and Tip Dimensions	4-141
G74 Set Probe Length	4-141

Appendix A

Program Reference Data

A-1

System Table Names	A-1
Pallet Table	A-1
Multiple Setup Table	A-2
Fixture Offsets Table (Used with H Word)	A-2
Tool Offsets Table (Used with O Word)	A-2
Programmable Offsets Table (Used with D Word)	A-2
Machine Offsets Table (Used with D WORD and G98,G98.1)	A-2
Cycle Parameter Table	A-3
Tool Data Table	A-4
Process Control Data Table	A-6
Other System Variables	A-7
Type I Block Word Addresses	A-9
M Code Listing	A-10
G Code Listing	A-11
Type II Block Listing	A-12