

精湛的技術・傑出的產品

大立機器工業股份有限公司

DAH LIH MACHINERY INDUSTRY CO., LTD.

OPERATION AND MAINTENANCE MANUAL

誠信踏實

MCV-1020A

MCV-1250

MCV-1350

MCV-1450

MCV-1500

MCV-1700

MCV-2100

MCV-2600

FANUC 0i/18i/21iMB、0iMC

永續經營

091-T2-05-004 VERSION : 2.0

AUG/30/2006

TABLE OF CONTENTS

INTRODUCTION.....	2
WARNINGS.....	3
FEATURES OF MCV-1020A.....	4
FEATURES OF MCV-1250.....	5
FEATURES OF MCV-1350 AND MCV-1500.....	6
FEATURES OF MCV-1450.....	7
FEATURES OF MCV-1700.....	8
FEATURES OF MCV-2100 AND MCV-2600.....	9

1. SAFETY PRECAUTIONS

1-1 GENERAL SAFETY PRECAUTIONS.....	1-2
1-2 SAFETY PRECAUTIONS FOR OPERATING THE MACHINE..	1-3
1-3 PRECAUTIONS FOR USING THE ELECTRICAL COMPONENTS AND THE NC CONTROLLER.....	1-4
1-4 ILLUSTRATION OF THE DANGEROUS AREAS OF THE MACHINE.....	1-5
1-5 ILLUSTRATION OF THE LOCATIONS AND CONTENTS OF WARNING SIGNS.....	1-7

2. INTRODUCTION TO THE MACHINE

2-1 LAYOUT AND LIST OF COMPONENTS.....	2-2
2-2 OVERALL DRAWING.....	2-3
2-3 WORKSPACE AND REFERENCE POINT.....	2-10
2-4 SPECIFICATIONS.....	2-12
2-5 TOOL SPECIFICATIONS.....	2-14
2-5-1 RANGE OF USED TOOLS.....	2-14

2-5-2 TOOLS.....	2-15
2-6 SPINDLE POWER AND TORQUE DIAGRAM.....	2-21

3. PREPARATIONS FOR INSTALLATION

3-1 REQUIREMENTS OF THE ENVIRONMENT.....	3-2
3-2 REQUIREMENTS OF THE FOUNDATION AND THE FOUNDATION DRAWINGS.....	3-3
3-2-1 METHOD FOR CONSTRUCTION THE FUNDATION.....	3-3
3-2-2 FOUNDATION DRAWINGS.....	3-5
3-3 REQUIREMENT OF POWER SOURCES.....	3-28
3-3-1 REQUIREMENT OF ELECTRICAL POWER.....	3-28
3-3-2 PNEUMATIC REQUIREMENTS.....	3-32
3-3-3 REQUIREMENT OF HYDRAULICS.....	3-34
3-4 THE EQUIPMENT REQUIRED FOR TRANSPORTATION.....	3-35
3-5 OPERATION ENVIRONMENT FOR THE NC MACHINE.....	3-47
3-6 NOTES FOR TURNING ON THE MACHINE AFTER INSTALLATION.....	3-49
3-6-1 BEFORE TURNING ON THE MACHINE.....	3-49
3-6-2 AFTER TURNING ON THE MACHINE.....	3-50

4. TRANSPORTATION,INSTALLATION, AND ADJUSTMENT

4-1 GUIDELINES FOR TRANSPORTATION.....	4-2
4-2 GUIDELINES FOR INSTALLATION.....	4-4
4-3 LEVEL ADJUSTMENT.....	4-7
4-3-1 VERTICAL (FOUR POINTS)ADJUSTMENT METHOD ABOUT MCV-1020A~MCV-1500.....	4-8
4-3-2 METHOD OF LEVEL ADJUSTMENT FOR MCV-1700....	4-10
4-3-3 METHOD OF LEVEL ADJUSTMENT FOR MCV-2100 MCV-2600.....	4-15

***** 5. OPERATIONS

5-1 LCD/MDI OPERATION AND DISPLAY.....	5-2
5-1-1 EXPLANATION OF THE KEYBOARD.....	5-5
5-1-2 FUNCTION KEYS.....	5-7
5-1-3 FUNCTION KEYS AND SOFT KEYS.....	5-8
5-1-4 HELP FUNCTION.....	5-9
5-1-5 GRAPHICS DISPLAY (10.4" LCD).....	5-10
5-2 OPERATION PANEL.....	5-12
5-3 FUNCTION AND OPERATION OF THE OPERATION PANEL.	5-13
5-4 MACHINE OPERATION.....	5-22
5-4-1 EXAMINATION BEFORE TURNING ON THE MACHINE	5-22
5-4-2 TURN ON THE MACHINE.....	5-23
5-4-3 TURN OFF THE MACHINE.....	5-24
5-5 HANDLE MODE.....	5-25
5-6 AUTO MODE OPERATION.....	5-27
5-6-1 MANUAL DATA INPUT(MDI).....	5-27
5-6-2 START AUTO OPERATION.....	5-28
5-6-3 STOP AUTO OPERATION.....	5-29
5-6-4 MANUAL INTERRUPTION (OPTIONAL FUNCTION)....	5-30
5-6-5 PROGRAM RESTART(OPTIONAL).....	5-31
5-6-6 EDIT OPERATION FOR i SERIES.....	5-34
5-6-7 SOFTWARE OPERATOR`S PANEL.....	5-46
5-7 G FUNCTION.....	5-48
5-8 F FUNCTION.....	5-51
5-9 S FUNCTION.....	5-51
5-10 T FUNCTION.....	5-51
5-11 M FUNCTION.....	5-52
5-12 CHIP CONVEYOR AND CHIP CLEANING DEVICE.....	5-59
5-13 AUXILLARY TOOL BRACKET MECHANISM.....	5-63

***** * 6. AUTOMATIC TOOL CHANGE(ATC) *****

6-1 HYDRAULIC ATC.....	6-2
6-1-1 M CODE FOR ATC OPERATION.....	6-3
6-1-2 PROCEDURE FOR ATC OPERATION.....	6-4
6-1-3 ATC PROGRAMMING.....	6-8
6-1-4 IMPROPER TOOL NUMBER.....	6-8
6-1-5 CONFIRMATION OF TOOL NUMBER.....	6-9
6-1-6 TIMER AND KEEP RELAY FOR ATC.....	6-12
6-1-7 TOOL LOADING AND UNLOADING.....	6-14
6-1-8 ADJUSTMENT OF THE TOOL EXCHANGING POSITION IN THE Z-AXIS DIRECTION.....	6-16
6-2 CAM ATC (BT50).....	6-17
6-2-1 M CODE FOR ATC OPERATION.....	6-18
6-2-2 PROCEDURE FOR ATC OPERATION.....	6-19
6-2-3 ATC PROGRAMMING.....	6-23
6-2-4 IMPROPER TOOL NUMBER.....	6-23
6-2-5 CONFIRMATION OF TOOL NUMBER.....	6-24
6-2-6 TIMER AND KEEP RELAY FOR ATC.....	6-27
6-2-7 TOOL LOADING AND UNLOADING.....	6-29
6-2-8 ADJUSTMENT OF THE TOOL EXCHANGING POSITION IN THE Z-AXIS DIRECTION.....	6-31
6-3 CAM ATC (BT40).....	6-32
6-3-1 M CODE FOR ATC OPERATION.....	6-33
6-3-2 PROCEDURE FOR ATC OPERATION.....	6-34
6-3-3 ATC PROGRAMMING.....	6-38
6-3-4 IMPROPER TOOL NUMBER.....	6-38
6-3-5 CONFIRMATION OF TOOL NUMBER.....	6-39
6-3-6 TIMER AND KEEP RELAY FOR ATC.....	6-42
6-3-7 TOOL LOADING AND UNLOADING.....	6-44
6-3-8 ADJUSTMENT OF THE TOOL EXCHANGING POSITION IN THE Z-AXIS DIRECTION.....	6-46

***** **7. SETTING AND ADJUSTMENT**

7-1 LEVEL ADJUSTMENT.....	7-2
7-2 ADJUSTMENT AND SETTING OF THE PNEUMATIC AIR PRESSURE.....	7-2
7-3 TIMER.....	7-3
7-3-1 SETTING TIMER.....	7-3
7-3-2 FIX TIMER.....	7-6
7-4 KEEP RELAY.....	7-7
7-5 DATA TABLE.....	7-23

8. MAINTENANCE AND CARE

8-1 ROUTINE CHECKUPS.....	8-2
8-2 LUBRICANT.....	8-3
8-3 SPINDLE COOLING UNIT.....	8-4
8-4 CLEANING AND MAINTENANCE.....	8-5
8-5 THE POSITION OF SOLENOID, LIMIT SWITCH, AND PROXIMATE SWITCH.....	8-6
8-5-1 THE POSITIONS OF LIMIT SWITCH AND PROXIMATE SWITCH.....	8-6
8-5-2 POSITION DIAGRAM FOR SOLENOID.....	8-9
8-5-3 HYDRAULIC DIAGRAM.....	8-12
8-6 DOOR INTERLOCK RELEASE.....	8-13

9. TROUBLE SHOOTING

9-1 PARAMETER SETTINGS.....	9-2
9-2 OVERTRAVEL.....	9-4
9-3 CHANGING BATTERIES.....	9-5
9-4 TROUBLE SHOOTING DURING THE PROCESS OF AUTOMATIC TOOL CHANGING.....	9-7
9-4-1 ATC BY HYDRAULIC.....	9-7

9-4-2 ATC BY CAM.....	9-9
9-5 WARNING MESSAGES.....	9-11
9-5-1 HYDRAULIC TYPE.....	9-11
9-5-2 CAM TYPE.....	9-15

10. AUTOMATIC PALLET CHANGER (APC OPTIONAL)

10-1 OUTLOOKING AND THE NAMES OF MAJOR PARTS.....	10-2
10-2 THE MAJOR SIZE OF THE MACHINE.....	10-3
10-3 TRANSPORTATION AND INSTALLATION.....	10-6
10-3-1 TRANSPORTATION.....	10-6
10-3-2 INSTALLATION.....	10-7
10-4 COMMANDS OF APC OPERATION.....	10-14
10-5 OPERATION PROCEDURES FOR APC.....	10-15
10-6 PROGRAMMING OF THE APC.....	10-19
10-7 SETTING OF MACHINING PROGRAM NUMBER.....	10-22
10-8 MDI MODE MAINTENANCE OPERATION.....	10-23
10-9 HYDRUALIC DIAGRAM FOR APC.....	10-24
10-10 KEEP RELAY, TIMER, AND DIAGNOSTIC ADDRESS FOR APC.....	10-25
10-10-1 KEEP RELAY.....	10-25
10-10-2 TIMER.....	10-28
10-10-3 DIAGNOSTIC ADDRESS.....	10-28

APPENDIX

A1. AUTOMATIC TOOL LENGTH BREAKAGE DETECTION (G36).....	A-2
A2. AUTOMATIC TOOL LENGTH DETECTION(G37).....	A-9

B.	OPEN/CLOSE LINEAR SCALE.....	B-1
C.	SETTING OF 4 th & 5 th AXIS.....	C-1
D.	CALL A/B PALLET PROGRAM (FOR MCV-1020).....	D-1
E.	Z AXIS RETURN WHEN AUTO TOOL CHANGE FOR MACRO PROGRAM.....	E-1