



TA11 Operating Procedure

- Turn TA11 on. The recorder is ready when the following is displayed (1.5 minute bootup):

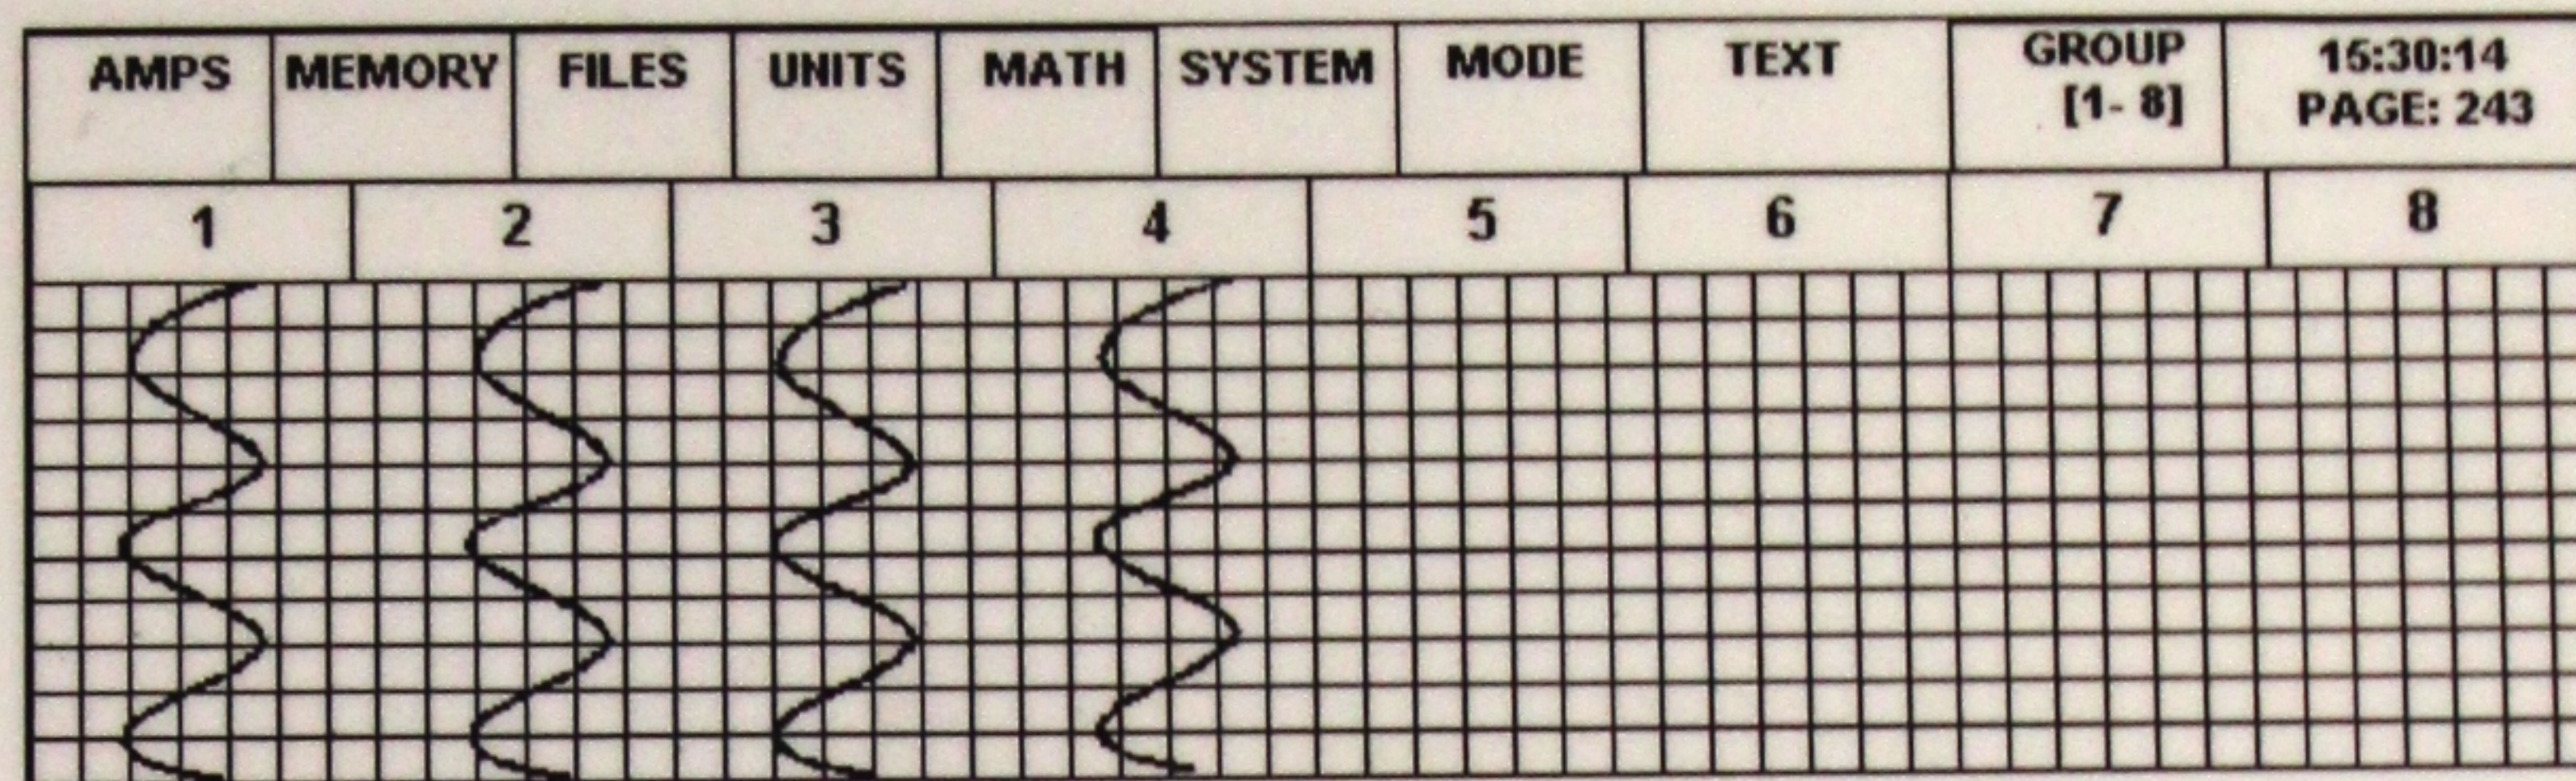


- Load a setup by pressing the **Load** key on the front panel. Select **RAM** setup. There are 5 setups available; 1,2,3,4 and 5. Select a setup. Setups are as follows:

- [1] – One Channel Grid
- [2] – Two Channel Grid
- [4] – Four Channel Grid
- [5] – Eight Channel Grid

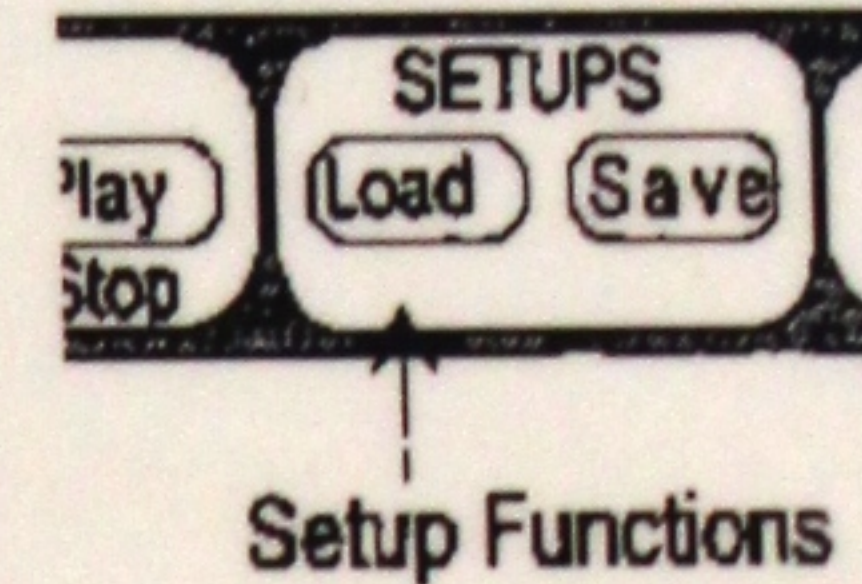

- Select the AMP menu. Hit the ▼ arrow twice until the following functions are displayed (SENS, X100 & OFFSET):

| AMPS | ZERO OFF | AUTO RANGE | AUTO SETUP | SPAN 10s | SYSCAL | | GROUP [1-8] | EXIT | 15:30:14 PAGE: 210 |
|--------|----------|------------|------------|----------|--------|--------|-------------|--------|-----------------------|
| ▲ ▼ | 1 V | 2 V | 3 V | 4 V | 5 V | 6 V | 7 V | 8 V | ◀ ▶ |
| SENS | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | GLOBAL |
| X100 | X100 | X100 | X100 | X100 | X100 | X100 | X100 | X100 | LIST KEY |
| OFFSET | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | + - |

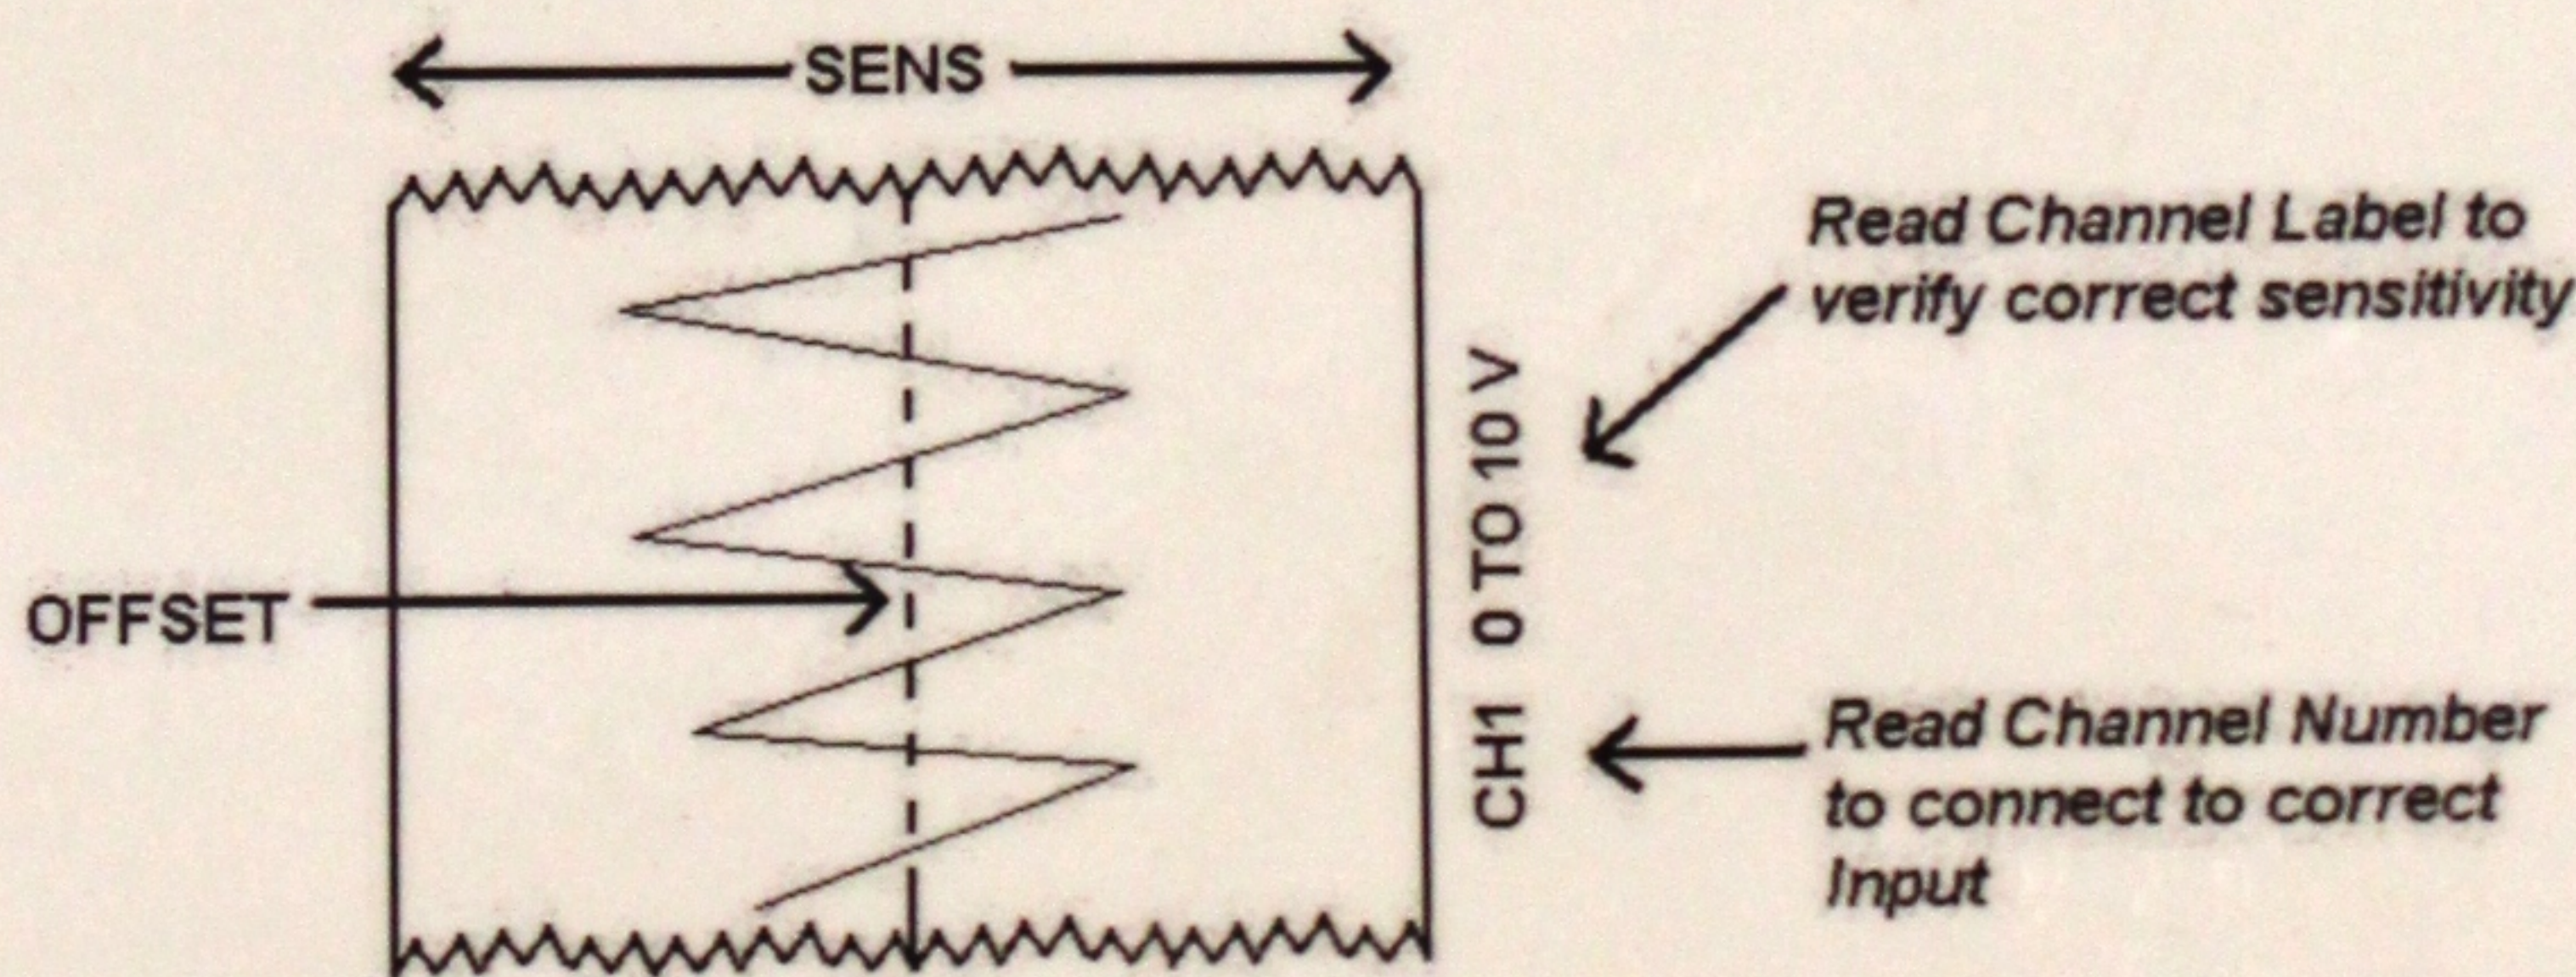

NOTE: If "Out of Range" message is displayed when changing SENS value, toggle the X100 setting.

- Change the **SENS**, **X100** and **OFFSET** parameters for each channel (see picture above). **SENS** is the sensitivity across the Grid. **OFFSET** equals the middle value of the grid. If an "Out of Range" message is displayed, first select **CANCEL** and then toggle the **X100** field. Also note the channel label information for correct sensitivity and channel connection.

- Select the required chart speed and run the chart.

