

**Howa**  
*KIWAMI* series

---

MKN-115VT

PARTS LIST

 HOWA MACHINERY,LTD.

# PARTS LIST INDEX

---

1 .	CROSSUNIT ASSEMBLY · · · · ·	1-1
2 .	COLUMN ASSEMBLY · · · · ·	2-1
3 .	SPINDEL	
3-1	SPINDLE ASSEMBLY · · · · ·	3-1
3-2	CARTRIDGE SPINDLE ASSEMBLY · · · · ·	3-4
4 .	MAGAZINE	
4-1	MAGAZINE ASSEMBLY · · · · ·	4-1
4-2	TOOL-POT ASSEMBLY · · · · ·	4-4
5 .	ATC	
5-1	ATC ASSEMBLY · · · · ·	5-1
5-2	GRIPPER ASSEMBLY · · · · ·	5-5
6 .	AIR & COOLANT EQUIPMENT · · · · ·	6-1
7 .	COOLANT UNIT · · · · ·	7-1
8 .	DOOR · · · · ·	8-1

The meanings of the each symbols (A,B,C) in the app.  
of the parts list are as follows.

- A : Wear parts, exchanging in 1 or 2 years.
- B : Wear parts, exchanging 3~5 years.
- C : The parts, sometimes happens to wear in more than 5 years usual operation.

No symbol : The parts, not necessary to exchange.