

GE Fanuc Series 15/150

Maintenance Manual

**COMPUTER
NUMERICAL
CONTROL PRODUCTS**

B-61215E/02/1989

No part of this manual may be
reproduced in any form.

All specifications and designs
are subject to change without notice

Copyright by FANUC LTD, Japan 1988
Authorized reprint by GE Fanuc Automation

1852

GE Fanuc Automation

This manual describes the following products :

| Product Name | Abbreviation | |
|---------------------|--------------|------------|
| FANUC Series 15-TA | 15-TA | Series 15 |
| FANUC Series 15-TF | 15-TF | |
| FANUC Series 15-MA | 15-MA | |
| FANUC Series 15-MF | 15-MF | |
| FANUC Series 15-TTA | 15-TTA | |
| FANUC Series 15-TTF | 15-TTF | |
| FANUC Series 150-TA | 150-TA | Series 150 |
| FANUC Series 150-MA | 150-MA | |

CONTENTS

| | |
|--|-----|
| 1. GENERAL | 1 |
| 1.1 Construction | 2 |
| 1.2 Configuration | 12 |
| 1.3 System Block Diagram | 32 |
| 1.4 PCB and Unit Table | 50 |
| 2. PERIODIC MAINTENANCE AND MAINTENANCE EQUIPMENT | 57 |
| 2.1 Periodic Maintenance | 58 |
| 2.2 Maintenance Equipment | 67 |
| 2.3 Main Spare Parts | 67 |
| 3. TROUBLESHOOTING | 68 |
| 3.1 Procedures | 68 |
| 3.2 Error Message | 68 |
| 3.3 Checking and Countermeasures | 69 |
| 3.3.1 No power can be turned on | 69 |
| 3.3.2 CRT screen is not displayed after turning on power supply | 70 |
| 3.3.3 Troubleshooting by alarm number | 70 |
| 3.3.4 Lighting of LED on master PCB | 80 |
| 3.3.5 JOG operation failure | 103 |
| 3.3.6 Operation failure with manual pulse generator | 104 |
| 3.3.7 Spindle synchronous feed operation failure | 105 |
| 3.3.8 Tape is not ready normally | 105 |
| 3.3.9 No automatic operation is possible | 109 |
| 3.3.10 Spindle binary/analog output voltage is abnormal | 110 |
| 3.3.11 Analog output voltage linearity is not good | 112 |
| 3.3.12 Reader/puncher and ASR33 interface do not operate normally | 113 |
| 3.3.13 Stop position does not coincide with reference point return position | 114 |
| 3.3.14 System error | 118 |
| 3.4 Power Voltage Check | 124 |
| 3.4.1 Input unit | 124 |
| 3.4.2 Input power voltage check | 125 |
| 3.4.3 DC voltage checking | 129 |
| 3.4.4 Power voltage check on servo amplifier | 132 |
| 3.5 Tape Reader Photo-amplifier Adjustment | 132 |
| 3.5.1 Tape reader without reels photo-amplifier adjustment | 132 |
| 3.5.2 Tape reader with reels photo-amplifier adjustment | 134 |
| 3.6 Confirmation for CNC Internal Connection | 138 |
| 3.7 Status Display by Self-Diagnostic Function | 161 |
| 3.7.1 Interface display | 161 |
| 3.7.2 Display of internal conditions of NC | 162 |
| 3.7.3 Memory contents display | 166 |
| 3.7.4 I/O signal diagnostic data | 167 |
| 3.7.5 LED display of I/O module | 217 |
| 3.7.6 System configuration screen | 218 |
| 3.8 Servo System Block Diagram | 220 |
| 3.8.1 Position control section block diagram | 220 |
| 3.9 Connection with Servo | 222 |
| 3.10 Standard Connection and Reverse Connection of Servo Motor (Relationship between connections and rotating directions of servo motor) | 228 |
| 3.11 Troubleshooting for Servo Unit | 228 |

| | |
|---|-----|
| 3.12 Error Display and Its Contents of I/O Unit | 229 |
| 3.12.1 Error display and contents in interface module (IFO1D) | 229 |
| 3.12.2 Error display and contents in positioning module (PT01A) | 230 |
| 3.12.3 Fuse alarm of I/O module | 246 |
| 4. ADJUSTMENT | 251 |
| 4.1 Procedure of Adjustment | 251 |
| 5. PARAMETER | 258 |
| 5.1 Parameter Display | 258 |
| 5.1.1 Displaying parameters other than pitch error compensation data | 258 |
| 5.1.2 Displaying pitch error compensation data | 258 |
| 5.2 Parameter Setting | 258 |
| 5.2.1 Parameters tape format | 258 |
| 5.2.2 Setting parameters using parameter tape | 260 |
| 5.2.3 Setting from MDI | 260 |
| 5.3 Parameter Tape Punch | 261 |
| 5.3.1 Punching all parameters | 261 |
| 5.3.2 Punching the parameters except pitch error compensation data | 261 |
| 5.3.3 Punching pitch error compensation data | 261 |
| 5.4 Parameters | 262 |
| 5.5 PMC Data Setting and Display (PCPRM) | 276 |
| 5.5.1 Timer setting and display | 276 |
| 5.5.2 Counter setting and display | 277 |
| 5.5.3 Setting and display of keep relay and nonvolatile memory control data | 278 |
| 5.5.4 Setting and display of data table | 279 |
| 5.5.5 Setting and display of positioning MODULE parameters | 281 |
| 6. SETTING AND ADJUSTMENT ON THE PCBs | 283 |
| 6.1 Setting and Adjustments on the Control Unit PCBs | 283 |
| 6.1.1 Setting on the control unit PCBs | 283 |
| 6.1.2 Adjustment on the control unit PCBs | 284 |
| 6.1.3 Mounting positions of setting pins/variable resistor on control unit PCBs | 284 |
| 6.1.4 I/O unit setting and adjustment | 291 |
| 6.2 Setting and Adjustment of Servo Amplifier | 297 |
| 7. REPLACING METHOD OF PCB AND UNITS | 298 |
| 7.1 Replacing Method of Power Supply Unit | 298 |
| 7.1.1 Procedure | 298 |
| 7.2 Replacing Methods of Control PCB | 299 |
| 7.3 Replacing Methods of PMC ROM Cassette | 300 |
| 7.4 Replacing Methods of Back Panel | 301 |
| 7.5 BASE 1 PCB Replacement Method | 309 |
| 7.6 Graphic CPU PCB Replacement Method | 310 |
| 7.7 Replacing Methods of Connection Unit 1 | 311 |
| 7.8 Replacing Methods of Connection Unit (with Connecting Board) | 312 |
| 7.9 Exchange Methods of I/O Unit | 316 |
| 7.9.1 Exchange method of power supply module | 316 |
| 7.9.2 Exchange method of main control module and I/O module | 317 |
| 7.9.3 Exchange method of base units | 319 |
| 7.10 Replacing Methods of Small and Standard CRT/MDI PCB | 321 |
| 7.10.1 Replacement of PCB A (keyboard PCB) | 321 |
| 7.10.2 Replacement of PCB B (soft key PCB) and keys sheet | 321 |

| | | |
|--------|--|-----|
| 7.11 | Replacing Methods of 14" Color CRT/MDI (horizontal type) PCB | 323 |
| 7.12 | Replacing Methods of PCB and Others Referred to Tape Reader | 327 |
| 7.12.1 | Replacement of PCB of tape reader without reels photoamplifier | 327 |
| 7.12.2 | Replacing methods of tape reader with reels PCB and fuse | 328 |
| 7.12.3 | Replacement of capstan roller of tape reader without reels | 329 |
| 7.12.4 | Replacement of capstan roller of tape reader with reels | 329 |
| 7.12.5 | Replacement of brushes of tape reader with reels sole motor ... | 331 |
| 7.13 | Replacement of PCB for Velocity Control Unit and AC Servo Amplifier | 332 |

APPENDIX

| | | |
|------------|--|-----|
| APPENDIX 1 | CONNECTION DIAGRAMS | 335 |
| APPENDIX 2 | DETAILS OF POWER UNIT | 392 |
| APPENDIX 3 | AC SERVO MOTOR MAINTENANCE | 407 |
| APPENDIX 4 | FUSE CHART | 410 |
| APPENDIX 5 | PROPERTY OF LUBRICATION OIL FOR MAINTENANCE OF TAPE READER | 418 |
| APPENDIX 6 | FAN UNIT LIST | 421 |
| APPENDIX 7 | PARAMETER AND DIAGNOSTIC DISPLAY FUNCTION OF POSITIONING MODULE | 422 |
| APPENDIX 8 | OPTICAL FIBER CABLE | 452 |

