

**YCM-FV85A/FV102A
XV1020A**

MECHANICAL MANUAL

MODEL : FV102A

VERTICAL MACHINING CENTER

OPFV85AM01

R01

CONTENTS

PREFACE	PAGE
CHAPTER 1 INSTRUCTION FOR SAFETY	
1-1 Basic instruction for safe operation.....	1-1 ~ 1-2
1-2 Symbols and designations connected with safety.....	1-3
1-3 Safety precautions	
1-3-1 Basic operating practices.....	1-4
1-3-2 Before switching on.....	1-5
1-3-3 After control power switch has been turned on.....	1-5
1-3-4 Routine inspections.....	1-6
1-3-5 Warm up.....	1-6
1-3-6 Preparations.....	1-6 ~ 1-7
1-3-7 Operation.....	1-7 ~ 1-8
1-3-8 To interrupt machining.....	1-8
1-3-9 Completing a job.....	1-8
1-3-10 Safety devices.....	1-8
1-3-11 Maintenance operation preparations.....	1-8 ~ 1-9
1-3-12 Maintenance operation.....	1-9
1-3-13 Until operation is begin after maintenance.....	1-9
1-4 Danger areas	
1-4-1 Area with moving parts.....	1-10 ~ 1-11
1-4-2 High voltage areas.....	1-12 ~ 1-13
1-5 Safety devices.....	1-14 ~ 1-15
1-5-1 Warning plates position.....	1-16
1-5-2 Instruction plates position.....	1-17
1-5-3 I . D name plate of machine.....	1-18

CHAPTER 2 DESCRIPTION OF MACHINE

2-1 Function and fields of application	2-1
2-2 Specification	2-2 ~ 2-5
2-3 Accessories	2-6
2-4 Airbond noise	2-7
2-5 Outview dimensions & main parts of machine	
2-5-1 Outview dimensions	2-8
2-5-2 Main parts of machine	2-9 ~ 2-11
2-6 Dimensions of working space	
2-6-1 X,Y-Axis travel (FV85A).....	2-12
2-6-2 X,Y-Axis travel (FV102A).....	2-13
2-6-3 Y,Z-Axis travel	2-14 ~ 2-15
2-6-4 A. T. C travel.....	2-16

CHAPTER 3 DESIGN AND FEATURES

3-1 Spindl	3-1
3-1-1 Shank and pull stud.....	3-2 ~ 3-3
3-1-2 Spindle output characteristic	3-4 ~ 3-7
3-2 Feed unit structure design	
3-2-1 " X " axis	3-8
3-2-2 " Y " axis	3-9
3-2-3 " Z " axis.....	3-10
3-2-4 Table size & T slot dimensions.....	3-11 ~ 3-12
3-3 X, Y & Z travel orientation devices	
3-3-1 " X " axis	3-12 ~ 3-13
3-3-2 " Y " axis	3-14
3-3-3 " Z " axis.....	3-15
3-4 A. T. C	
3-4-1 A. T. C system.....	3-16
3-4-2 A. T. C cycle.....	3-17 ~ 3-22

CHAPTER 4 PREPARATION BEFORE TRANSPORT AND INSTALLATION

4-1 Minimum space for foundation and maintenance.....	4-1
4-2 Power supplies.....	4-1
4-2-1 Electric.....	4-1
4-2-2 Grounding.....	4-1
4-2-3 Air.....	4-1
4-2-4 Cutting fluid.....	4-1
4-3 Installation environment.....	4-2 ~ 4-3

CHAPTER 5 TRANSPORT AND INSTALLATION

5-1 Packing.....	5-1
5-2 Safety precautions.....	5-1
5-3 Machine lifting.....	5-2 ~ 5-4
5-4 Temporary storage.....	5-5
5-5 Machine installation.....	5-5 ~ 5-6
5-5-1 Disposal after installation.....	5-6
Foundation drawing.....	5-7
5-6 Installation process for APC.....	5-8 ~ 5-10

CHAPTER 6 PREPARATION BEFORE MACHINE TRIAL RUN

6-1 The lifting jigs and fixtures removing.....	6-1
6-2 Cleaning machine.....	6-1
6-3 Leveling machine.....	6-1 ~ 6-2
6-4 Checking before operation.....	6-3
6-5 Warming up of spindle.....	6-4

CHAPTER 7 MACHINE MAINTENANCE

7-1 Arrangement of equipments.....	7-1
7-2 Maintenance area	7-2
7-3 The usual maintenance	7-3 ~ 7-4
7-4 Mechanical cautions	7-5 ~ 7-7
7-4-1 Preparing for operation	7-8
7-4-2 Precautions regarding safety.....	7-9
7-5 Pneumatic and hydraulic system	
7-5-1 Pneumatic unit	7-10
7-5-2 Oil skimmer	7-11
7-5-3 Pneumatic hydraulic maintenance seal	7-12 ~ 7-13
7-6 Control valves and limit switches.....	7-14 ~ 7-15
7-6-1 Additional information to be given on components.....	7-16 ~ 7-18
7-7 Troubles and remedies.....	7-19 ~ 7-20
7-8 Machine lubrication	
7-8-1 Lub. of guideways.....	7-21
7-8-2 Lub. of spindle bearings	7-21
7-8-3 Maintenance of electric intermittent pump.....	7-22
7-8-4 Lubrication cahrt.....	7-23
7-8-5 Truble shooting.....	7-24 ~ 7-25

CHAPTER 8 PARTS LIST

8-1 Part assemblies check list.....	8-1
8-2 Lists and drawing	A-1 ~ G-2
Taiwan arm drive can unit	1 ~ 14